

ARCTIC CAT[®]

SHARE OUR PASSION.[™]

Illustrated Parts Manual



Z[®] 570

Model Number S2007ZADFCUSO
Model Number S2007ZADLXUSO (LX)

7002

TABLE OF CONTENTS

2007 Z 570

(Model No. S2007ZADFCUSO)

(Model No. S2007ZADLXUSO - LX)


SKI AND SPINDLE ASSEMBLY	1
A-ARM ASSEMBLY	2
SHOCK ABSORBER AND SWAY BAR ASSEMBLY	3
STEERING POST ASSEMBLY	4
TIE ROD ASSEMBLY	5
HANDLEBAR AND CONTROLS	6
HYDRAULIC BRAKE CONTROL ASSEMBLY	7
DRIVE TRAIN SHAFTS AND BRAKE ASSEMBLIES	8
DRIVE/DROPCASE ASSEMBLY	9
DRIVE/REVERSE DROPCASE ASSEMBLY (LX)	10
DROPCASE AND CHAIN TENSION ASSEMBLY (LX)	11
REVERSE SHIFT LEVER ASSEMBLY (LX)	12
SLIDE RAIL AND TRACK ASSEMBLY	13
IDLER WHEEL ASSEMBLY	14
REAR SUSPENSION FRONT ARM ASSEMBLY	15
REAR SUSPENSION REAR ARM ASSEMBLY	16
FRONT FRAME AND FOOTREST ASSEMBLY	17
HOOD AND WINDSHIELD ASSEMBLY	18
HEADLIGHT, INSTRUMENTS, AND WIRING ASSEMBLIES	19
HEADLIGHT, INSTRUMENTS, AND WIRING ASSEMBLIES (LX)	20
CONSOLE AND SWITCH ASSEMBLY	21
BELLY PAN AND FRONT BUMPER ASSEMBLY	22
BELT GUARD ASSEMBLY	23
GAS TANK, SEAT, AND TAILLIGHT ASSEMBLY	24
TUNNEL AND REAR BUMPER	25
TUNNEL AND REAR BUMPER (LX)	26
ENGINE AND RELATED PARTS	27
EXHAUST ASSEMBLY	28
FLEX-DRIVE STARTER MOTOR ASSEMBLY (LX)	29
BATTERY, SOLENOID, AND CABLES (LX)	30
CARBURETOR AND FUEL PUMP ASSEMBLY	31
AIR SILENCER ASSEMBLY	32
OIL TANK ASSEMBLY	33
DRIVE CLUTCH	34
DRIVEN CLUTCH	35
CARBURETOR	36
CRANKCASE AND CYLINDER	37
PISTON AND CRANKSHAFT	38
INTAKE ASSEMBLY	39
REED VALVE ASSEMBLY	40
OIL PUMP	41
CYLINDER COWLING ASSEMBLY	42
RECOIL STARTER	43
MAGNETO	44
ELECTRICAL	45
DRIVE/REVERSE DROPCASE ASSEMBLY (Optional)	46
DROPCASE CHAIN TENSION ASSEMBLY (Optional)	47
REVERSE SHIFT LEVER ASSEMBLY (Optional)	48
ALTERNATE CARBURETOR PARTS	49
RELATED ITEMS	Back Cover

■ **NOTE:** The illustrations used in this Parts Manual are for reference to replacement part numbers only and are not to be used for assembly. For assembly procedures, use an Arctic Cat Service Manual. Underlined part numbers are new for the 2007 model year.

2006 Arctic Cat Inc.

Printed September 2006


®™ Trademarks of Arctic Cat Inc., Thief River Falls, MN 56701

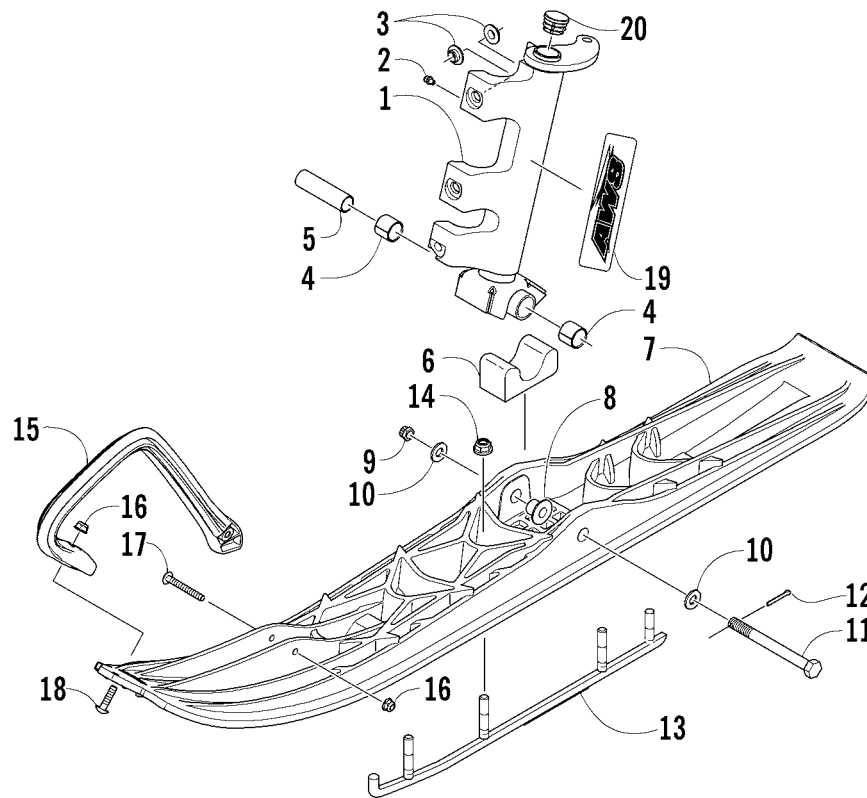

SKI AND SPINDLE ASSEMBLY

0741-543


Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	2703-006	1	Spindle, Steering - Right - Black (inc. 2-4)	11	0623-776	2	Screw, Cap
	2703-007	1	Spindle, Steering - Left - Black (inc. 2-4)	12	0123-458	2	Pin, Cotter
2	1623-010	2	● Fitting, Grease	13	0703-871	2	Wearbar
3	0603-647	8	● Insert, Spindle	14	8047-486	8	Nut, Lock
4	0603-158	4	● Bearing	15	2603-598	2	Handle, Plastic Ski - Black
5	2603-548	2	Axle, Spindle	16	8047-366	4	Nut, Lock
6	0603-036	2	Damper, Ski	17	8017-587	2	Screw, Machine
7	2603-599	2	Ski - Black	18	8017-582	2	Screw, Machine
8	2603-397	4	Insert, Ski	19	<u>7611-314</u>	1	Decal, "AWS" - Spindle - Right
9	0123-296	2	Nut, Lock		<u>7611-315</u>	1	Decal, "AWS" - Spindle - Left
10	0623-728	4	Washer	20	0623-831	2	Cap, Spindle

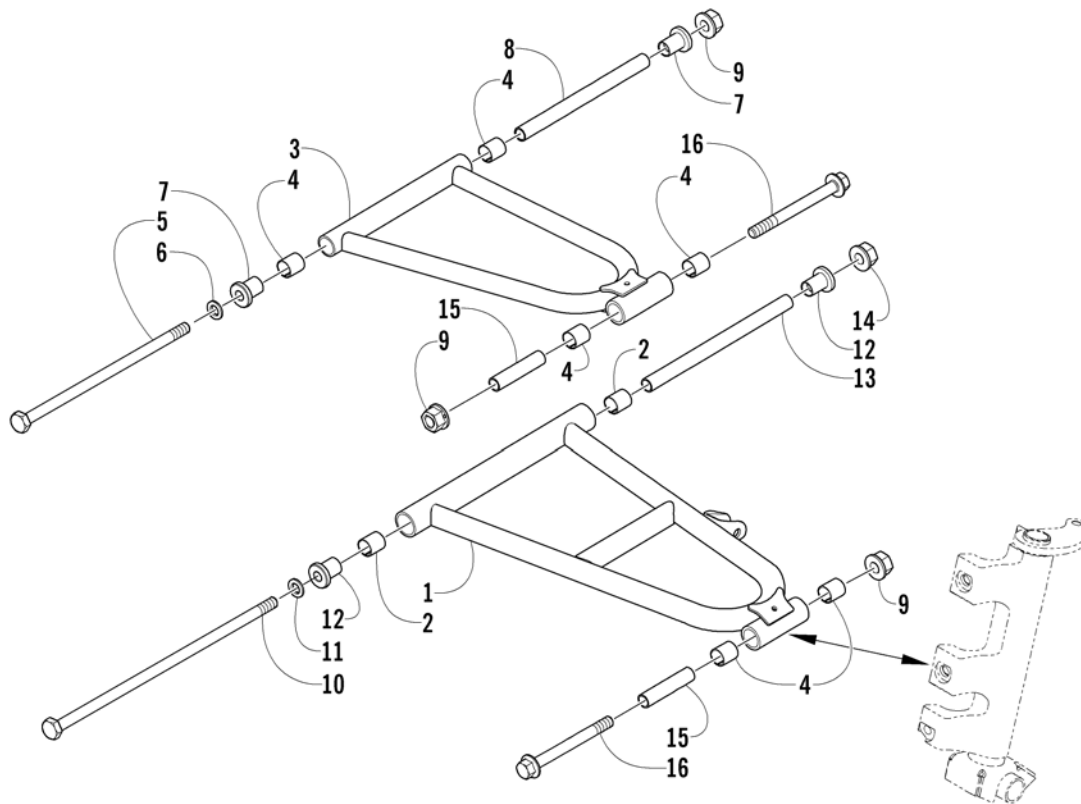

A-ARM ASSEMBLY

0738-350


Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	0703-930	1	Arm, Lower - Right - Platinum (inc. 2 and two No. 4)	8	0603-692	2	Tube, Axle
	0703-931	1	Arm, Lower - Left - Platinum (inc. 2 and two No. 4)	9	8047-486	6	Nut, Lock
2	0603-158	4	● Bearing	10	0623-508	2	Screw, Cap
3	0703-932	2	Arm, Upper - Platinum (inc. four No. 4)	11	0623-663	2	Washer
4	0603-083	12	● Bearing	12	1603-397	4	Axle, Non-Serrated
5	0623-509	2	Screw, Cap	13	0603-693	2	Tube, Axle
6	0623-664	2	Washer	14	8047-546	2	Nut, Lock
7	1603-244	4	Axle, Powder Metal	15	0603-830	4	Axle, Spindle Mount
				16	8026-234	4	Screw, Cap

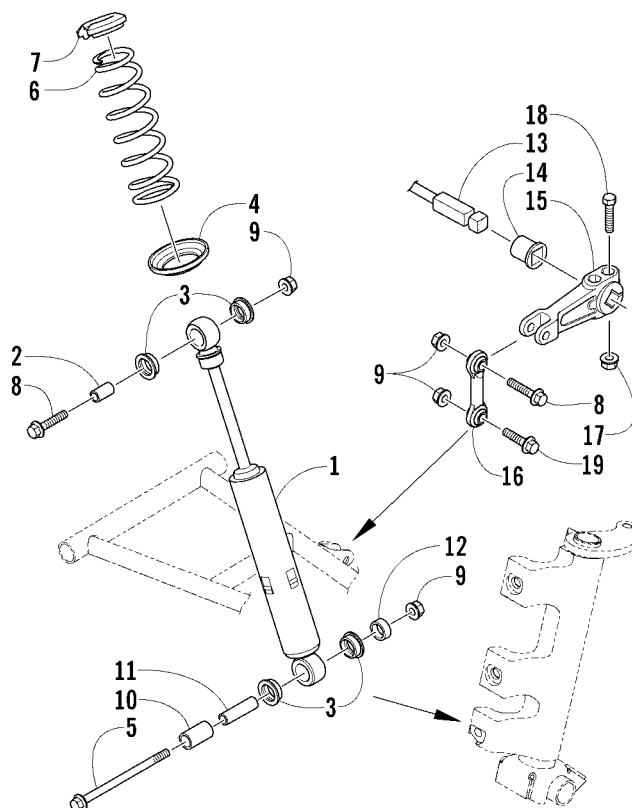

SHOCK ABSORBER AND SWAY BAR ASSEMBLY

0741-846


Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	1603-253	2	Shock, Front Suspension (inc. 2-3)	11	1604-184	2	Sleeve, Shock
2	0604-309	2	● Sleeve, Shock	12	0603-855	2	Spacer, Shock
3	0604-310	8	● Bushing, Shock	13	1703-618	1	Sway Bar
4	<u>2703-187</u>	2	Retainer, Spring - Shock	14	0603-151	2	Bearing, Sway Bar
5	8020-234	2	Screw, Cap	15	2603-307	2	Arm, Sway Bar
6	1703-858	2	Spring, Compression - Orange	16	1603-002	2	Link, Sway Bar
7	1603-889	2	Retainer, Spring	17	8047-426	4	Nut, Lock
8	8020-226	4	Screw, Cap	18	8002-137	4	Screw, Cap
9	8047-486	8	Nut, Lock	19	8020-225	2	Screw, Cap
10	0603-854	2	Spacer, Shock				

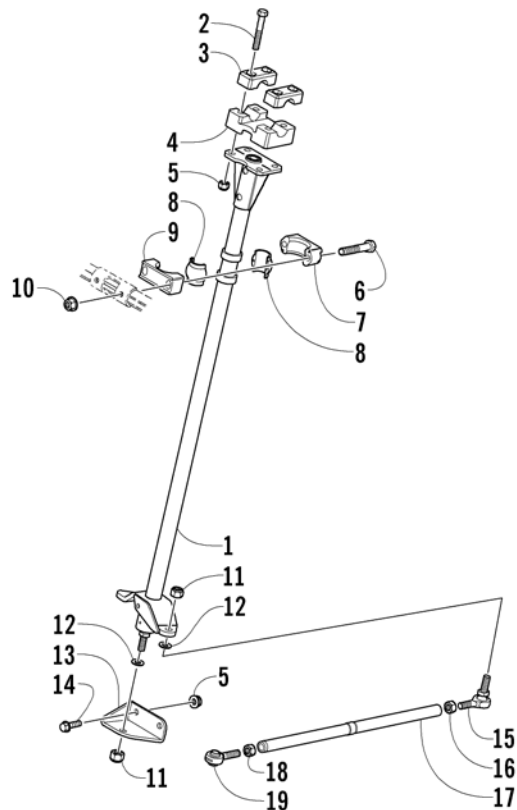

STEERING POST ASSEMBLY

0738-352


Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	0705-837	1	Post, Steering	11	0623-025	2	Nut, Lock
2	8002-138	4	Screw, Cap	12	0623-044	2	Washer
3	0605-506	2	Cap, Adjusting Block	13	0705-407	1	Plate, Backing
4	0605-507	1	Block, Adjusting	14	8020-130	2	Screw, Cap
5	8047-426	6	Nut, Lock	15	0605-423	1	Ball Joint, Steering - Left-Hand Thread
6	0623-814	2	Screw, Cap	16	0123-917	1	Nut, Hex - Left-Hand Thread
7	0605-406	1	Cap, Bearing Housing	17	0605-626	1	Tube, Tie Rod
8	0405-020	2	Bearing, Half	18	0623-294	1	Nut, Hex - Right-Hand Thread
9	0605-147	1	Housing, Bearing	19	0605-504	1	Ball Joint, Tie Rod - Right-Hand Thread
10	8047-366	2	Nut, Lock				

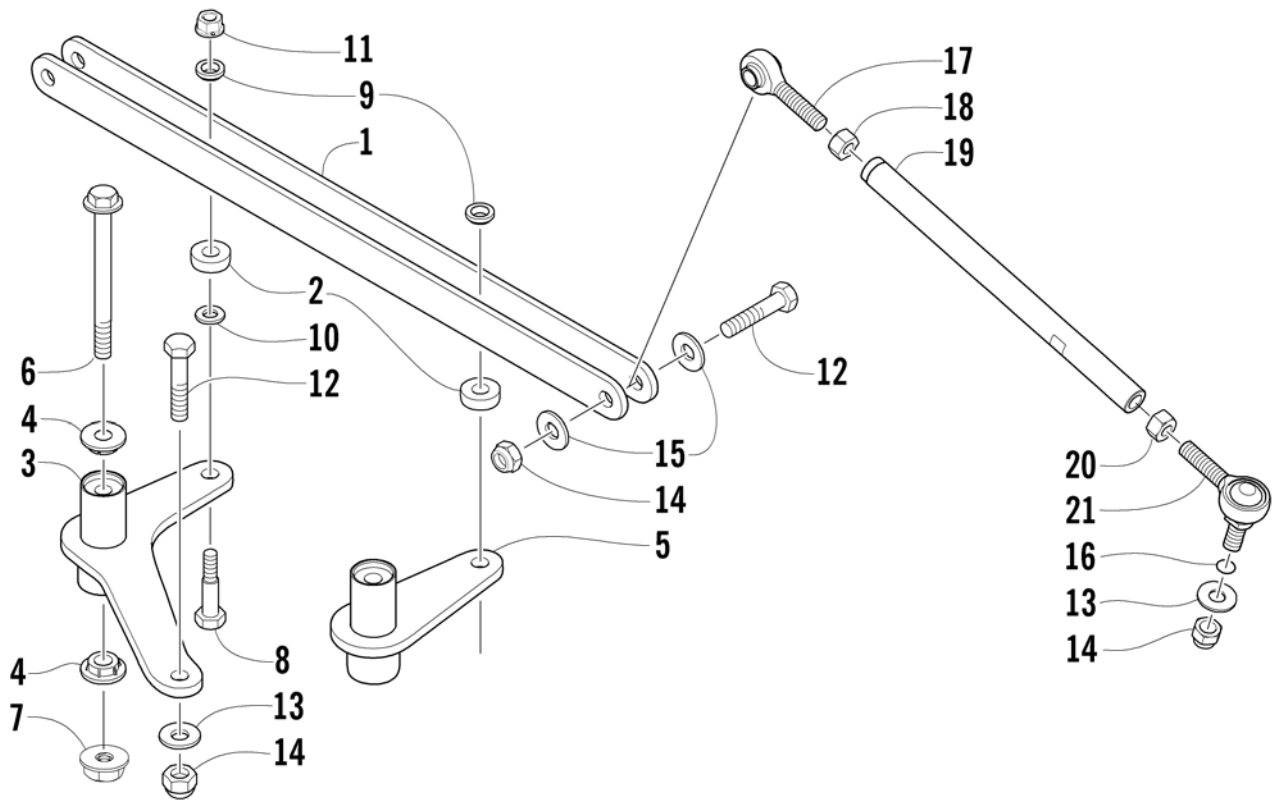

TIE ROD ASSEMBLY

0738-354


Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	0705-370	1	Drag Link (inc. 2)	12	8004-226	3	Screw, Cap
2	0605-541	2	● Bearing	13	0623-044	3	Washer
3	1705-058	1	Arm, Steering - Assembly	14	0623-025	5	Nut, Lock
4	0605-540	4	Insert	15	8050-277	4	Washer
5	1705-060	1	Arm, Steering - Idler - Assembly	16	0605-014	2	O-Ring
6	8020-234	2	Screw, Cap	17	0605-504	2	Ball Joint, Tie Rod - Right-Hand Thread
7	8047-486	2	Nut, Lock	18	0623-294	2	Nut, Hex - Right-Hand Thread
8	0623-920	2	Screw, Cap	19	0605-312	2	Tube, Tie Rod - Spindle
9	0605-522	2	Axle, Drag Link	20	0123-917	2	Nut, Hex - Left-Hand Thread
10	0623-439	2	Washer	21	0605-511	2	Ball Joint, Steering - Left-Hand Thread
11	8047-426	2	Nut, Lock				

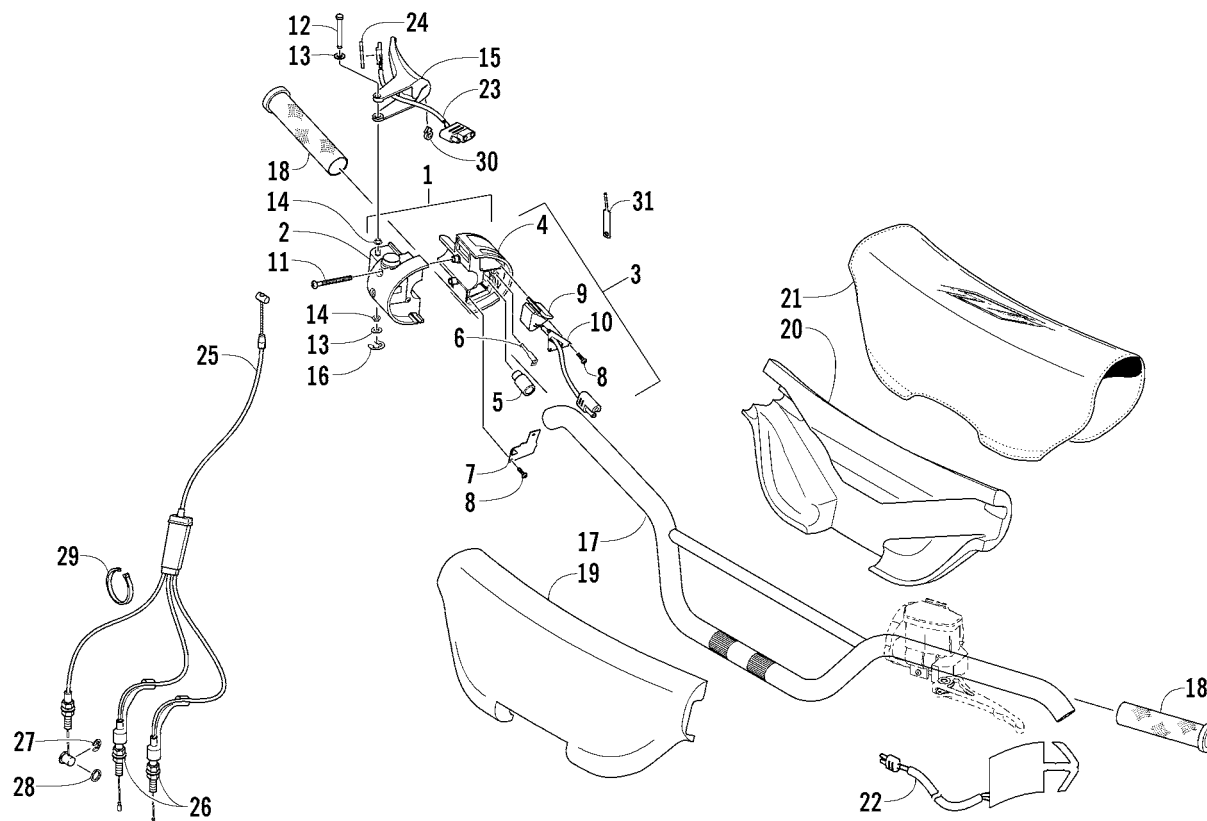

HANDLEBAR AND CONTROLS

0740-396


Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	0609-483	1	Control, Throttle (High/Low) (inc. 2-10)	15	0609-363	1	Lever, Throttle
2	0609-493	1	● Control, Throttle - Stop Switch Half	16	0609-040	1	Ring, Retaining
3	0609-499	1	● Control, Throttle - Thumbwarmer Assembly (High/Low) (inc. 4-10 and two No. 8)	17	0705-971	1	Handlebar
4	0609-494	1	●● Control, Throttle - Thumbwarmer Half (High/Low) w/o Components	18	<u>4606-945</u>	2	Grip, Handlebar
5	0609-497	1	●● Plug, Rubber	19	0605-354	1	Pad, Handlebar - Front
6	0609-498	1	●● Clip, Retaining - Throttle Cable	20	0605-353	1	Pad, Handlebar - Rear
7	0609-496	1	●● Plate, Cover	21	0605-683	1	Wrap, Handlebar Pad
8	0609-312	7	●● Screw, Self-Tapping	22	0609-730	1	Element, Handwarmer - Right
9	0609-384	1	●● Switch, Thumbwarmer Assembly (High/Low) (inc. three No. 8 and 10)		0609-731	1	Element, Handwarmer - Left
10	0609-378	1	●●● Plate, Cover	23	0609-685	1	Element, Thumbwarmer
11	0609-492	2	Screw, Machine	24	0617-248	1	Pad, Insulator
12	0609-317	1	Axle, Lever - Throttle	25	0687-183	1	Cable, Throttle (inc. 26)
13	0609-036	2	Washer	26	0623-464	2	● Nut, Locking - Throttle Cable
14	0609-501	2	Washer, Shoulder - Throttle	27	0124-057	1	E-Ring
				28	0124-056	1	Washer
				29	0123-788	AR	Cable Tie - 8 in.
				30	0623-262	1	Clip, Wire
				31	1639-963	1	Tool, Removal - Kit - Throttle Cable

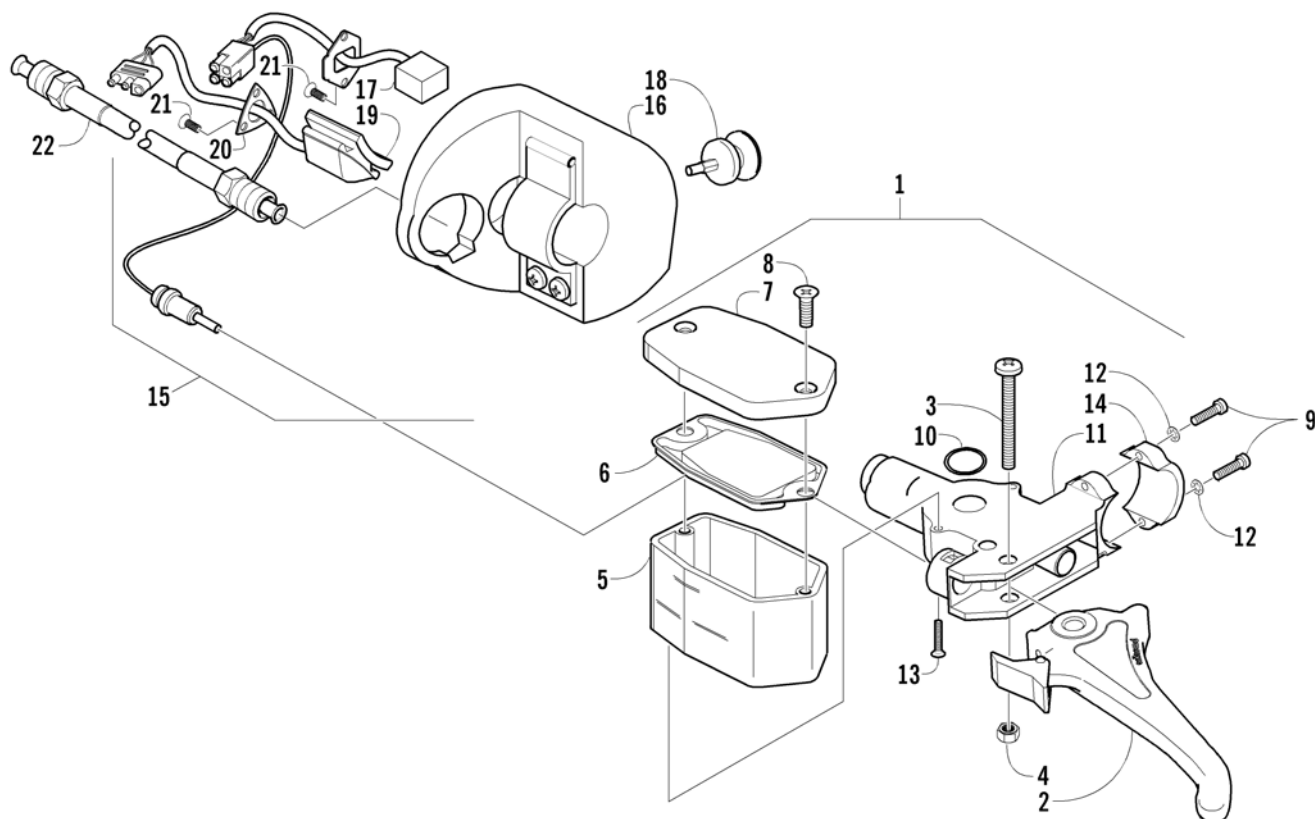

HYDRAULIC BRAKE CONTROL ASSEMBLY

0737-603 *Not a Service Part **Not Illustrated


Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	0602-943	1	Brake Assembly (inc. 2-14)	13	0623-432	2	● Screw, Master Cylinder Mounting
2	1602-740	1	● Lever, Brake	14	0602-907	1	● Clamp, Master Cylinder
3	0623-430	1	● Screw, Lever Mounting	**	<u>0436-908</u>	AR	Fluid, Brake - High Temperature - 12 oz
4	0623-056	1	● Nut, Lock	15	0609-407	1	Control, Dimmer - Assembly (inc. 16-21)
5	0602-740	1	● Reservoir	16	0609-480	1	● Housing, Dimmer Control
6	0602-741	1	● Gasket, Cover	17	0609-267	1	● Switch, Dimmer and Brake - Assembly
7	0602-742	1	● Cover, Reservoir	18	0609-474	1	● Knob, Dimmer Switch
8	0623-506	2	● Screw, Cover	19	0609-385	1	● Switch, HI/LO Handwarmer - Assembly (inc. 20 and three No. 21)
9	0623-613	2	● Screw, Machine	20	0609-378	1	● Plate, Cover
10	0602-587	1	● O-Ring	21	0609-312	7	● Screw, Self-Tapping
11	*	1	● Master Cylinder	22	1602-488	1	Brakeline, Hydraulic
12	8052-212	2	● Washer, Lock - Internal Tooth				

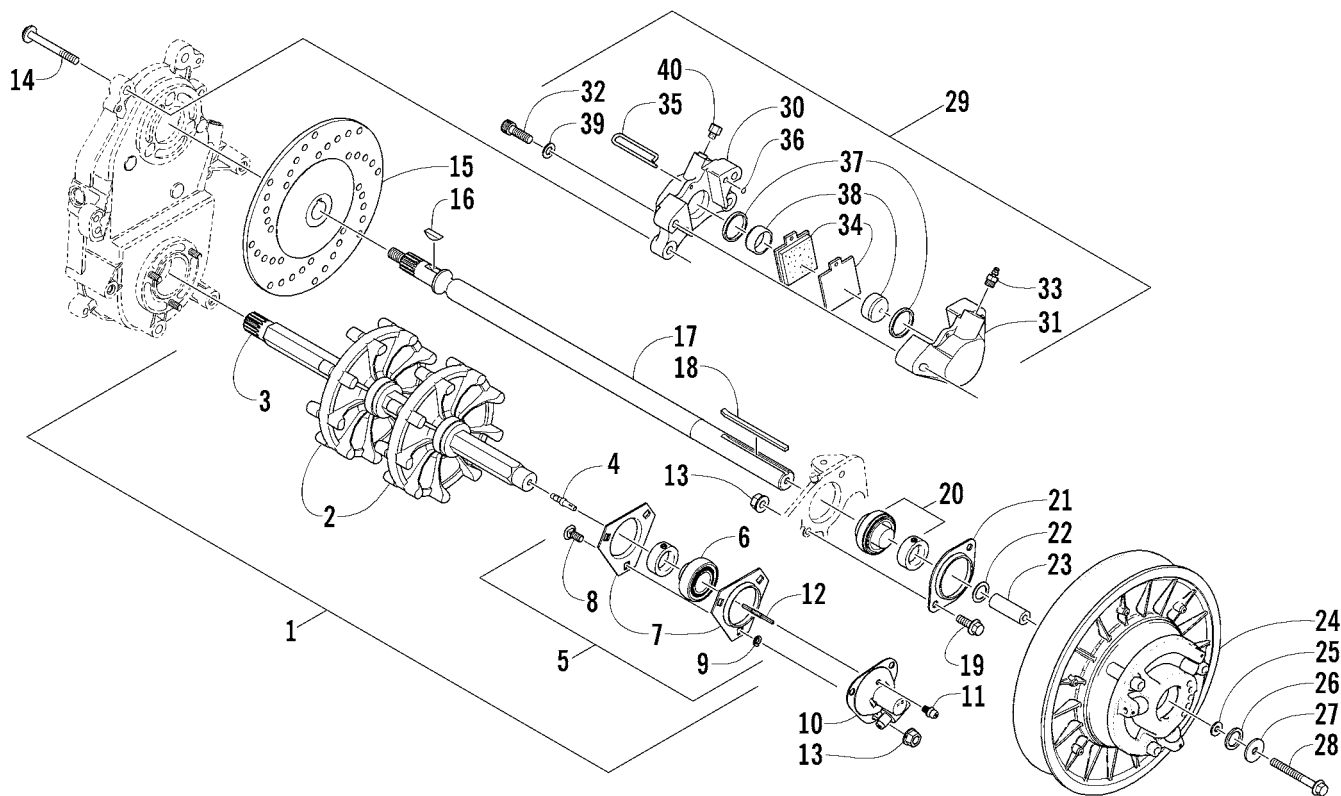

DRIVE TRAIN SHAFTS AND BRAKE ASSEMBLIES

0741-868 *Not a Service Part


Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	0728-146	1	Track Drive Assembly (inc. 2-9)	21	0602-892	1	Plate, Flange
2	1602-507	2	● Sprocket, Drive - 9T	22	0623-118	AR	Washer
3	1602-852	1	● Driveshaft	23	0623-119	AR	Washer
4	0120-247	1	● Bushing, Drive	24	0648-066	1	Shaft, Stub
5	0702-567	1	● Plate, Flange - Bearing Assembly (inc. 6-9)	25	<u>0726-243</u>	1	Clutch, Driven
6	1602-374	1	● ● Bearing, 1 in.	26	0123-053	AR	Washer
7	0602-198	2	● ● Plate, Flange	27	0123-578	AR	Washer
8	8011-130	3	● ● Bolt, Carriage	28	0123-019	1	Washer
9	0623-810	3	● ● Ring, Solder	29	<u>1623-552</u>	1	Screw, Cap
10	0720-005	1	Adapter, Drive (inc. 11)	30	0602-829	1	Caliper, Brake - Assembly (inc. 30-40)
11	0104-062	1	● Fitting, Grease	31	*	1	● Housing
12	0602-154	1	Cable, Adapter	32	*	1	● Housing
13	8047-426	5	Nut, Lock	33	8005-677	2	● Screw, Cap
14	8020-315	2	Screw, Cap	34	0602-707	1	● Screw, Bleed - Assembly
15	1602-205	1	Disc, Brake	35	0702-229	1	● Pad, Brake - Set (inc. 35)
16	0602-598	1	Key	36	0602-706	1	● ● Pin, Retaining
17	0702-266	1	Shaft, Driven	37	0602-729	1	● O-Ring, Housing
18	0101-076	1	Key	38	0602-583	2	● O-Ring
19	8020-132	2	Screw, Cap	39	0602-708	2	● Piston
20	1602-099	1	Bearing, 1 in. w/Lock Collar - Re-Lubricative	40	8050-272	2	● Washer
					0602-590	1	● Fitting, Adapter

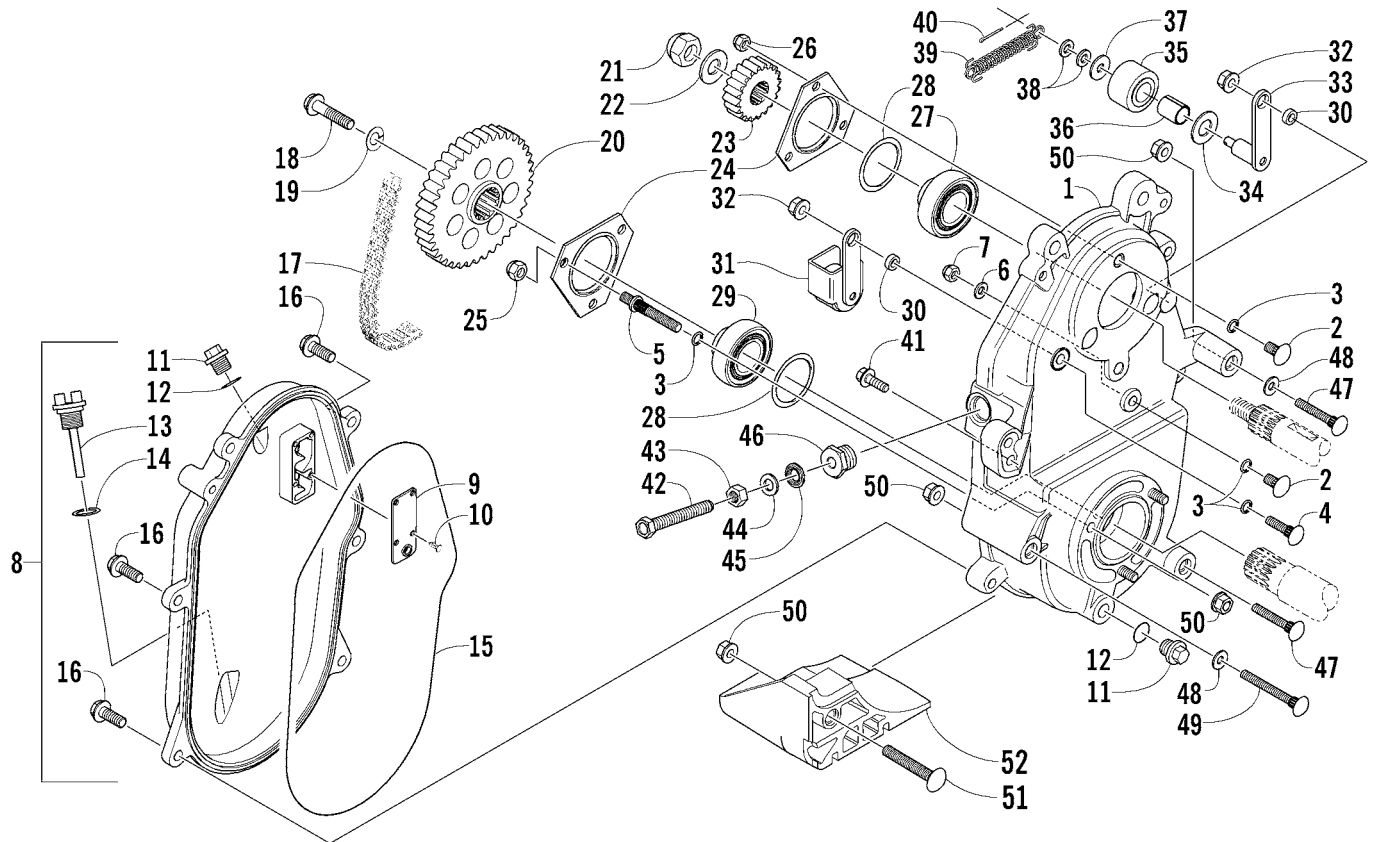

DRIVE/DROPCASE ASSEMBLY

0741-870

Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	0702-421	1	Dropcase w/Studs (inc. 2-7)	27	<u>1602-973</u>	1	Bearing, 7/8 in.
2	0123-523	4	● Bolt, Ribbed	28	0107-003	2	O-Ring
3	0607-025	9	● O-Ring, Stud	29	<u>1602-972</u>	1	Bearing, 1 in.
4	0623-117	2	● Bolt, Ribbed	30	0602-369	2	Bushing, Tightener Arm
5	0623-317	3	● Stud	31	0702-324	1	Arm, Tightener - Assembly
6	0623-094	1	● Washer	32	8047-366	2	Nut, Lock
7	8042-426	1	● Nut	33	0702-115	1	Arm, Tightener
8	7996-258	1	Cover, Dropcase - Assembly (inc. 9-10 and one No. 11-12)	34	0623-283	1	Washer
9	1602-152	1	● Cover, Oil Vent	35	0702-129	1	Roller, Tightener (inc. 36)
10	0623-081	4	● Screw, Self-Tapping	36	0602-383	1	● Bearing, Chain Tightener
11	0623-293	2	● Plug, Dropcase	37	0623-284	1	Washer
12	1602-213	2	● O-Ring	38	8050-212	2	Washer
13	0602-462	1	Stick, Oil Level	39	0702-130	1	Spring Assembly
14	0670-183	1	O-Ring, Oil Level Stick	40	0123-082	2	Pin, Cotter
15	0602-437	1	Seal, Dropcase	41	8020-135	1	Screw, Cap
16	8020-134	6	Screw, Cap	42	1602-101	1	Adjuster, Chain
17	1602-041	1	Chain - 70P	43	0123-150	1	Nut
18	1623-427	1	Screw, Cap	44	8050-272	1	Washer
19	1623-038	1	Washer, Spring	45	0623-905	1	Seal, Adjuster Screw
20	0602-451	1	Sprocket - 39T	46	0602-876	1	Adapter, Manual Adjust
21	0623-465	1	Nut, Lock	47	8011-139	2	Bolt, Carriage
22	0623-231	1	Washer, Spring	48	8050-247	AR	Washer
23	0602-444	1	Sprocket - 19T	49	8011-143	1	Bolt, Carriage
24	1602-521	2	Plate, Flange	50	8047-426	7	Nut, Lock
25	8040-426	3	Nut, Lock	51	8011-135	1	Bolt, Carriage
26	8041-426	3	Nut, Lock	52	0616-964	1	Guard, Dropcase

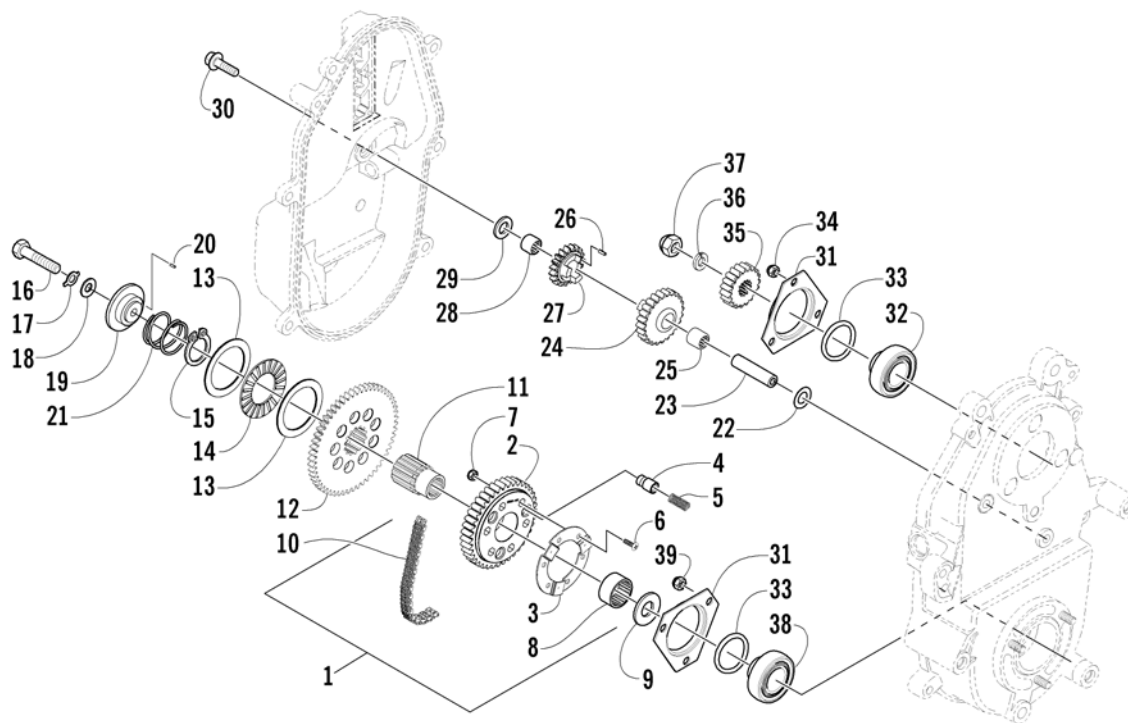


DRIVE/REVERSE DROPCASE ASSEMBLY (LX)

(For Optional Kit, See Page 46)

0738-421 *Not a Service Part


Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	0702-170	1	Sprocket Assembly - 39T (inc. 2-8)	21	0602-028	1	Spring, Return
2	*	1	● Sprocket	22	0602-215	1	Spacer, Reverse Idler
3	0602-144	1	● Retainer, Spring	23	0602-094	1	Shaft, Reverse
4	0602-133	3	● Pin, Slip	24	0702-260	1	Idler, Reverse - Assembly - 24T (inc. 25)
5	0602-138	3	● Spring, Compression	25	0602-018	1	● Bearing
6	0623-182	6	● Screw, Cap	26	0602-366	1	Aligner, Idler - Pin
7	0123-430	6	● Nut, Lock	27	0702-366	1	Idler, Reverse - Assembly - 19T (inc. 28)
8	0602-016	1	● Bearing	28	1602-045	1	● Bearing
9	0602-012	1	Spacer, Shaft	29	1602-044	1	Washer, Thrust
10	1602-041	1	Chain - 70P	30	1623-561	1	Screw, Cap
11	1602-048	1	Extension, Driveshaft	31	1602-521	2	Plate, Flange
12	0702-048	1	Gear, Reverse - 55T (inc. 13-15)	32	<u>1602-973</u>	1	Bearing, 7/8 in.
13	0602-023	2	● Washer, Thrust	33	0107-003	2	O-Ring
14	0602-022	1	● Bearing, Thrust	34	8041-426	3	Nut, Lock
15	0602-024	1	● Ring, Retaining	35	0602-444	1	Sprocket - 19T
16	<u>1623-559</u>	1	Screw, Cap	36	0623-231	1	Washer, Spring
17	1602-046	1	Washer, Tab Lock	37	0623-465	1	Nut, Lock
18	8050-272	1	Washer	38	<u>1602-972</u>	1	Bearing, 1 in.
19	0702-372	1	Retainer, Shaft (inc. 20)	39	8040-426	3	Nut, Lock
20	8070-153	1	● Pin, Spring				

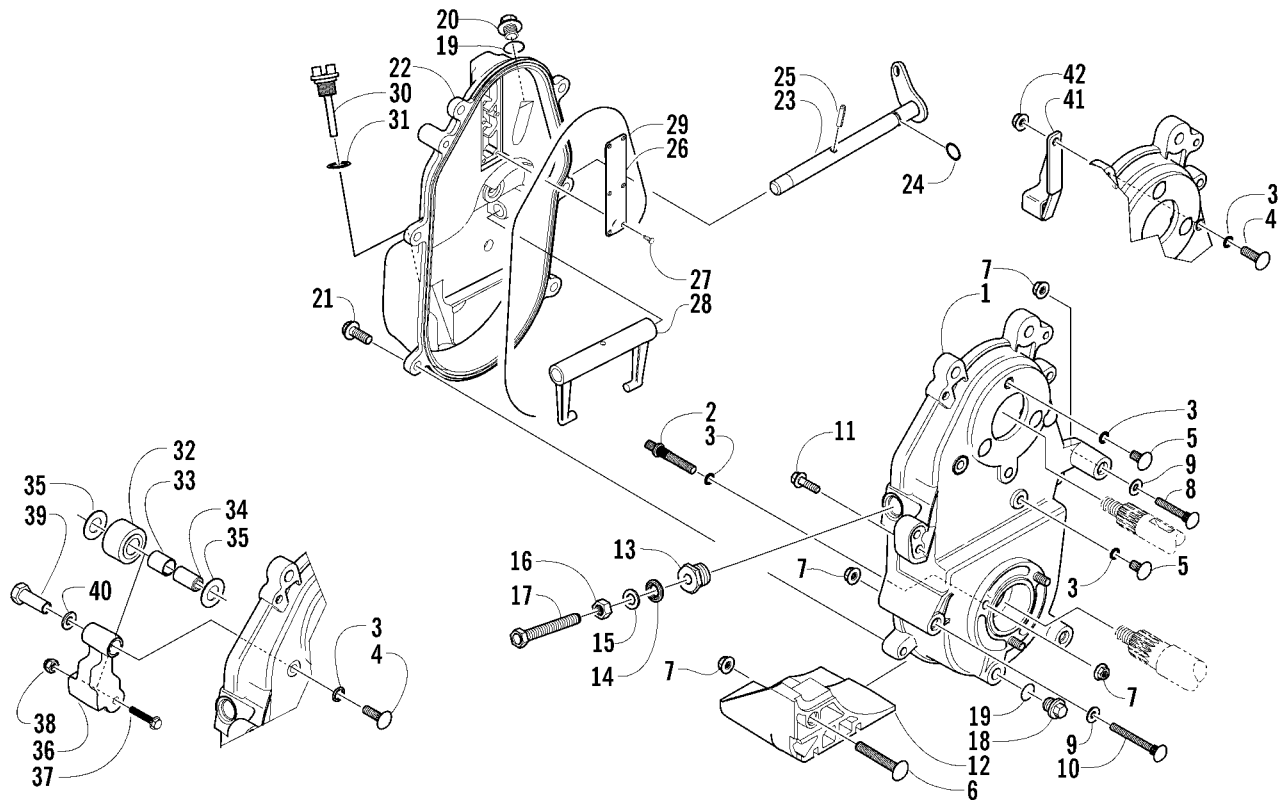

DROPCASE AND CHAIN TENSION ASSEMBLY (LX)

0740-397


Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	0702-421	1	Dropcase w/Studs (inc. 2-5)	22	1602-219	1	Cover, Dropcase
2	0623-317	3	● Stud, Ribbed	23	0702-350	1	Shaft, Shift Fork
3	0607-025	9	● O-Ring, Stud	24	0602-021	1	Seal, O-Ring
4	0623-117	2	● Bolt, Ribbed	25	0623-542	1	Pin, Spring
5	0123-523	4	● Bolt, Ribbed	26	1602-151	1	Cover, Oil Vent
6	8011-135	1	Bolt, Carriage	27	0623-081	6	Screw, Self-Tapping
7	8047-426	7	Nut, Lock	28	0602-085	1	Fork, Shift
8	8011-139	2	Bolt, Carriage	29	0602-437	1	Seal, Dropcase
9	8050-247	AR	Washer	30	0602-483	1	Stick, Oil Level
10	8011-143	1	Bolt, Carriage	31	0670-183	1	O-Ring, Oil Level Stick
11	8020-135	1	Screw, Cap	32	0702-129	1	Roller, Chain Tightener (inc. 33)
12	0616-964	1	Guard, Dropcase	33	0602-383	1	● Bearing, Chain Tightener
13	0602-876	1	Adapter, Manual Adjust	34	0602-676	1	Shaft, Chain Roller
14	0623-905	1	Seal, Chain Adjuster	35	0623-525	2	Washer
15	8050-272	1	Washer	36	0602-675	1	Arm, Chain Roller
16	0123-150	1	Nut	37	8002-045	1	Screw, Cap
17	1602-101	1	Adjuster, Chain	38	0623-122	1	Nut, Lock
18	0602-479	1	Plug, Drain - Magnetic	39	0602-681	1	Nut, Roller Arm
19	1602-213	3	O-Ring	40	8050-222	1	Washer
20	0623-293	2	Plug, Drain	41	0702-553	1	Bracket, Chain Backing
21	8020-134	5	Screw, Cap	42	8048-366	1	Nut, Lock

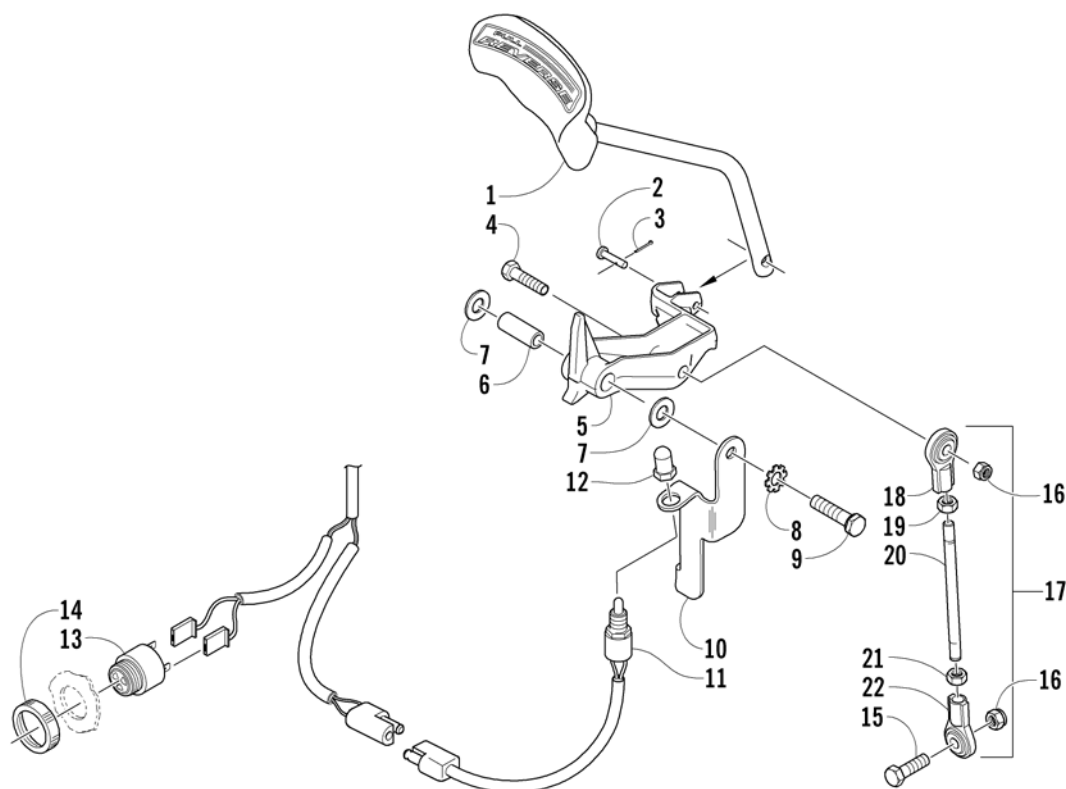

REVERSE SHIFT LEVER ASSEMBLY (LX)

0739-453 *Not a Service Part

Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	0602-978	1	Lever	12	0630-013	1	Boot, Switch
2	0623-641	1	Pin, Clevis	13	0630-010	1	Alarm, Reverse (inc. 14)
3	0117-868	1	Pin, Cotter	14	0630-017	1	● Ring, Retaining
4	8002-137	1	Screw, Cap	15	8002-132	1	Screw, Cap
5	0702-743	1	Shift Pivot	16	8040-426	2	Nut, Lock
6	1602-830	1	Axle	17	0702-347	1	Linkage, Shifting - Assembly (inc. 18-22)
7	8050-247	2	Washer	18	0602-305	1	● Rod End - Left
8	8053-242	1	Washer, Lock - External Tooth	19	0623-260	1	● Nut, Jam - Left
9	8002-140	1	Screw, Cap	20	*	1	● Rod, Linkage
10	0702-465	1	Bracket, Reverse Switch	21	0123-144	1	● Nut, Jam - Right
11	0630-011	1	Switch, Alarm	22	0602-322	1	● Rod End - Right

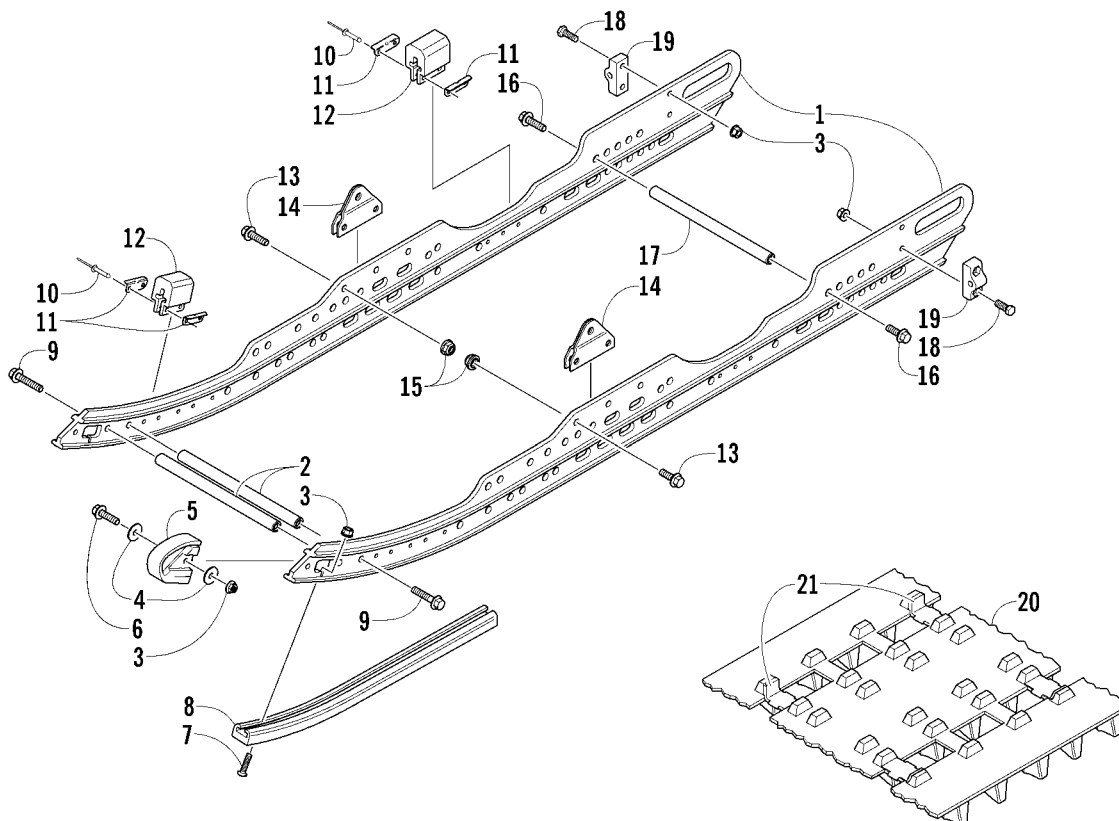


SLIDE RAIL AND TRACK ASSEMBLY

(Complete Skid Frame Assembly p/n 7999-242)

0739-432


Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	1604-598	2	Rail, Formed	12	0604-918	4	Pad, Shock
2	0604-426	2	Support, Rail	13	8020-132	4	Screw, Cap
3	8047-366	8	Nut, Lock	14	0704-395	2	Bracket, Mounting - Front Arm
4	8050-217	4	Washer	15	8047-426	4	Nut, Lock
5	2604-842	2	End Cap, Slide Rail	16	1623-248	2	Screw, Cap
6	8002-043	2	Screw, Cap	17	0604-930	1	Axle, Aluminum
7	0123-859	2	Screw, Machine	18	8002-042	4	Screw, Cap
8	0604-786	2	Wearstrip, Slide Rail - Black	19	0704-352	2	Adjuster, Track
9	<u>1623-502</u>	4	Screw, Cap	20	1602-756	1	Track Assembly (inc. 21)
10	8060-633	8	Rivet	21	1602-899	32	● Clip, Wear w/Guide
11	0604-967	8	Bracket, Retaining				

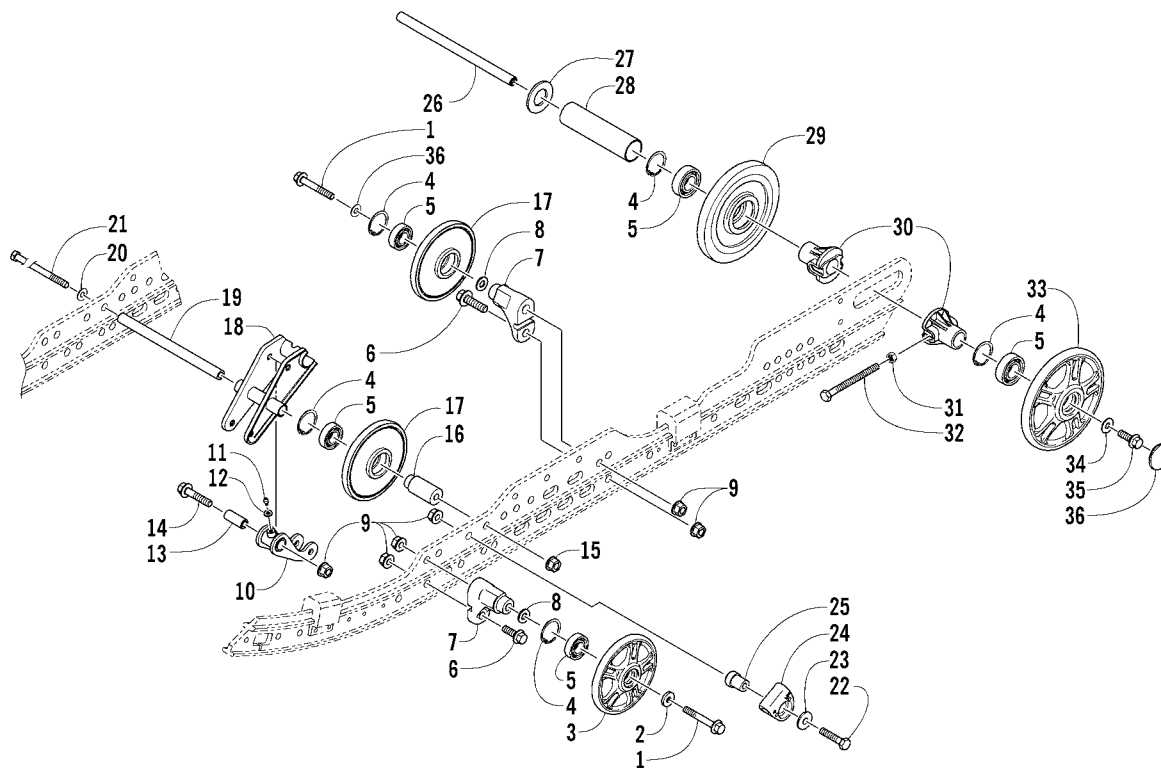

IDLER WHEEL ASSEMBLY

0741-548


Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	8020-232	4	Screw, Cap	19	2604-737	1	Axle, Steel
2	8050-282	2	Washer	20	0623-044	1	Washer
3	3604-048	2	Wheel, Idler - Orange (inc. 4-5)	21	1623-037	1	Screw, Cap
4	0623-946	9	● Ring, Retaining	22	8002-229	2	Screw, Cap
5	3604-033	9	● Bearing	23	8050-282	2	Washer
6	8020-224	4	Screw, Cap	24	2604-516	2	Slide, Spring
7	2604-579	4	Block, Mounting - Idler Wheel	25	2604-378	2	Block, Slide
8	1604-187	4	Washer	26	2604-283	1	Axle, Rear Wheel
9	8047-486	11	Nut, Lock	27	0623-921	1	Washer
10	1704-272	1	Pivot, Rear Shock (inc. 11-12)	28	1604-940	1	Spacer, Rear Wheel
11	1623-010	1	● Fitting, Grease	29	3604-049	1	Wheel, Idler - Black (inc. 4-5)
12	1623-011	1	● Washer, Grease Fitting	30	1704-489	3	Bushing, Adjuster
13	1604-329	1	Axle, Shock Pivot	31	8042-486	2	Nut
14	8020-228	1	Screw, Cap	32	0623-123	2	Screw, Cap
15	8047-490	1	Nut, Lock	33	3604-054	2	Wheel, Idler - Orange (inc. 4-5)
16	2604-964	2	Block, Mounting - Idler Wheel	34	0623-664	4	Washer
17	3604-039	4	Wheel, Idler - Black (inc. 4-5)	35	1623-248	2	Screw, Cap
18	1704-235	1	Bracket, Mounting - Front Arm Shock	36	1604-952	2	Cap, Idler Wheel

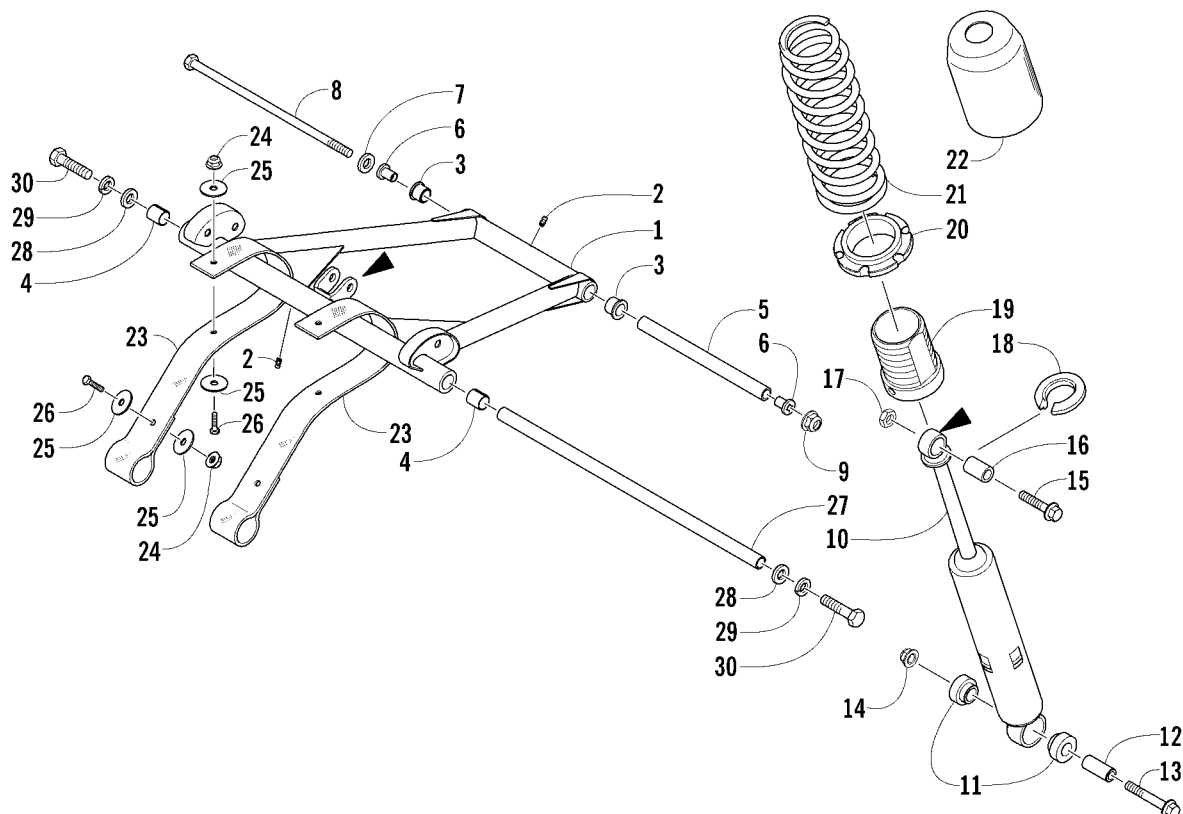

REAR SUSPENSION FRONT ARM ASSEMBLY

0740-901


Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	1704-335	1	Arm, Front Suspension (inc. 2-4)	16	1603-531	1	Axle, Shock - Front Arm
2	1623-010	2	● Fitting, Grease	17	8041-486	1	Nut, Lock
3	0104-386	2	● Bushing, Front Arm	18	1603-889	1	Retainer, Spring
4	0603-083	2	● Bearing	19	0603-147	1	Sleeve, Threaded
5	2604-963	1	Tube, Axle	20	0603-259	1	Nut, Retainer - Spring
6	2603-497	2	Bushing, Front Arm	21	1603-018	1	Spring, Compression
7	0623-664	1	Washer	22	0604-590	1	Cover, Shock
8	1623-037	1	Screw, Cap	23	2604-305	2	Strap, Limiter
9	8047-490	1	Nut, Lock	24	8047-366	4	Nut, Lock
10	1604-995	1	Shock Absorber, Front Arm	25	0623-184	8	Washer
11	1604-384	2	Bushing, Shock	26	8002-043	4	Screw, Cap
12	1604-329	1	Axle, Pivot - Shock	27	0114-163	1	Axle, Inner Carriage
13	8020-228	1	Screw, Cap	28	0623-044	2	Washer
14	8047-486	1	Nut, Lock	29	8051-277	2	Washer, Lock
15	8020-226	1	Screw, Cap	30	8002-224	2	Screw, Cap

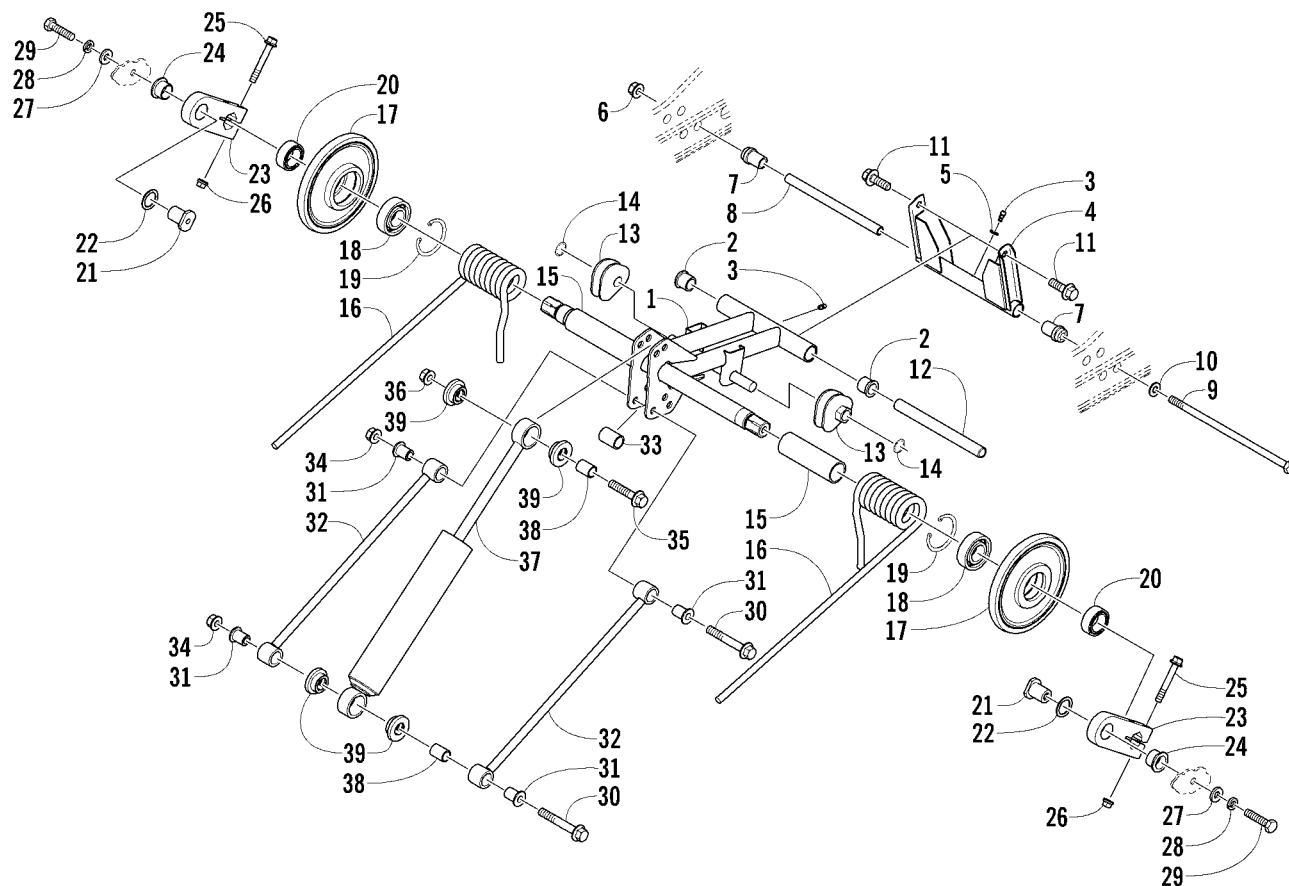

REAR SUSPENSION REAR ARM ASSEMBLY

0741-759


Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	1704-508	1	Arm, Idler (inc. 2 and one No. 3)	20	1604-507	2	Spacer, Pivot Idler Arm
2	1604-100	2	● Bushing	21	<u>3604-158</u>	2	Axle, Powder Metal
3	1623-010	2	● Fitting, Grease	22	1604-187	2	Washer, Pivot Idler Arm
4	1704-019	1	Arm, Rear (inc. one No. 3 and 5)	23	<u>1704-522</u>	2	Arm, Pivot Idler (inc. 24-26)
5	1623-011	1	● Washer, Grease Fitting	24	<u>3604-028</u>	2	● Bushing, Flared
6	8047-490	1	Nut, Lock	25	8020-138	4	● Screw, Cap
7	2604-664	2	Bushing, Rear Arm	26	8047-426	4	● Nut, Lock
8	2604-663	1	Tube, Axle	27	0623-044	2	Washer
9	1623-037	1	Screw, Cap	28	8051-277	2	Washer, Lock
10	8050-272	1	Washer	29	8002-224	2	Screw, Cap
11	<u>1623-503</u>	2	Screw, Cap	30	0623-793	2	Screw, Cap
12	1604-208	1	Axle, Aluminum	31	1604-498	4	Axle, Link - Flanged
13	1604-204	1	Block, Spring Adjuster - Right	32	0704-350	2	Link, Inner Carriage
	1604-205	1	Block, Spring Adjuster - Left	33	0704-854	1	Spacer, Shock Link
14	0623-138	2	Ring, Retainer	34	8047-486	2	Nut, Lock
15	0114-254	2	Sleeve, Spring	35	8020-226	1	Screw, Cap
16	0704-888	1	Spring, Suspension - Right	36	8041-486	1	Nut, Lock
	0704-889	1	Spring, Suspension - Left	37	1604-455	1	Shock Absorber - Rear Arm (inc. 38-39)
17	1604-690	2	Wheel, Idler (inc. 18-19)	38	1604-185	2	● Sleeve, Shock
18	0107-598	2	● Bearing	39	0604-321	4	● Bushing, Shock
19	0123-798	2	● Ring, Retaining				

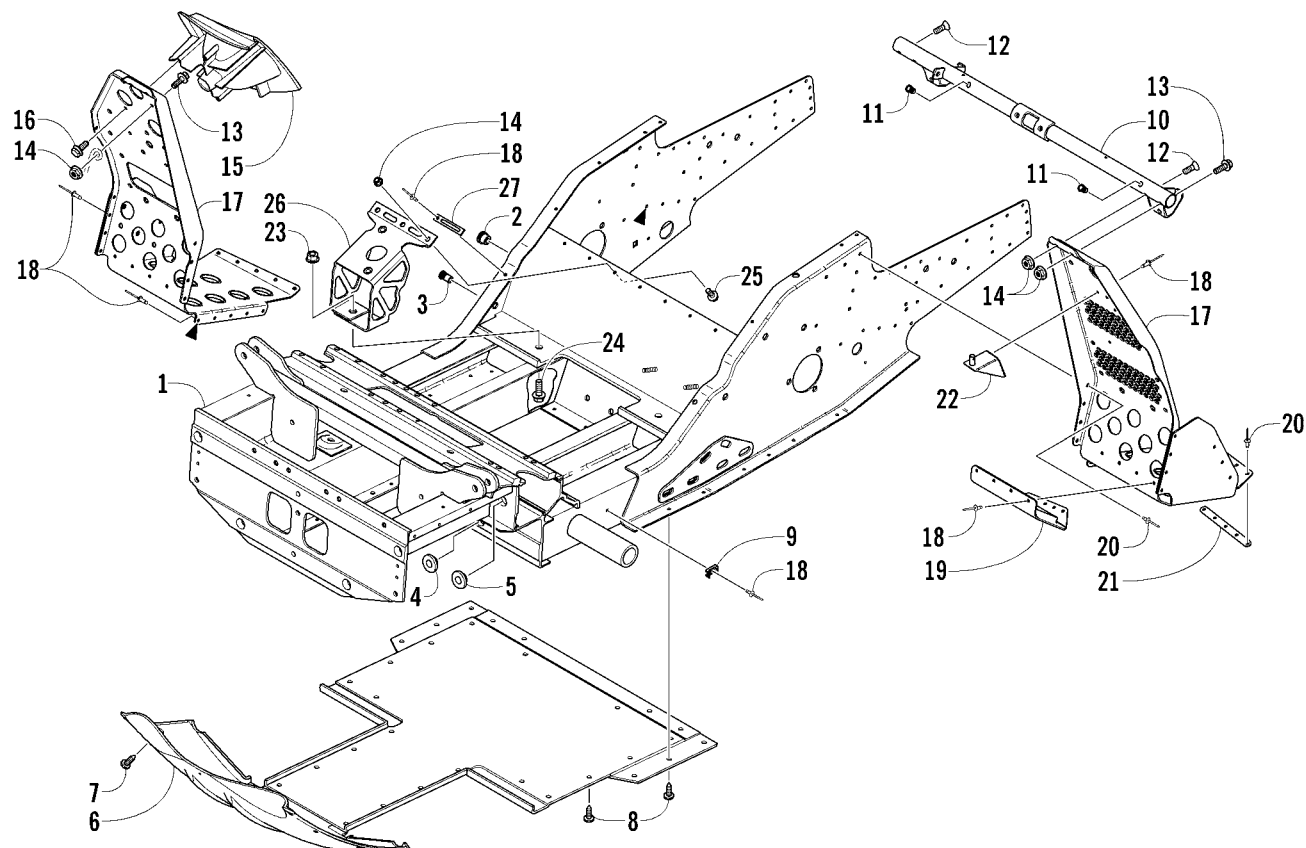

FRONT FRAME AND FOOTREST ASSEMBLY

0739-459


Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	0707-731	1	Chassis Assembly (inc. 2-5)	16	0623-297	3	Screw, Self-Tapping
2	0623-581	1	● Insert	17	2606-444	1	Footrest - Right
3	0623-582	4	● Insert		2606-733	1	Footrest - Left
4	0607-420	4	● Insert, Lower A-Arm Mount	18	8060-486	AR	Rivet
5	0607-421	4	● Insert, Upper A-Arm Mount	19	2606-458	1	Plate, Backing - Right
6	1606-719	1	Belly Pan - Center - Black		2606-459	1	Plate, Backing - Left
7	0623-784	7	Screw, Self-Tapping	20	8060-686	18	Rivet
8	1623-129	30	Screw, Self-Tapping	21	2706-110	2	Plate, Backing - Footrest
9	0623-228	1	Mount, Cable Tie	22	0705-173	1	Bracket, Mounting - Belt Guard
10	0705-866	1	Support, Steering (inc. 11)	23	8047-426	1	Nut, Lock
11	0623-779	2	● Insert	24	8020-130	1	Screw, Cap
12	8019-614	4	Screw, Machine	25	8020-039	3	Screw, Cap
13	8020-040	2	Screw, Cap	26	0708-398	1	Bracket, Engine Mounting
14	8047-366	9	Nut, Lock	27	3002-964	1	Clamp, Wire
15	1606-062	1	Cup, Recoil Rope				
	1706-099	1	Cup, Recoil Rope (LX)				

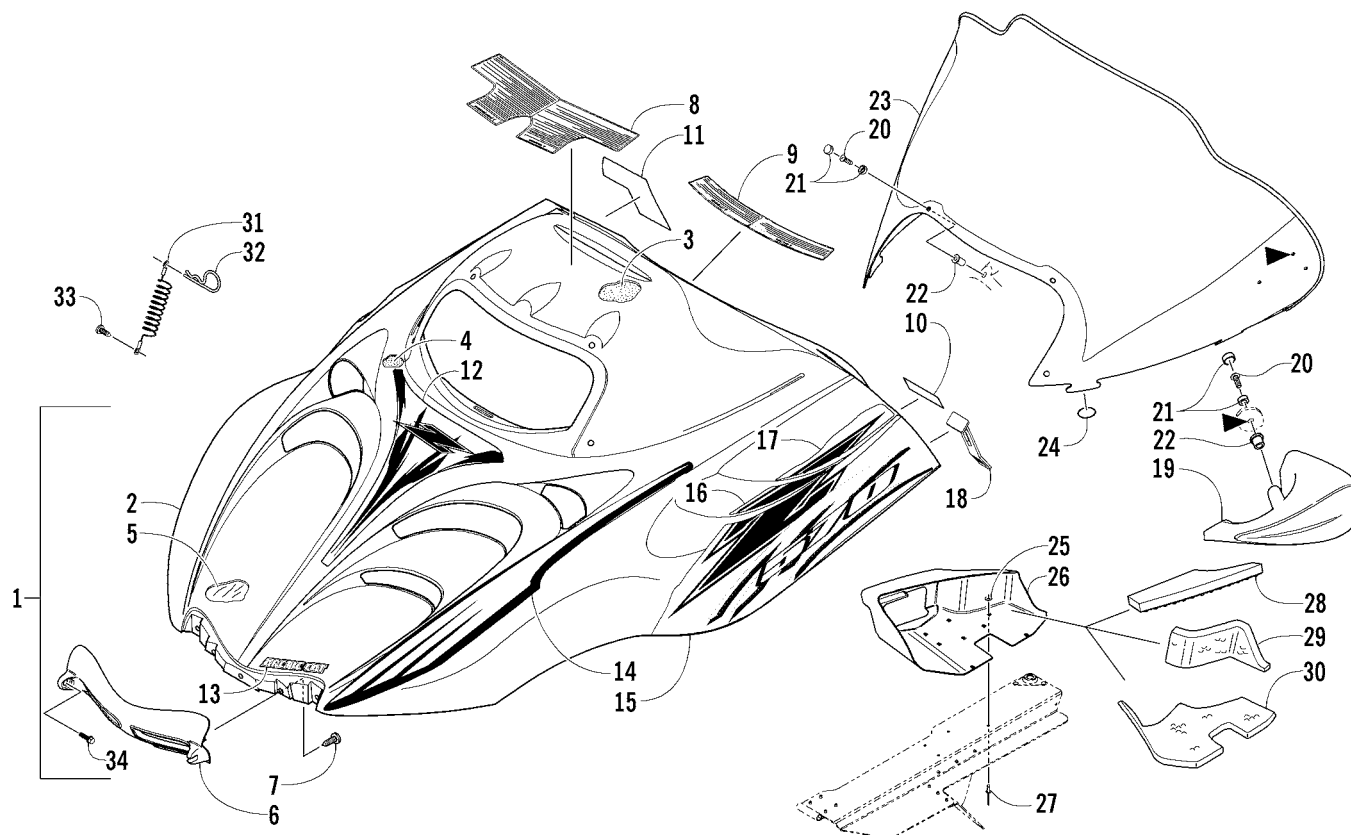

HOOD AND WINDSHIELD ASSEMBLY

0741-648


Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	<u>2718-026</u>	1	Hood w/Decals - Orange (inc. 2-10 and 12-17)	17	<u>7611-316</u>	1	● Decal, Hood - Vent - Upper Right
	<u>1718-995</u>	1	Hood w/Decals - Orange (inc. 2-17) (LX)		<u>7611-317</u>	1	● Decal, Hood - Vent - Upper Left
2	<u>2718-037</u>	1	● Hood w/o Decals - Orange (inc. 3-10)	18	1606-067	2	Strap, Hold-Down
	<u>2718-036</u>	1	● Hood w/o Decals - Orange (inc. 3-11) (LX)	19	2639-477	2	Kit, Mirror (inc. six No. 20-22) (LX)
3	0617-478	1	●● Foam, Hood - Upper Middle - Right	20	0623-902	4	Screw, Machine
	0617-479	1	●● Foam, Hood - Upper Middle - Left		0623-902	10	● Screw, Machine (LX)
4	0617-475	1	●● Foam, Hood - Middle	21	0124-054	4	Snap Cap w/Washer
5	1606-938	1	●● Foil, Hood - Right		0124-054	10	● Snap Cap w/Washer (LX)
	1606-939	1	●● Foil, Hood - Left	22	0623-845	4	Nut, Expansion
6	1606-720	1	●● Hinge, Hood		0623-845	10	● Nut, Expansion (LX)
7	0623-797	5	●● Screw, Self-Tapping	23	<u>4606-404</u>	1	Windshield
8	3611-485	1	●● Decal, Warning - General and Brake		<u>4606-403</u>	1	Windshield (LX)
9	3611-970	1	●● Decal, Caution - Engine/Battery/Fuel	24	0616-032	4	O-Ring
10	3611-509	1	●● Decal, Warning - Seating Capacity	25	0123-802	4	Washer
11	3611-580	1	●● Decal, Reverse (LX)	26	2606-370	1	Duct, Air-Out
12	<u>7611-322</u>	1	● Decal, Hood - Crest	27	8060-508	4	Rivet
13	<u>7611-323</u>	1	● Decal, "Arctic Cat" - Hood	28	0617-427	1	Foam, Air-Out Duct - Top
14	<u>7611-320</u>	1	● Decal, Hood - Forward Right	29	0617-428	1	Foam, Air-Out Duct - Side
	<u>7611-321</u>	1	● Decal, Hood - Forward Left	30	0617-425	1	Foam, Air-Out Duct - Bottom
15	<u>7611-324</u>	1	● Decal, Hood - Lower Right	31	2606-247	1	Cable, Hood
	<u>7611-325</u>	1	● Decal, Hood - Lower Left	32	0623-805	1	Clip, Hairpin
16	<u>7611-318</u>	1	● Decal, Hood - Vent - Center Right	33	0623-057	1	Screw, Self-Tapping
	<u>7611-319</u>	1	● Decal, Hood - Vent - Center Left	34	1623-016	2	Screw, Machine

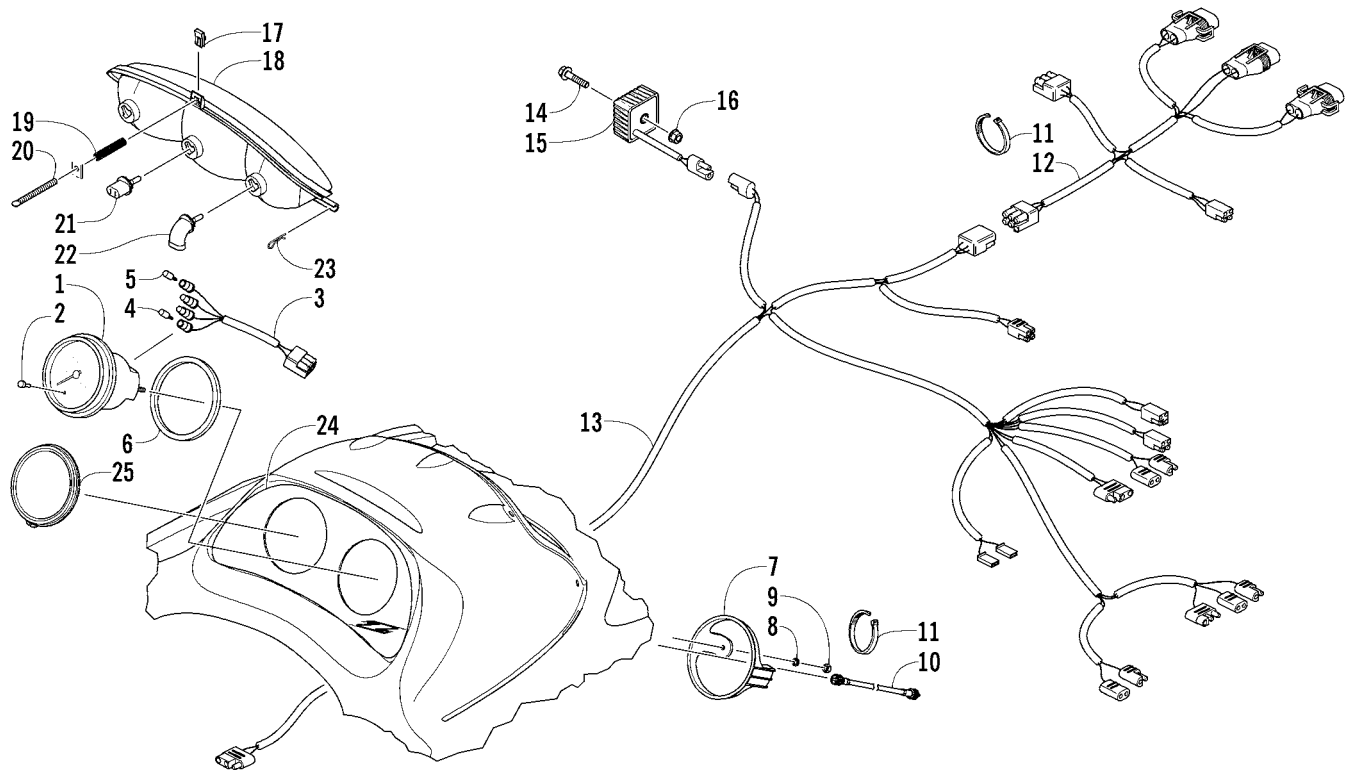

HEADLIGHT, INSTRUMENTS, AND WIRING ASSEMBLIES

0741-925 *Included in Hood w/Decals


Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	0620-238	1	Speedometer (inc. 2-5)	14	8020-045	1	Screw, Cap
2	0620-073	1	● Knob, Tripmeter	15	0630-181	1	Regulator, Voltage
3	0620-151	1	● Harness, Bulb - Speedometer (inc. 4-5)	16	8048-366	1	Nut, Lock
4	0620-149	3	●● Bulb, Indicator	17	0623-757	1	Nut, Speed
5	0230-020	1	●● Bulb, Instrument	18	0609-250	1	Lens/Reflector - Headlight
6	0620-135	1	Ring, Rubber Cushion	19	0623-466	1	Spring, Adjustment
7	0620-134	1	Ring, Retaining Bracket	20	0623-467	1	Screw, Thumb
8	8050-212	2	Washer	21	0609-252	1	Bulb, Headlight - Low Beam
9	0623-038	2	Nut w/Washer	22	0609-251	2	Bulb, Headlight - High Beam
10	0620-269	1	Cable, Speedometer	23	0623-847	2	Clip, Hairpin
11	0123-788	AR	Cable Tie - 8 in.	24	7611-307	1	Decal, Console - "Z"*
12	0686-515	1	Harness, Hood	25	2606-069	1	Plug, Gauge Hole*
13	1686-083	1	Harness, Main				

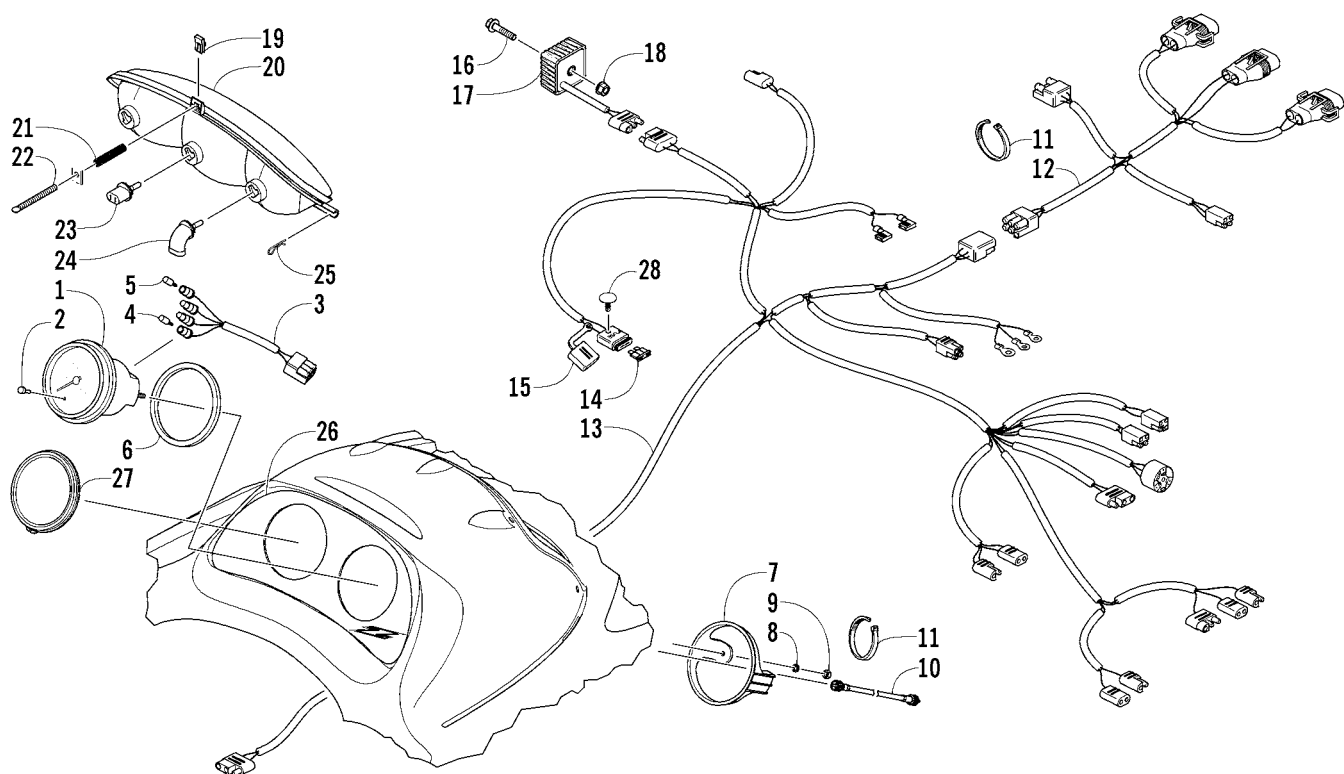

HEADLIGHT, INSTRUMENTS, AND WIRING ASSEMBLIES (LX)

0741-926 *Included in Hood w/Decals


Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	0620-238	1	Speedometer (inc. 2-5)	15	0630-102	1	● Cover, Fuse Holder
2	0620-073	1	● Knob, Tripmeter	16	8020-045	1	Screw, Cap
3	0620-151	1	● Harness, Bulb - Speedometer (inc. 4-5)	17	0630-182	1	Regulator, Voltage
4	0620-149	3	● ● Bulb, Indicator	18	8048-366	1	Nut, Lock
5	0230-020	1	● ● Bulb, Instrument	19	0623-757	1	Nut, Speed
6	0620-135	1	Ring, Rubber Cushion	20	0609-250	1	Lens/Reflector - Headlight
7	0620-134	1	Ring, Retaining Bracket	21	0623-466	1	Spring, Adjustment
8	8050-212	2	Washer	22	0623-467	1	Screw, Thumb
9	0623-038	2	Nut w/Washer	23	0609-252	1	Bulb, Headlight - Low Beam
10	0620-269	1	Cable, Speedometer	24	0609-251	2	Bulb, Headlight - High Beam
11	0123-788	AR	Cable Tie - 8 in.	25	0623-847	2	Clip, Hairpin
12	0686-515	1	Harness, Hood	26	<u>7611-307</u>	1	Decal, Console - "Z"*
13	1686-085	1	Harness, Main (inc. 14-15)	27	2606-069	1	Plug, Gauge Hole*
14	0630-103	1	● Fuse - 7.5 Amp	28	0623-589	1	Clip, Retaining

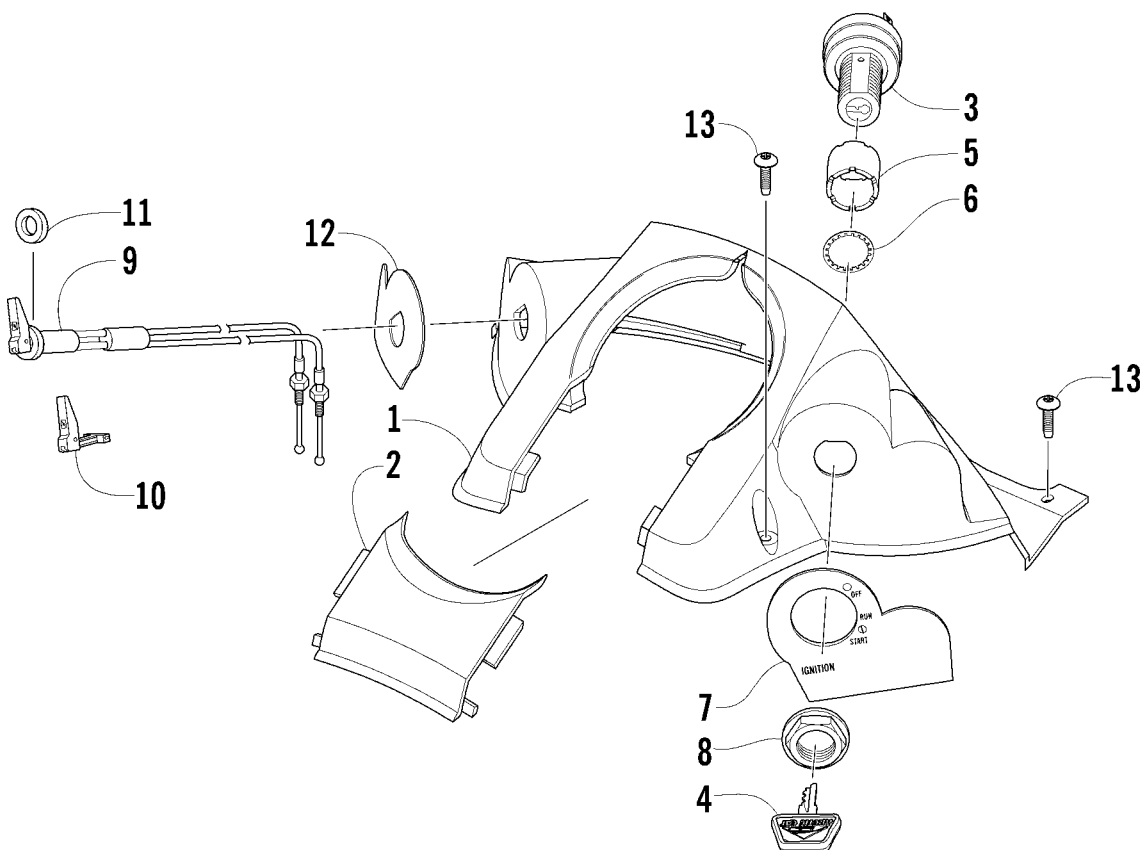

CONSOLE AND SWITCH ASSEMBLY

0740-430


Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	1606-735	1	Console	8	0609-113	1	Nut, Retaining - Plastic
2	1606-105	1	Door, Console	9	0687-007	1	Cable, Choke (inc. 10-11)
3	0609-286	1	Switch, Ignition (inc. 4)	10	0636-062	1	● Choke Lever Kit
	0609-449	1	Switch, Ignition (inc. 4) (LX)	11	0623-054	1	● Nut, Choke
4	*	2	● Key	12	2611-867	1	Decal, Console - Left
5	0609-450	1	Spacer, Ignition Switch	13	1623-175	4	Screw, Self-Tapping
6	0123-899	1	Washer, Lock - Internal Tooth				
7	2611-678	1	Decal, Console - Right				
	2611-744	1	Decal, Console - Right (LX)				
							*Key is coded to switch; see dealer to determine part number.

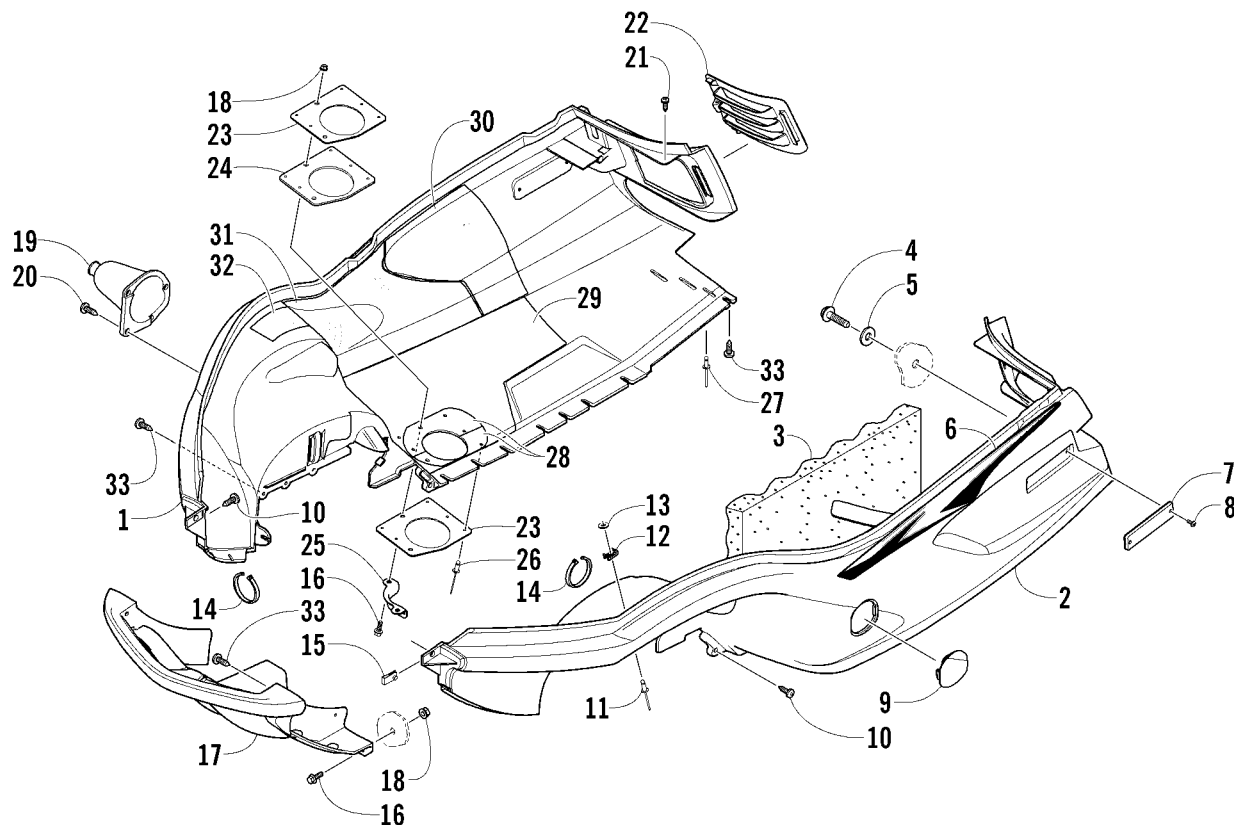

BELLY PAN AND FRONT BUMPER ASSEMBLY

0741-666


Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	1706-846	1	Belly Pan - Right - Black	18	8047-366	6	Nut, Lock
2	1706-141	1	Belly Pan - Left - Black	19	0605-332	1	Boot, Steering - Right
3	0617-315	1	Foam, Belly Pan - Left		0605-333	1	Boot, Steering - Left
4	0623-647	2	Screw, Self-Tapping	20	<u>1623-429</u>	8	Screw, Self-Tapping
5	0623-184	2	Washer	21	0623-378	2	Screw, Self-Tapping
6	<u>7611-312</u>	1	Decal, Belly Pan - Right	22	1606-044	1	Louver, Air-Intake - Right - Black
	<u>7611-313</u>	1	Decal, Belly Pan - Left		1606-045	1	Louver, Air-Intake - Left - Black
7	0606-526	2	Reflector, Front - Amber	23	0712-939	2	Shield, Exhaust
8	0623-269	4	Clip, Retaining	24	1612-514	1	Seal, Exhaust
9	1606-767	1	Panel, Clutch Access - Black	25	0712-879	1	Deflector, Exhaust
10	0623-784	4	Screw, Self-Tapping	26	8060-508	6	Rivet
11	8060-506	1	Rivet	27	8061-508	8	Rivet
12	0623-228	1	Mount, Cable Tie	28	0619-206	AR	Tape, Foil
13	0123-149	1	Washer	29	2606-374	1	Foil, Protective - Lower Rear
14	0123-788	2	Cable Tie - 7.5 in.	30	2606-375	1	Foil, Protective - Upper Rear
15	0623-427	2	Nut, U	31	2606-376	1	Foil, Protective - Lower Front
16	8020-040	6	Screw, Cap	32	2606-387	1	Foil, Protective - Upper Front
17	1606-949	1	Bumper, Front	33	1623-129	16	Screw, Self-Tapping

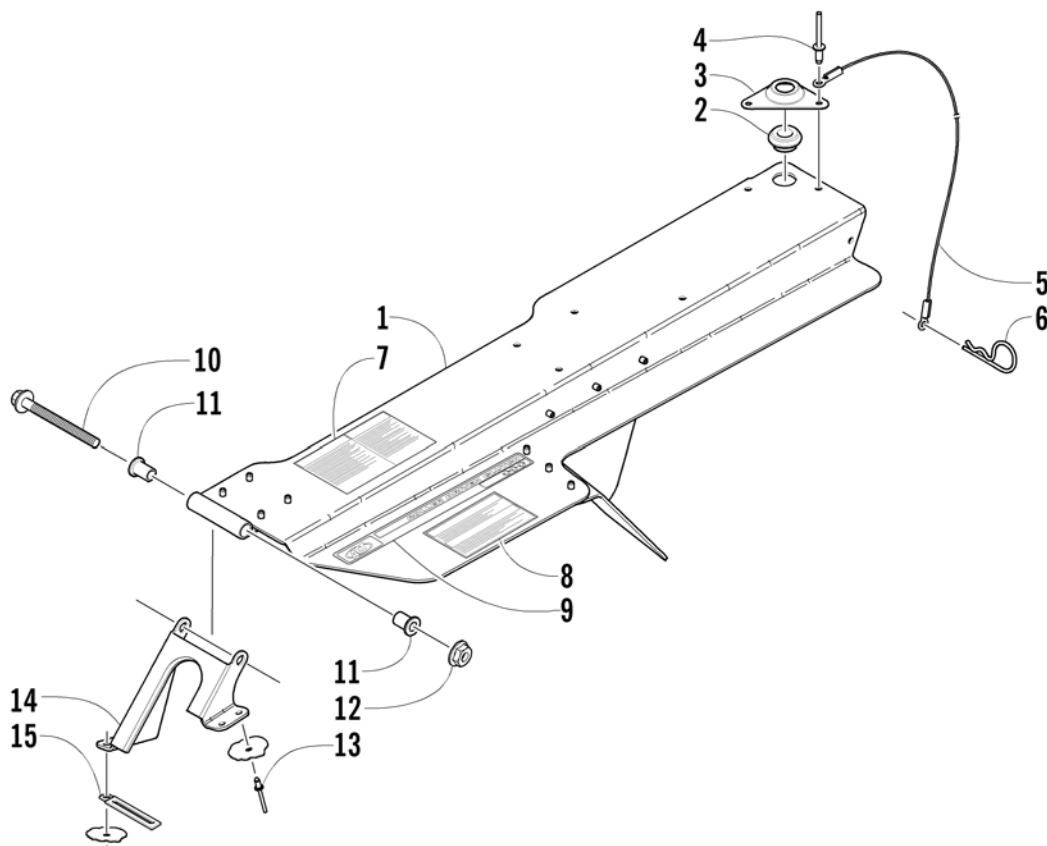

BELT GUARD ASSEMBLY

0739-876


Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	0707-574	1	Belt Guard Assembly (inc. 2-6)	9	3611-969	1	Decal, "ACT - Roller Driven Clutch"
2	0607-549	1	● Bushing, Belt Guard	10	8020-050	1	Screw, Cap
3	0607-550	1	● Plate, Bushing - Belt Guard	11	0607-094	2	Insert, Hinge
4	8060-504	2	● Rivet	12	8047-366	1	Nut, Lock
5	0607-447	1	● Cable	13	8061-508	4	Rivet
6	0605-283	1	● Clip, Hairpin	14	0707-707	1	Bracket, Mounting - Belt Guard
7	1611-582	1	Decal, Caution - Jetting/Storage	15	3002-964	1	Clamp, Wire
8	1611-565	1	Decal, Warning - Belt Guard				

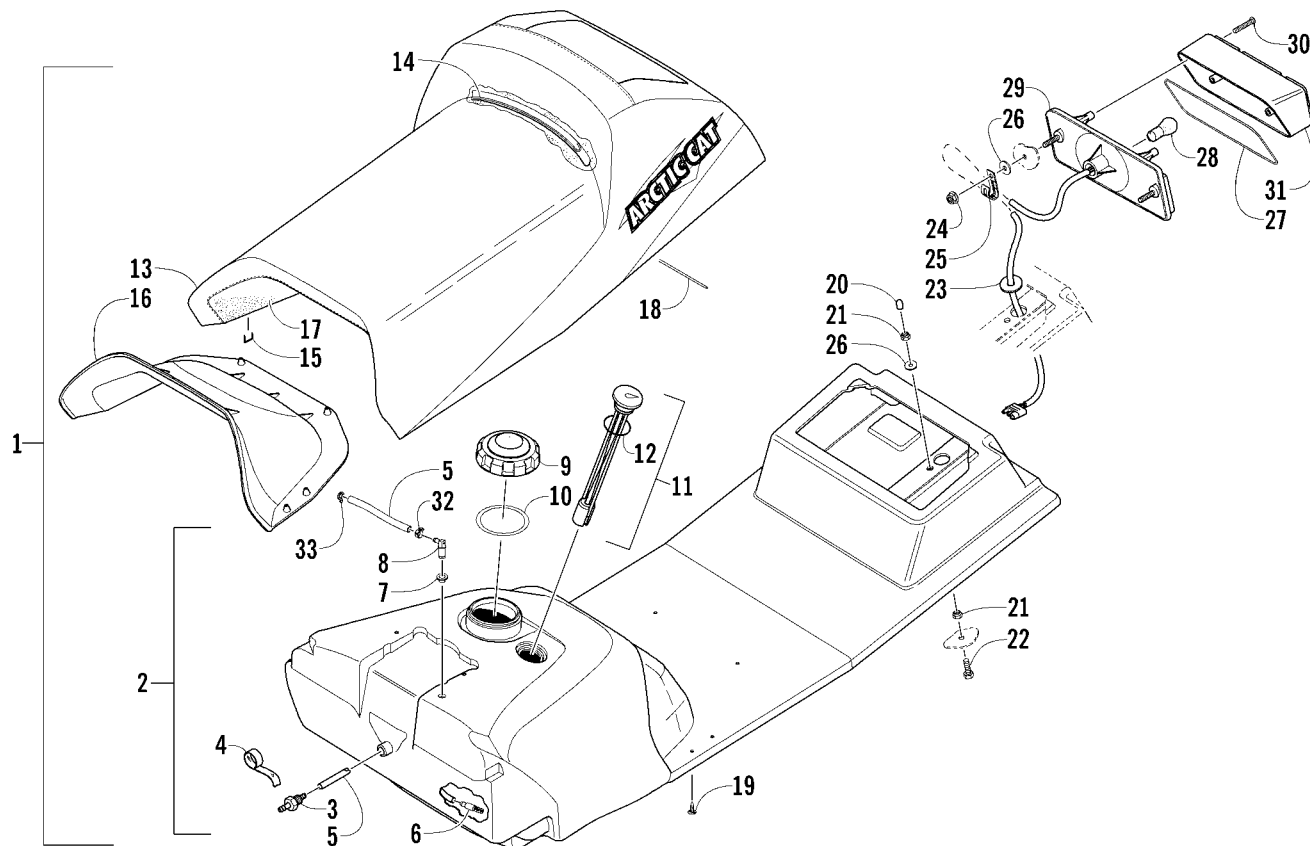

GAS TANK, SEAT, AND TAILLIGHT ASSEMBLY

0741-551


Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	<u>2718-073</u>	1	Seat Assembly - Complete (inc. 2-19)	17	2706-196	1	● Foam, Seat Cushion
2	0770-690	1	● Tank, Gas/Seat-Base - Black (inc. 3-12)	18	2606-943	1	● Wire, Seat
3	1670-173	1	● ● Outlet, Tank	19	0623-784	6	● Screw, Self-Tapping
4	0670-289	1	● ● Tape, Teflon	20	0623-404	2	Cap, Protector
5	6101-001	AR	● ● Hose, Gasline - 100 ft	21	8047-366	4	Nut, Lock
	6101-009	AR	● ● Hose, Gasline - 50 ft	22	8020-041	2	Screw, Cap
6	0510-358	1	● ● Strainer, Gas Tank	23	0617-136	1	Seal, Foam - Seat-Base
7	1670-325	1	● ● Grommet	24	0623-038	2	Nut w/Washer
8	1670-494	1	● ● Vent, Gas Tank	25	3002-964	1	Clamp, Wire
9	1670-199	1	● ● Cap, Gas Tank (inc. 10)	26	0623-184	4	Washer
10	1670-228	1	● ● ● Seal, Gas Tank Cap	27	0609-092	1	Gasket, Taillight Lens
11	1670-241	1	● ● Gauge, Gas w/Seal (inc. 12)	28	0109-460	1	Bulb
12	0470-400	1	● ● ● Seal, Gas Gauge	29	0609-091	1	Taillight w/Socket Assembly
13	<u>3706-361</u>	1	● Cover, Seat (inc. 14)	30	0609-093	4	Screw, Retaining
14	3606-363	1	● ● Wire, Seat	31	0609-090	1	Lens, Taillight
15	0624-528	AR	● Staple, Seat Cover	32	1623-042	1	Clamp, Hose
16	1606-126	1	● Insert, Seat Foam	33	0623-101	1	Clip, Routing - Snap-In

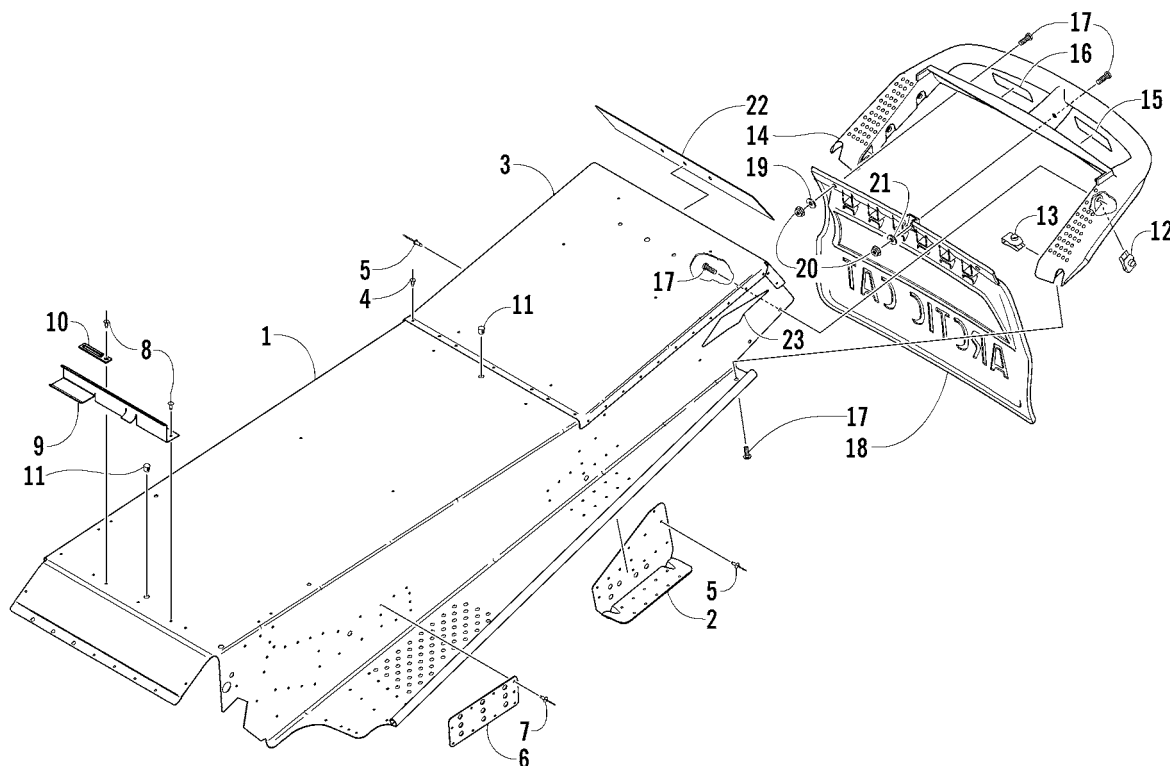

TUNNEL AND REAR BUMPER

0741-668 *Optional


Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	1718-556	1	Tunnel Assembly (inc. 2-5)	11	0623-562	3	Plug, Hole
2	1706-078	1	● Bracket, Suspension Mounting - Right - Rear	12	0623-771	4	Nut, U
	1706-079	1	● Bracket, Suspension Mounting - Left - Rear	13	0623-427	2	Nut, U
3	3606-179	1	● Plate, End - Rear Tunnel	14	1606-200	1	Bumper, Rear
4	8060-686	4	● Rivet	15	5611-853	1	Decal, Warning - Towing (English)
	8060-484	3	● Rivet	16	5611-852	1	Decal, Warning - Towing (French)
5	0123-418	AR	● Rivet, Solid	17	8017-580	9	Screw, Machine
	8060-506	AR	● Rivet*	18	1606-202	1	Snowflap
6	2706-111	2	Plate, Suspension Mounting - Front	19	0623-184	2	Washer
7	0623-072	AR	Rivet, Solid	20	8048-366	3	Nut, Lock
8	8060-486	3	Rivet	21	8050-217	1	Washer
9	0607-635	1	Bracket, Main Harness Protector	22	6611-644	1	Decal, Tunnel - Rear
10	3002-964	1	Clamp, Wire	23	6611-688	1	Decal, Reflector - Right - Rear
					6611-689	1	Decal, Reflector - Left - Rear

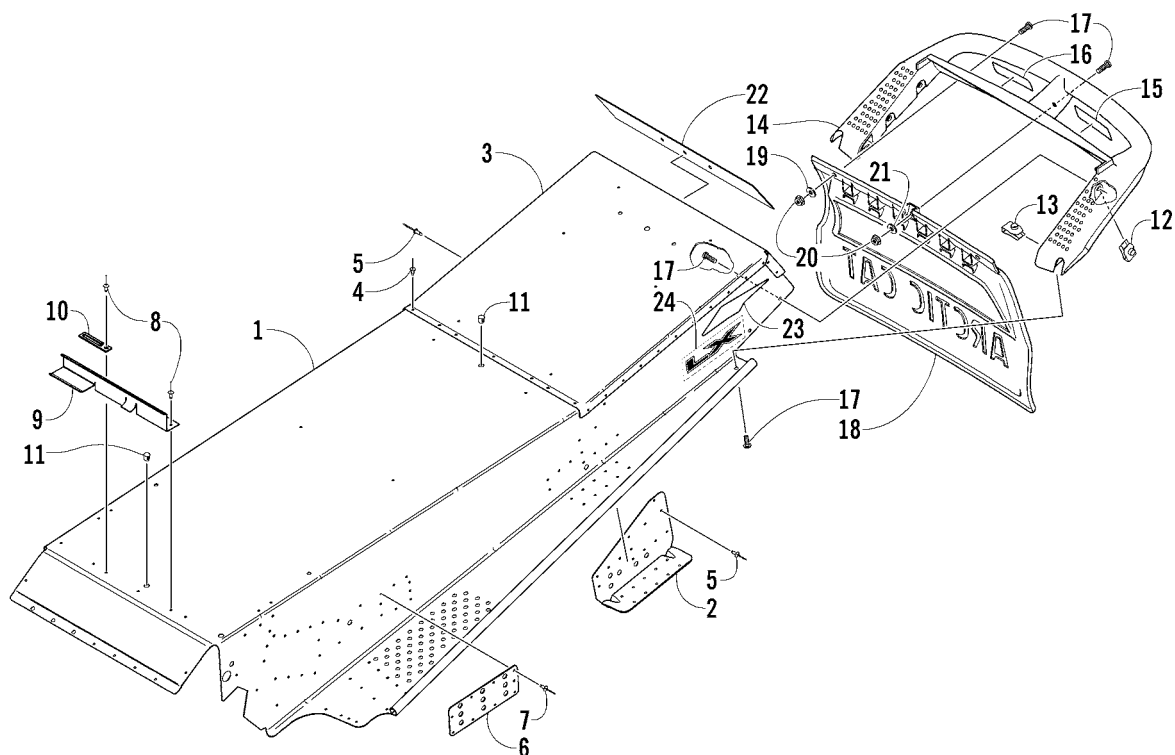

TUNNEL AND REAR BUMPER (LX)

0741-667 *Optional


Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	1718-556	1	Tunnel Assembly (inc. 2-5)	11	0623-562	3	Plug, Hole
2	1706-078	1	● Bracket, Suspension Mounting - Right - Rear	12	0623-771	4	Nut, U
	1706-079	1	● Bracket, Suspension Mounting - Left - Rear	13	0623-427	2	Nut, U
3	3606-179	1	● Plate, End - Rear Tunnel	14	1606-200	1	Bumper, Rear
4	8060-686	4	● Rivet	15	5611-853	1	Decal, Warning - Towing (English)
	8060-484	3	● Rivet	16	5611-852	1	Decal, Warning - Towing (French)
5	0123-418	AR	● Rivet, Solid	17	8017-580	9	Screw, Machine
	8060-506	AR	● Rivet*	18	1606-507	1	Snowflap
6	2706-111	2	Plate, Suspension Mounting - Front	19	0623-184	2	Washer
7	0623-072	AR	Rivet, Solid	20	8047-366	3	Nut, Lock
8	8060-486	3	Rivet	21	8050-217	1	Washer
9	0607-635	1	Bracket, Main Harness Protector	22	6611-644	1	Decal, Tunnel - Rear
10	3002-964	1	Clamp, Wire	23	6611-688	1	Decal, Reflector - Right - Rear
					6611-689	1	Decal, Reflector - Left - Rear
				24	7611-310	2	Decal, "LX"

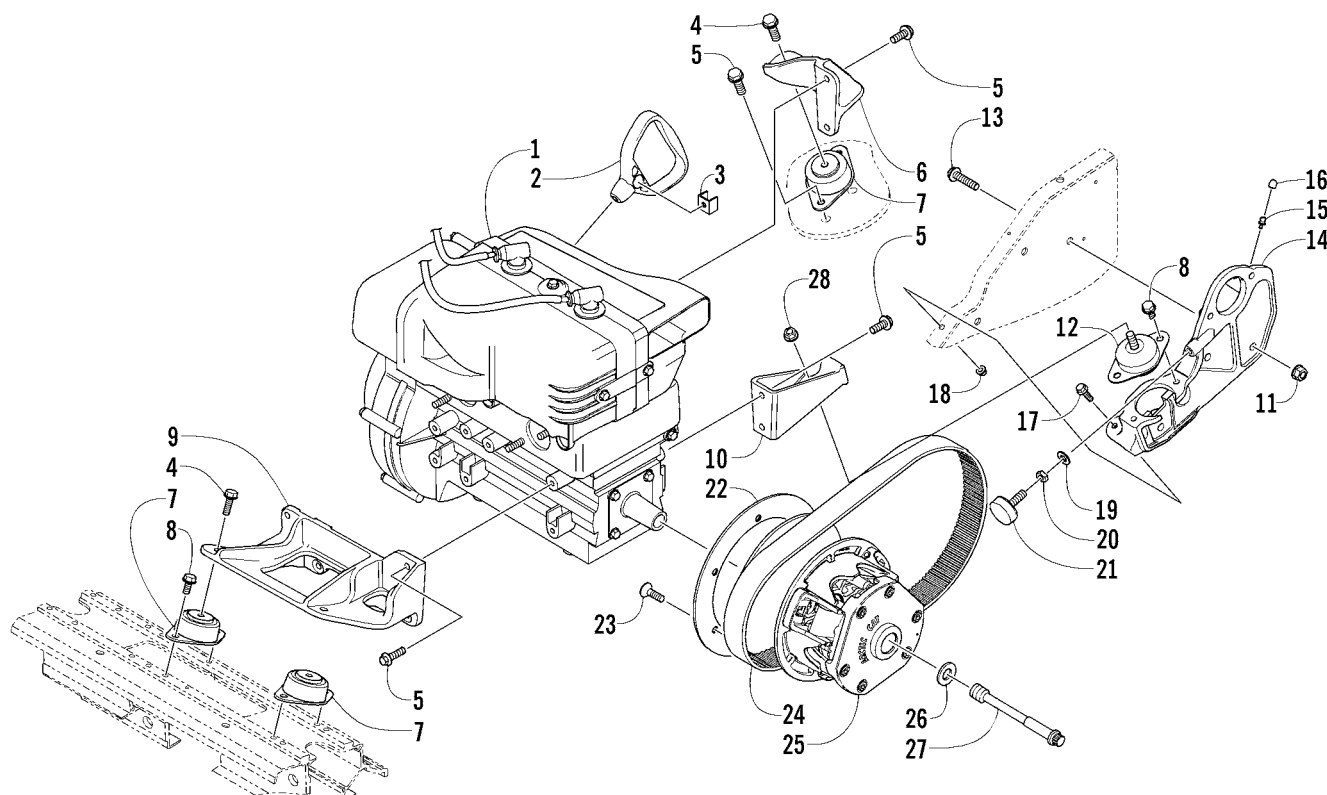

ENGINE AND RELATED PARTS

0740-415


Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	0662-462	1	Engine, AA56A6	15	1623-010	1	● Fitting, Grease
2	0636-363	1	Handle, Recoil	16	0623-904	1	● Cap, Grease Fitting
3	0606-885	1	Cap, Recoil Handle	17	8020-040	2	Screw, Cap
4	1623-560	3	Screw, Cap	18	8048-366	2	Nut, Lock
5	1623-553	11	Screw, Cap	19	8050-272	1	Washer
6	0708-132	1	Bracket, Mounting - Engine - Right - Rear	20	0123-191	1	Nut
7	0608-347	3	Mount, Engine	21	0608-355	1	Bumper, Torque - Engine
8	0623-765	6	Screw, Self-Tapping	22	0645-410	1	Ring, Clutch Damper (STD)
9	0708-131	1	Bracket, Mounting - Engine - Front	23	1623-128	6	Screw, Machine (STD)
	0745-154	1	Bracket, Mounting - Engine - Front (LX)	24	0627-021	1	Belt, Drive
10	0708-133	1	Bracket, Mounting - Engine - Left - Rear	25	0746-168	1	Clutch, Drive - Uncalibrated
11	8047-486	3	Nut, Lock	26	0623-210	1	Washer, High Collar
12	0708-145	1	Mount, Engine - Assembly	27	0623-804	1	Bolt, Clutch
13	8020-224	3	Screw, Cap	28	8047-486	1	Nut, Lock
14	0708-139	1	Bracket, Mounting - Engine/Bearing Support (inc. 15-16)				

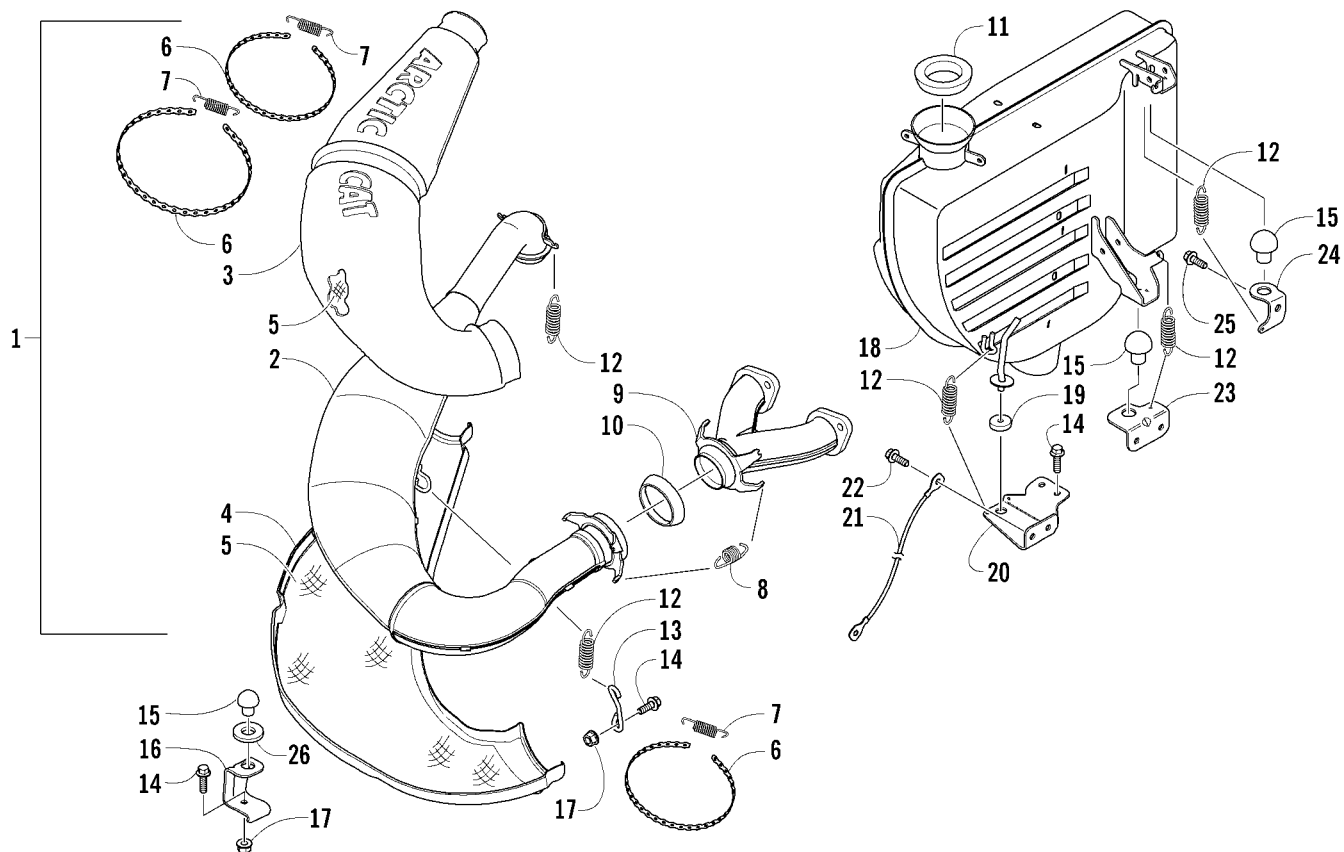

EXHAUST ASSEMBLY

0741-873

Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	<u>1712-341</u>	1	Expansion Chamber Assembly (inc. 2-7)	14	8020-040	4	Screw, Cap
2	<u>1712-340</u>	1	● Chamber, Expansion	15	0612-111	3	Bumper, Rubber
3	<u>2612-137</u>	1	● Cover, Upper	16	1612-508	1	Bracket, Mounting - Expansion Chamber
4	<u>2612-138</u>	1	● Cover, Lower	17	8047-366	3	Nut, Lock
5	<u>2612-139</u>	2	● Insulation	18	<u>1712-372</u>	1	Resonator
6	0624-552	AR	● Tie, Perforated Band - 5 ft	19	1612-319	1	Bushing, Stem - Resonator Mounting
	0624-541	AR	● Tie, Perforated Band - 25 ft	20	0712-834	1	Bracket, Mounting - Resonator
7	1612-178	3	● Spring, Exhaust	21	0686-126	1	Wire, Ground
8	<u>2612-257</u>	4	Spring, Extension	22	<u>1623-544</u>	4	Screw, Cap
9	<u>1712-336</u>	1	Manifold, Exhaust	23	0712-992	1	Bracket, Mounting - Resonator
10	0612-131	1	Gasket, Exhaust	24	0712-993	1	Bracket, Mounting - Resonator
11	1612-323	1	Gasket, Exhaust - Tailpipe	25	8020-134	1	Screw, Cap
12	0612-471	6	Spring, Exhaust	26	0623-220	1	Washer
13	0712-913	1	Bracket, Wire Form				

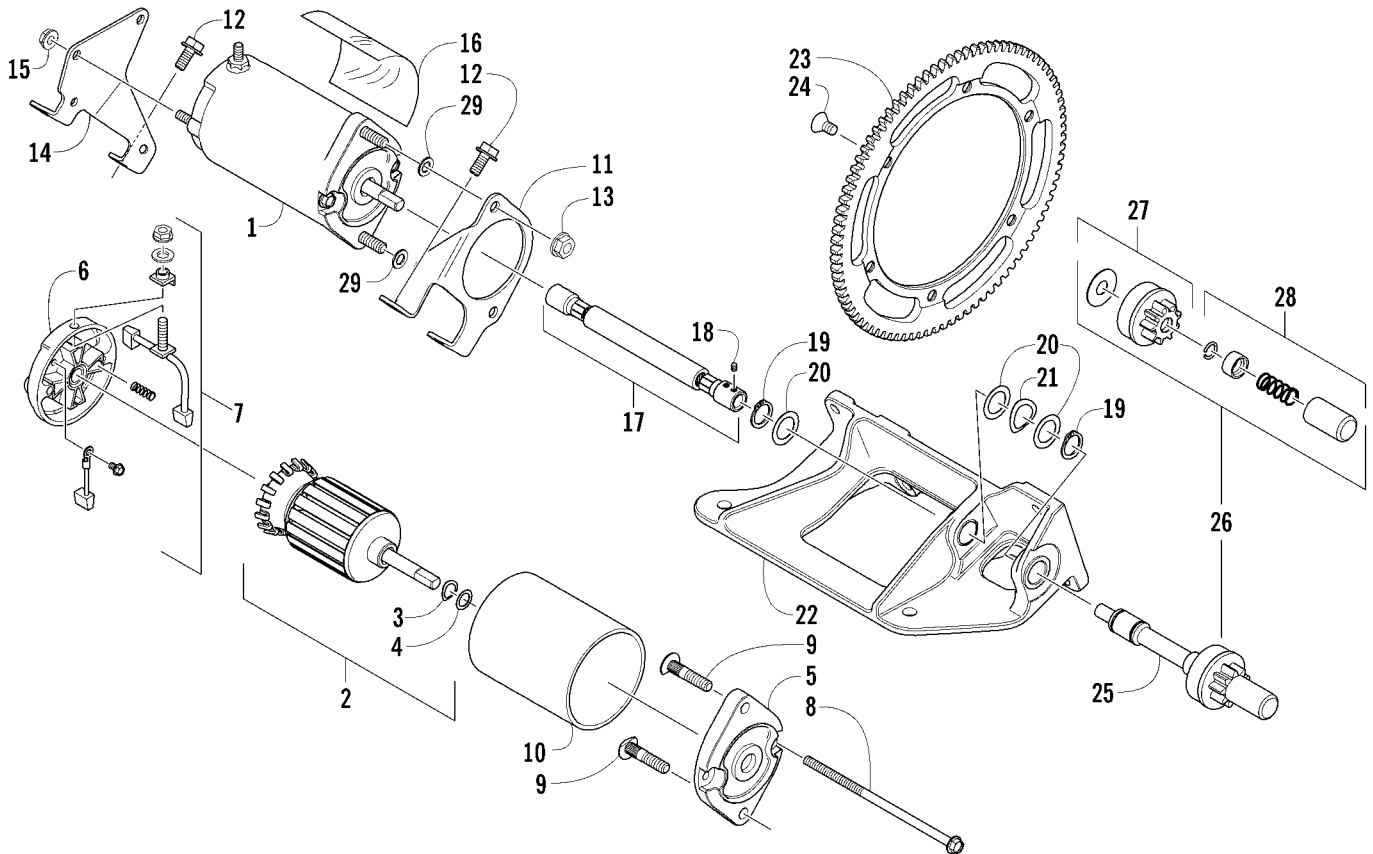


FLEX-DRIVE STARTER MOTOR ASSEMBLY (LX)

(Optional Kit p/n 2639-148)

0742-039 *Not a Service Part


Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	0745-143	1	Motor, Starter (inc. 2-10)	16	0716-344	AR	Tape, Foil
2	0645-296	1	● Armature Assembly (inc. 3-4)	17	0745-167	1	Shaft, Flex-Drive (inc. 18)
3	0645-131	1	●● Washer, Wave	18	0623-891	4	● Screw, Set - Socket
4	0645-293	1	●● Washer, Thrust	19	0645-256	2	Ring, Snap
5	0645-297	1	● Cap, Drive	20	0645-254	3	Washer, Thrust
6	0645-313	1	● Cap, Commutator (inc. 7)	21	0645-255	1	Washer, Wave
7	0645-275	1	●● Kit, Brush and Spring	22	0745-154	1	Bracket, Engine Mounting - Front
8	0645-128	2	● Through-Bolt	23	0645-329	1	Ring Gear
9	0623-093	2	● Bolt, Ribbed	24	1623-128	6	Screw, Machine
10	*	1	● Case, Starter Motor	25	0745-253	1	Drive, Pinion - Flex-Drive Shaft (inc. 26-28)
11	0745-193	1	Bracket, Mounting - Starter Motor	26	0745-224	1	● Kit, Pinion Drive Assembly (inc. 27-28)
12	0623-765	4	Screw, Self-Tapping	27	0645-380	1	●● Pinion Drive Assembly
13	8047-426	2	Nut, Lock	28	0645-186	1	●● Pinion Stopper Assembly
14	0745-194	1	Bracket, Mounting	29	0123-053	2	Washer
15	8047-366	2	Nut, Lock				

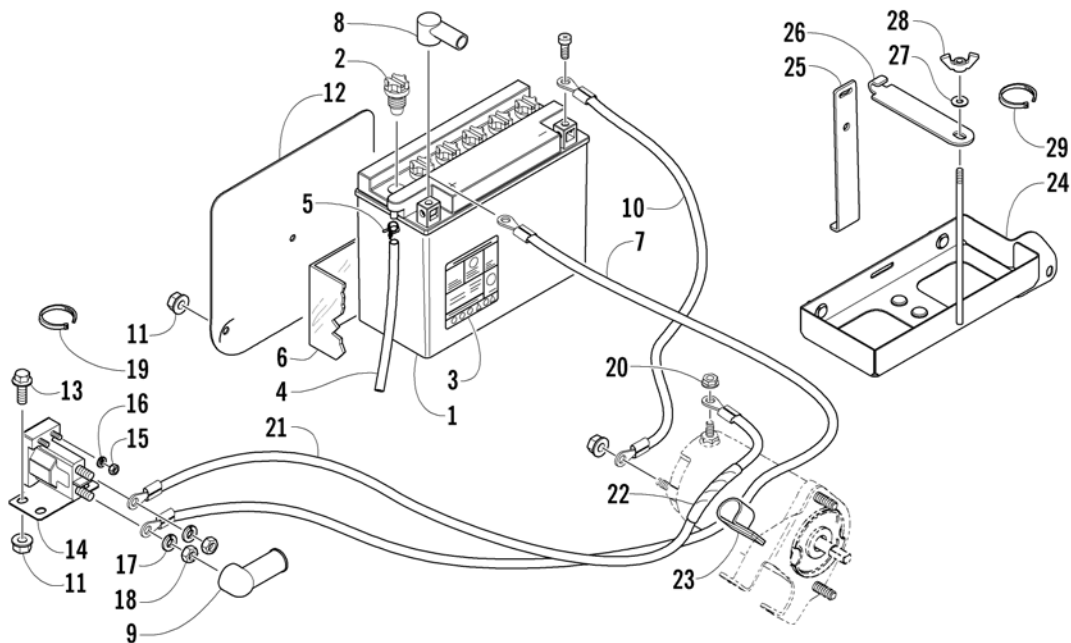

BATTERY, SOLENOID, AND CABLES (LX)

0738-467


Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	0745-059	1	Battery (inc. 2-6)	16	8051-152	2	● Washer, Lock
2	0645-246	6	● Cap, Battery	17	8051-242	2	● Washer, Lock
3	0645-151	1	● Decal, Warning - Battery	18	8043-452	2	● Nut
4	0645-179	1	● Hose, Battery Vent	19	0623-144	1	Cable Tie - 17.5 in.
5	0645-152	1	● Clamp, Hose	20	0623-122	1	Nut, Lock
6	0645-082	1	● Wrap, Heat - Battery	21	0645-373	1	Cable, Solenoid/Starter
7	0645-374	1	Cable, Battery/Solenoid (inc. 8-9)	22	0645-181	1	Tube, Heat Protection
8	0645-019	1	● Boot, Terminal - Battery	23	3008-040	2	Clamp, Wire
9	0645-327	1	● Boot, Terminal - Solenoid	24	0745-166	1	Tray, Battery
10	0645-136	1	Cable, Battery/Ground	25	0645-311	1	Strap, Battery - Side
11	8047-366	6	Nut, Lock	26	0645-243	1	Strap, Battery - Top
12	0745-139	1	Shield, Heat	27	8050-217	1	Washer
13	8020-040	2	Screw, Cap	28	0623-325	1	Nut, Wing
14	0645-196	1	Solenoid (inc. 15-18)	29	0123-788	AR	Cable Tie - 7 in.
15	8042-272	2	● Nut				

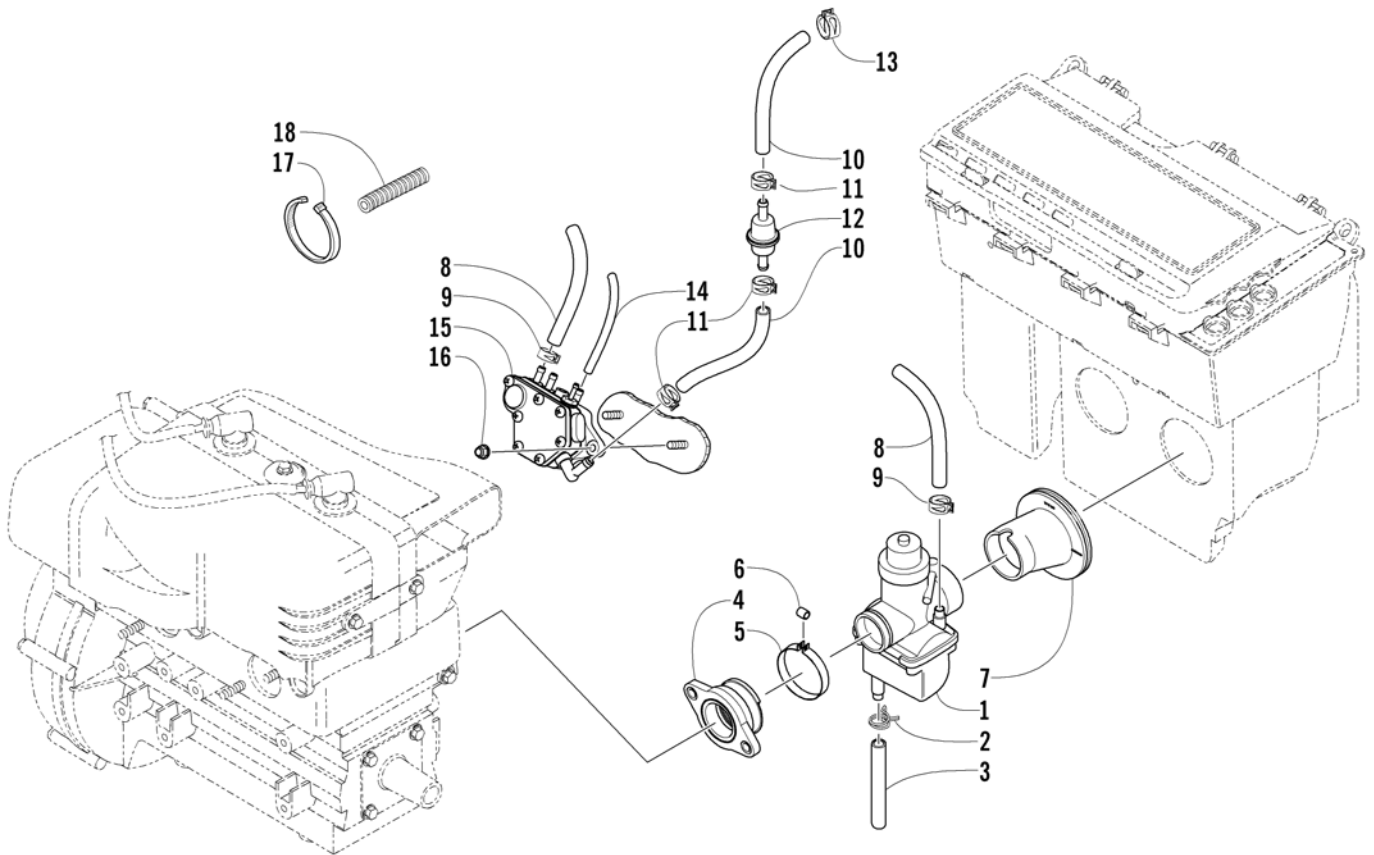

CARBURETOR AND FUEL PUMP ASSEMBLY

0739-473


Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	1670-846	2	Carburetor Assembly - VM34-625	10	0610-629	AR	Hose, Gasline - 100 ft
2	0623-652	2	Clamp, Hose		0610-628	AR	Hose, Gasline - 25 ft
3	0610-442	2	Hose, Drain	11	1623-351	3	Clamp, Hose
4	0115-544	2	Flange, Carburetor (inc. 5)	12	1670-166	1	Filter, Fuel
5	0109-709	2	● Clamp, Carburetor Flange	13	1623-234	1	Clamp, Hose
6	0670-210	2	Spacer, Clamp	14	0610-007	AR	Hose, Impulse - 25 ft
7	1670-310	1	Boot, Air Silencer - Right	15	1670-262	1	Pump, Fuel
	1670-263	1	Boot, Air Silencer - Left	16	8047-366	2	Nut, Lock
8	6101-001	AR	Hose, Gasline - 100 ft	17	0123-811	AR	Cable Tie - 4 in.
	6101-009	AR	Hose, Gasline - 50 ft	18	0716-558	AR	Conduit, Flexible - 10 ft
9	1623-233	4	Clamp, Hose				

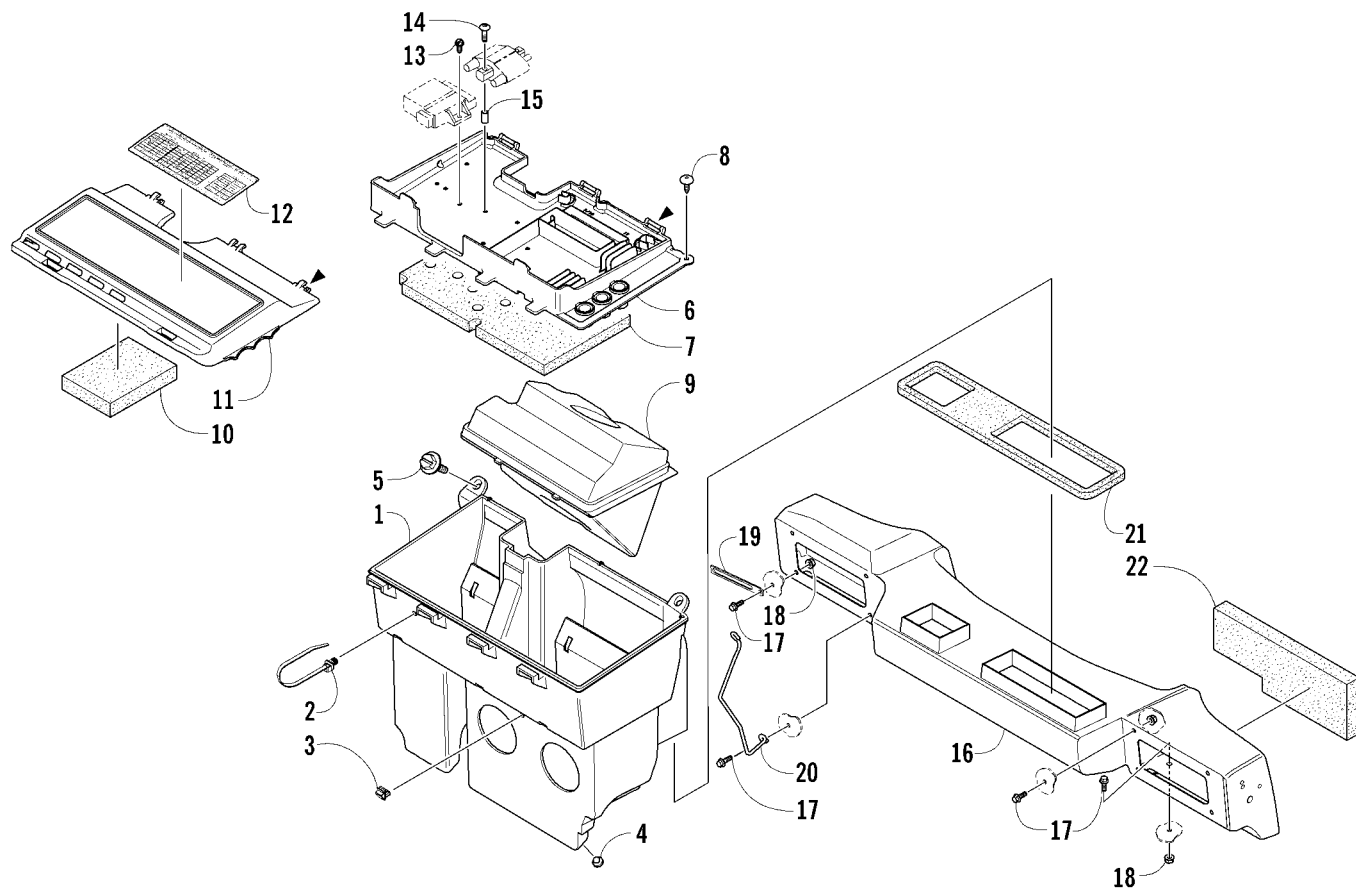

AIR SILENCER ASSEMBLY

0741-867


Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	0770-536	1	Silencer, Air - Assembly	12	7611-594	1	Decal, Jet Chart
2	0623-677	1	Cable Tie, Push-Mount	13	0623-057	2	Screw, Self-Tapping
3	0623-403	1	Clamp, Push-Mount	14	8017-406	2	Screw, Machine
4	1606-038	2	Bumper, Air Silencer	15	1623-045	2	Spacer
5	0623-780	2	Screw, Machine - Hex Shoulder	16	1670-327	1	Plenum, Air Silencer
6	1670-197	1	Cover, Air Silencer	17	8020-040	10	Screw, Cap
7	0617-393	1	Foam, Cover - Air Silencer	18	8047-366	10	Nut, Lock
8	0623-727	3	Screw, Self-Tapping	19	3002-964	1	Clamp, Wire
9	1670-061	1	Resonator, Q-Wave	20	0707-705	1	Bracket, Guard - Harness/Rope
10	0617-411	1	Foam, Tool Tray	21	0617-245	1	Seal, Plenum/Air Silencer
11	1670-049	1	Cover, Tool Tray	22	0617-270	2	Foam, Plenum - Intake

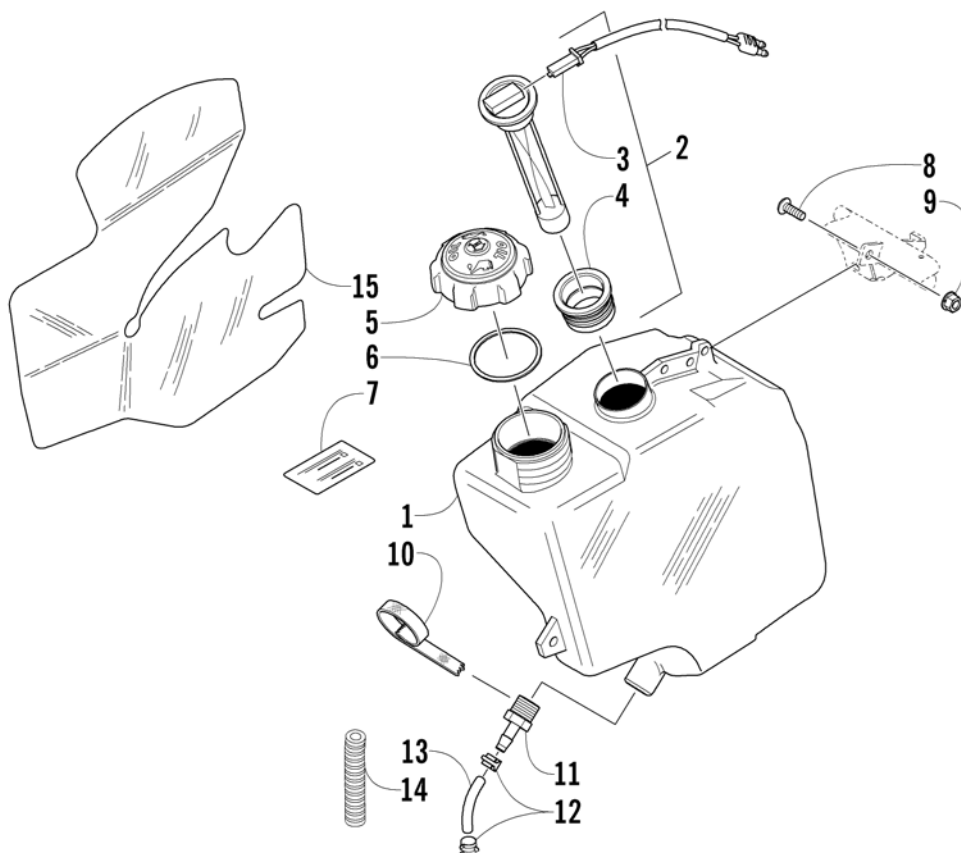

OIL TANK ASSEMBLY

0739-449

Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	1670-026	1	Tank, Oil	9	8047-366	1	Nut, Lock
2	0609-503	1	Sensor, Low Oil - Assembly (inc. 3-4)	10	0670-289	AR	Tape, Teflon
3	0609-518	1	● Switch, Oil Sensor w/Harness	11	0670-733	1	Outlet, Oil Tank
4	0609-237	1	● Seal, Grommet - Oil Sensor	12	1623-351	2	Clamp, Hose
5	0670-871	1	Cap, Tank (inc. 6)	13	6101-001	AR	Hose, Oil Line - 100 ft
6	0109-733	1	● Seal, Tank Cap		6101-009	AR	Hose, Oil Line - 50 ft
7	1611-564	1	Decal, Oil Tank	14	0716-558	AR	Conduit, Flexible - 10 ft
8	8017-580	1	Screw, Machine	15	1670-234	1	Foil, Protective

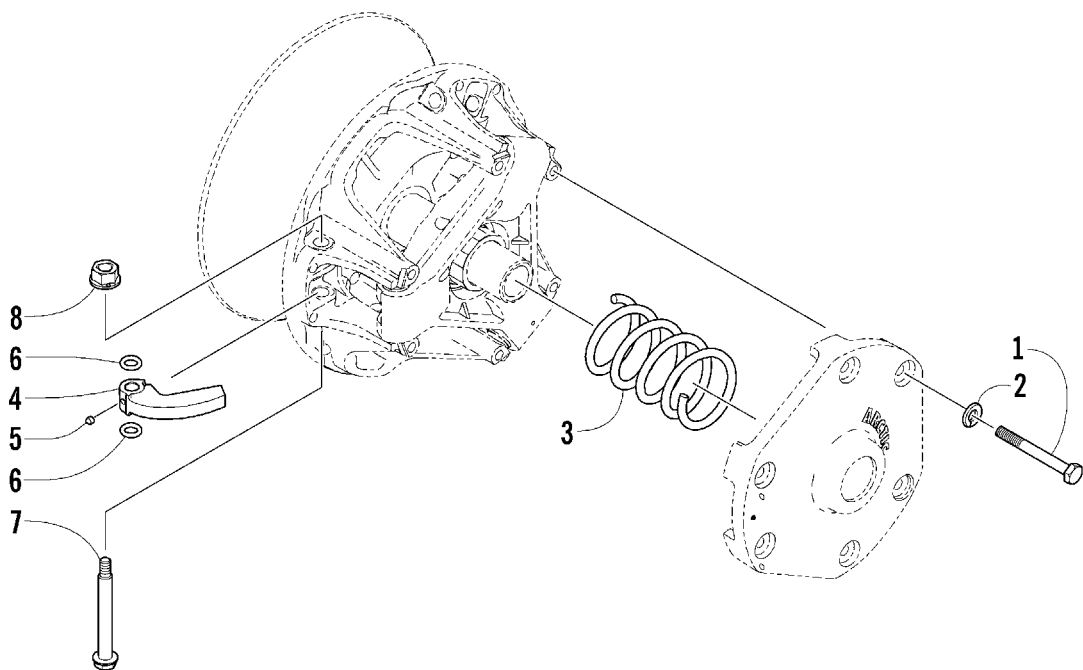


Cam Arm Kit - p/n 4639-674 (inc. 5-8)

DRIVE CLUTCH

(Uncalibrated Drive Clutch - p/n 0746-168)

0741-939

Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	1623-442	6	Screw, Machine	5	1623-183	3	● Screw, Set
2	8051-212	6	Washer, Lock - Spring	6	1602-692	6	O-Ring
3	0646-149	1	Spring, Drive Clutch - Red	7	0646-747	3	Pin, Cam Arm
	0646-147	1	Spring, Drive Clutch - Yellow/Green (Over 9,000 ft Alt.)	8	8048-366	3	Nut, Lock
4	0746-786	3	Arm, Cam (inc. 5)				
	0746-678	3	Arm, Cam (inc. 5) (6-9,000 ft Alt.)				
	0746-663	3	Arm, Cam (inc. 5) (Over 9,000 ft Alt.)				

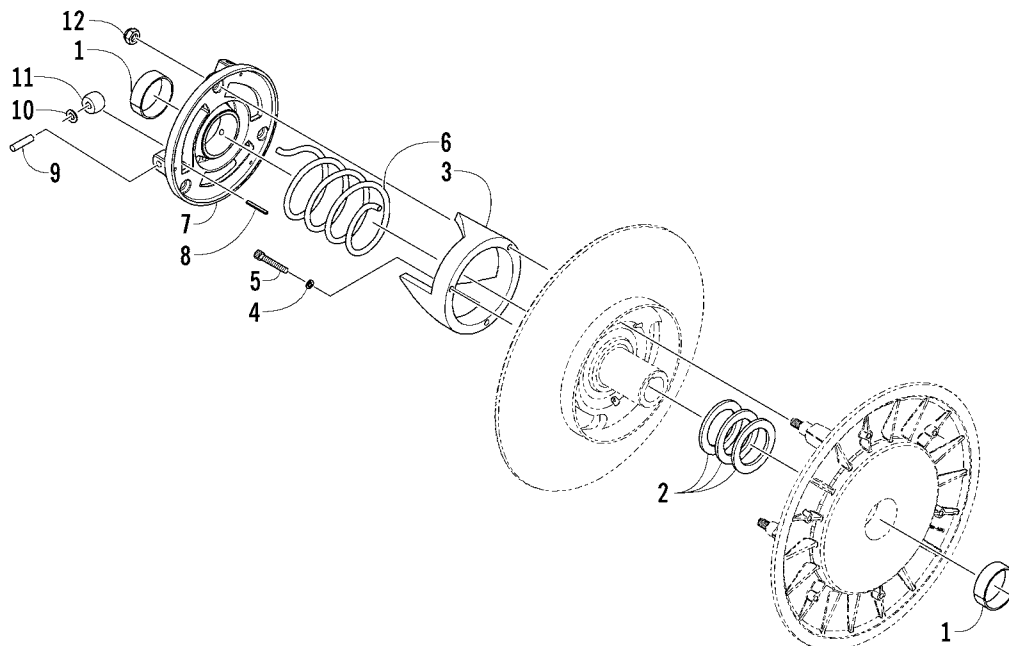


DRIVEN CLUTCH

(Assembly p/n 0726-243)

0741-985

Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	0648-009	2	Bearing	7	0748-018	1	Plate, Roller - Assembly (inc. one No. 1 and 8-11)
2	0148-198	1	Washer, Thrust: 0.030 in.	8	8070-224	3	● Pin, Spring
	0148-199	2	Washer, Thrust: 0.060 in.	9	0648-097	3	● Pin, Cam Roller
3	0648-125	1	Bracket, Torque - 51°/49°	10	0648-082	3	● Washer, Thrust - Cam Roller
4	8051-152	3	Washer, Lock	11	0648-079	3	● Roller, Cam
5	8005-404	3	Screw, Socket Head	12	8040-426	3	Nut, Lock
6	0148-227	1	Spring, Driven Clutch - Yellow				

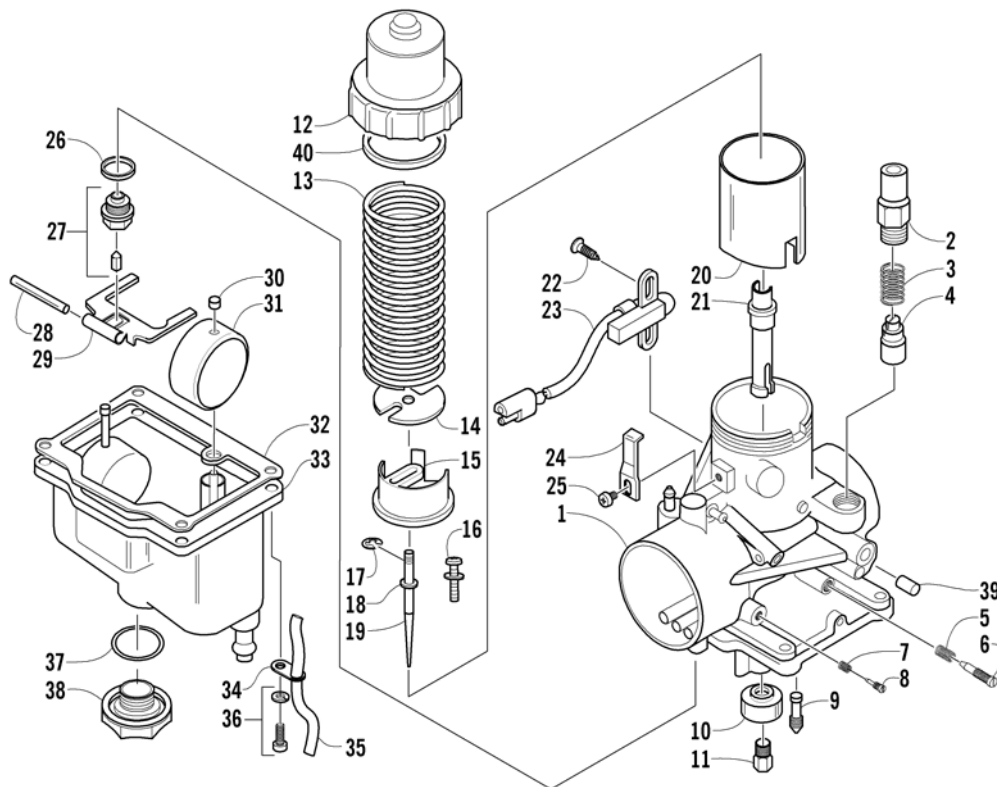


CARBURETOR

VM34-625 (Complete Assembly p/n 1670-846)

0738-474 *Not a Service Part


Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	*	1	Mixing Body Assembly	22	0623-137	2	Screw, Self-Tapping
2	6505-188	1	Cap, Starter Plunger	23	0630-076	1	Switch, Magnetic - Carburetor
3	6505-033	1	Spring, Starter Plunger	24	6505-186	1	Plate
4	6505-035	1	Starter Plunger	25	6505-036	1	Screw w/Spring Washer
5	6505-021	1	Spring, Throttle Stop Screw	26	6505-024	1	Washer
6	6505-022	1	Screw, Throttle Stop	27	6505-160	1	Needle Valve Assembly 1.5
7	6505-020	1	Spring, Pilot Air Screw	28	6505-153	1	Pin, Float Arm
8	6505-019	1	Screw, Pilot Air	29	6505-027	1	Arm, Float
9	6505-047	1	Pilot Jet 40	30	6505-010	2	Cap
	6505-029	1	Pilot Jet 35 (Over 6,000 ft Alt.)	31	6505-009	2	Float
10	6505-620	1	Ring, Baffle	32	6505-030	1	Gasket, Float Chamber
11	6505-137	1	Main Jet 220**	33	6505-632	1	Chamber, Float
12	6505-558	1	Top, Mixing Body	34	6505-608	2	Plate, Hose
13	6506-393	1	Spring, Piston Valve	35	6505-624	2	Hose
14	6505-630	1	Plate	36	6505-014	4	Screw w/Spring Washer
15	6505-556	1	Block, Magnet	37	6505-622	1	O-Ring
16	6505-559	1	Screw w/Washer	38	6505-617	1	Screw, Drain
17	6505-610	1	E-Clip	39	6505-569	1	Cap
18	6505-437	1	Washer, E-Clip	40	6505-607	1	Washer
19	<u>6506-408</u>	1	Jet Needle 6CE25-3				
20	6505-561	1	Piston Valve CA 3.0				
21	<u>6506-407</u>	1	Needle Jet P-4M				
							**Alternate Carburetor Parts on Page 49

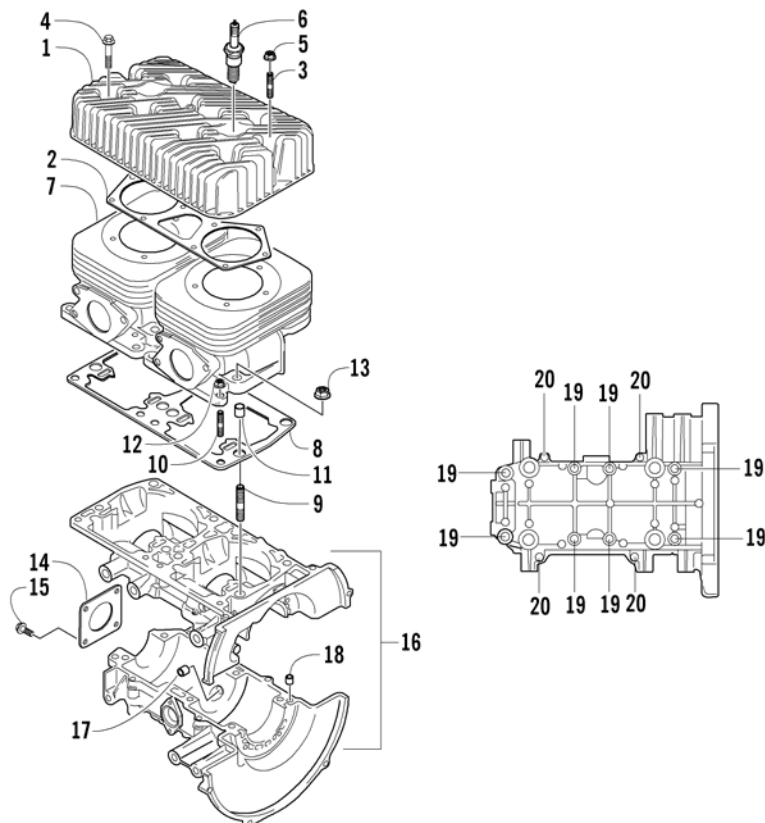

CRANKCASE AND CYLINDER

0739-400


Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	<u>3007-477</u>	1	Head, Cylinder	11	3004-975	4	Pin, Dowel
2	3005-998	1	Gasket, Head	12	<u>3007-373</u>	4	Nut
3	<u>3007-478</u>	2	Bolt, Stud	13	<u>3007-391</u>	4	Nut
4	<u>3007-399</u>	8	Bolt	14	3004-775	1	Plate, Oil Seal
5	<u>3007-390</u>	2	Nut	15	<u>3007-392</u>	4	Bolt
6	0217-709	2	Plug, Spark (BR9EYA)	16	3006-461	1	Crankcase Assembly (inc. 17-20)
7	<u>3007-479</u>	2	Cylinder Assembly	17	3003-289	1	● Bushing
8	3006-001	1	Gasket, Cylinder	18	3005-206	2	● Pin, Dowel
9	3005-207	8	Bolt, Stud	19	3005-410	8	● Screw, Cap
10	<u>3007-480</u>	4	Bolt, Stud	20	<u>3007-411</u>	4	● Screw, Cap

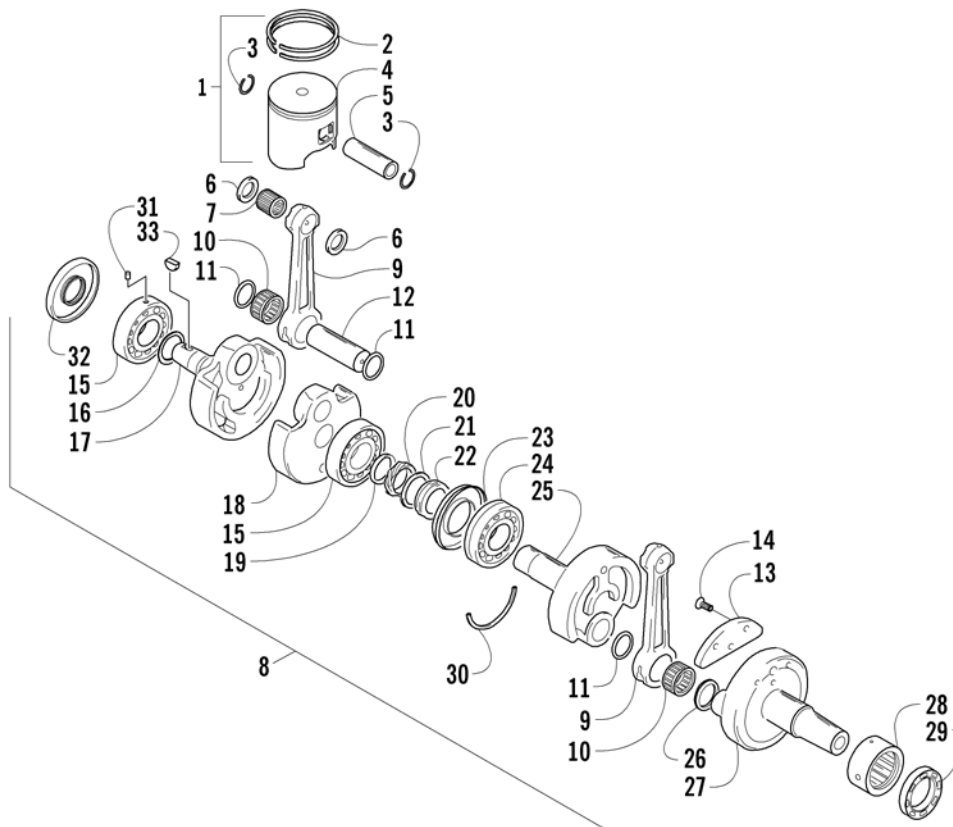

PISTON AND CRANKSHAFT

0739-401 *Not a Service Part


Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	3006-921	2	Piston Assembly (inc. 2-4)	18	3006-008	1	● Wheel, Crankshaft
2	3006-004	2	● Ring Set, Piston	19	3002-827	1	● Spacer
3	3003-537	4	● Circlip, Piston Pin	20	3005-373	1	● Gear, Oil Pump Drive
4	*	2	● Piston	21	3003-112	1	● Ring, Seal
5	3004-830	2	Pin, Piston	22	3003-171	1	● Race, Crankshaft Seal
6	3004-780	4	Washer	23	3003-306	1	● Retainer, Crankshaft Seal
7	3005-993	2	Bearing, Piston Pin	24	3005-992	1	● Bearing
8	3006-462	1	Crankshaft Assembly (inc. 9-28)	25	3006-009	1	● Crankshaft - Center
9	<u>3007-482</u>	2	● Rod, Connecting	26	3003-800	1	● Washer, Crank Pin Bearing
10	3004-514	2	● Bearing, Crank Pin	27	3006-010	1	● Crankshaft - Left
11	3005-989	3	● Shim	28	3005-994	1	● Bearing, Crankshaft - Left
12	3006-006	1	● Pin, Crank	29	3006-465	1	Seal, Oil
13	3006-011	1	● Balancer	30	3003-216	1	C-Ring, Crankshaft
14	<u>3007-440</u>	3	● Screw, Machine	31	3003-658	4	Pin, Alignment
15	3006-464	2	● Bearing, Crankshaft	32	3005-995	1	Seal, Oil
16	3008-501	1	● Washer	33	3010-070	1	Key
17	3006-007	1	● Crankshaft - Right				

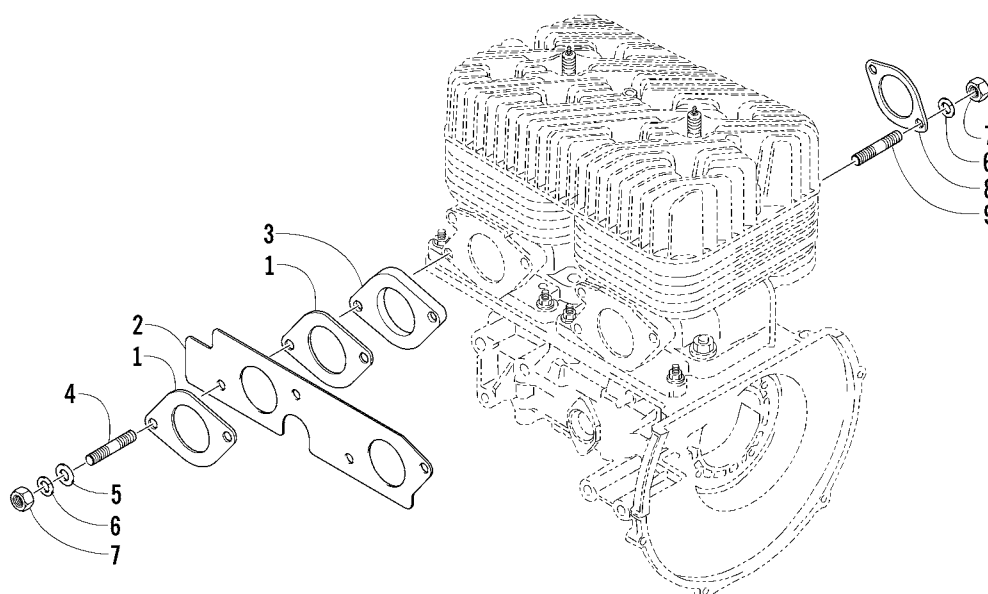

INTAKE ASSEMBLY

0741-927


Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	3006-615	4	Gasket, Intake Manifold	6	<u>3007-417</u>	8	Washer, Lock
2	3006-466	1	Deflector, Heat	7	<u>3007-416</u>	8	Nut
3	3006-075	2	Insulator, Intake Manifold	8	3003-503	4	Gasket, Exhaust
4	<u>3007-481</u>	4	Bolt, Stud	9	<u>3007-419</u>	4	Bolt, Stud
5	<u>3007-418</u>	4	Washer				

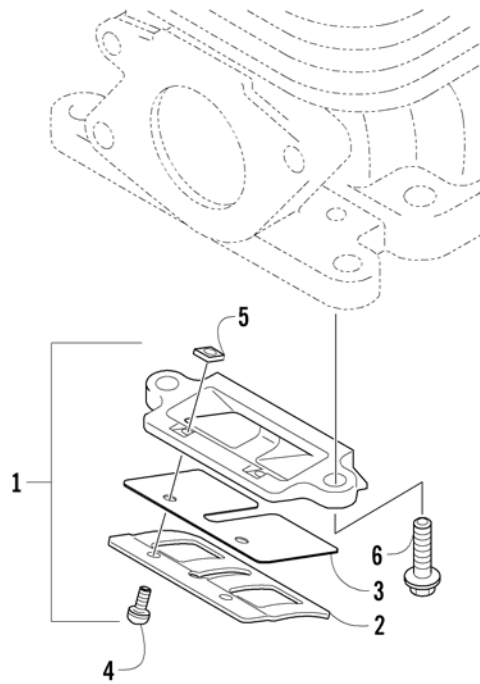

REED VALVE ASSEMBLY

0739-381


Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	3006-012	2	Valve, Reed - Assembly (inc. 2-5)	4	3006-083	4	● Screw
2	3006-013	2	● Stopper, Reed Valve	5	3006-084	4	● Plate
3	3006-014	2	● Valve, Reed	6	3006-529	4	Bolt

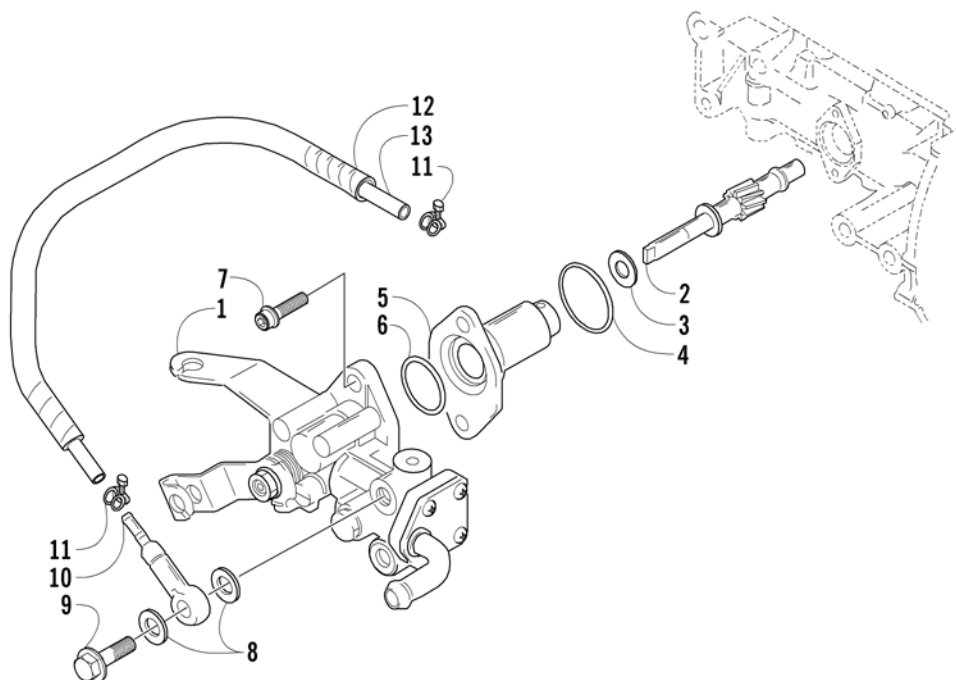

OIL PUMP

0739-382


Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	<u>3007-429</u>	1	Oil Pump Assembly	8	3402-009	2	Gasket
2	3002-770	1	Gear, Oil Pump Driven	9	3004-346	1	Bolt, Union
3	3002-749	1	Shim	10	3005-224	1	Valve, Check
4	3005-126	1	O-Ring	11	3003-218	2	Clamp, Hose
5	3003-749	1	Retainer, Oil Pump	12	3005-032	1	Protector
6	3008-030	1	O-Ring	13	3005-225	2	Hose, Oil Pump
7	<u>3007-471</u>	2	Bolt				

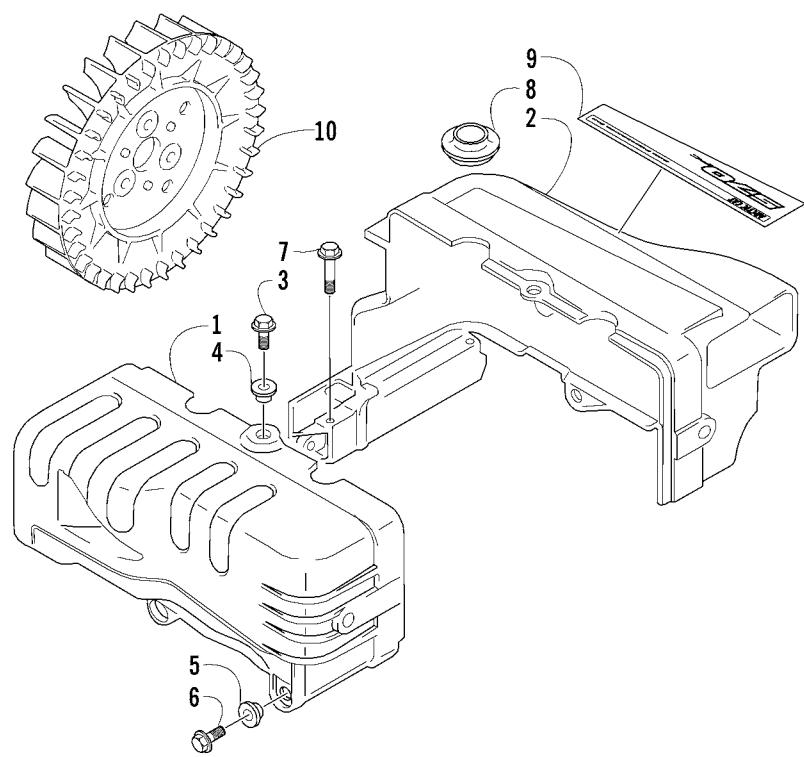

CYLINDER COWLING ASSEMBLY

0741-928


Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	3006-017	1	Cowling, Front	6	3006-530	7	Bolt
2	3007-483	1	Cowling, Rear	7	3007-485	2	Bolt
3	3007-484	1	Bolt	8	3005-996	2	Grommet
4	3006-089	1	Spacer	9	4611-448	1	Decal, "570"
5	3006-088	7	Spacer	10	3006-016	1	Fan, Cooling

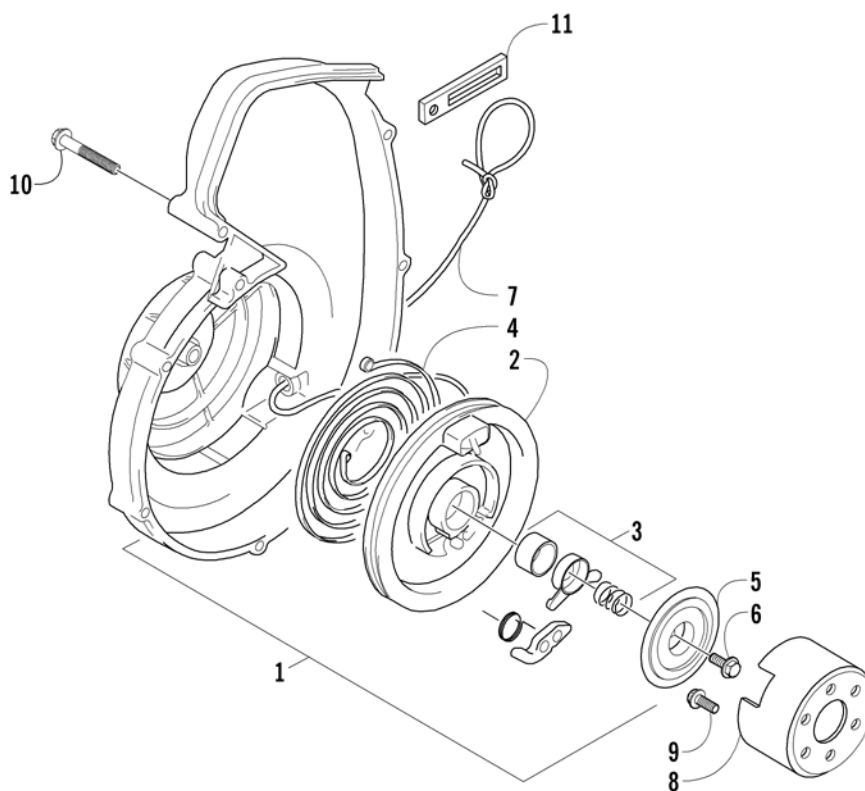

RECOIL STARTER

0739-386


Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	<u>3007-486</u>	1	Starter Assembly (inc. 2-6)	7	3006-889	1	Rope, Starter
2	3006-090	1	● Roller, Starter	8	3006-020	1	Pulley, Starter
3	3006-091	1	● Ratchet Set	9	3006-463	3	Bolt
4	<u>3007-487</u>	1	● Spring	10	<u>3007-488</u>	8	Bolt
5	3006-092	1	● Plate, Friction	11	3002-964	1	Clamp, Wire
6	3006-093	1	● Bolt				

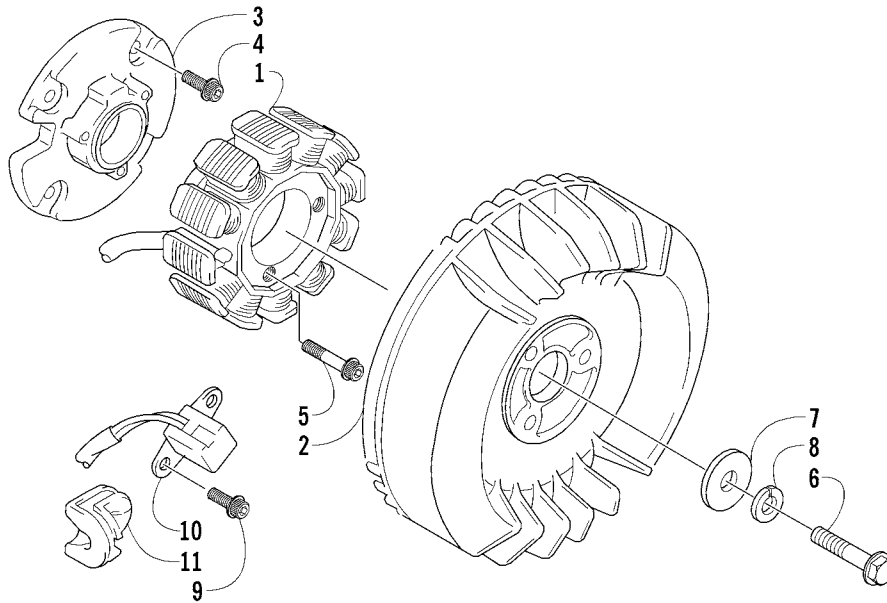

MAGNETO

0741-929


Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	3005-636	1	Stator Assembly	7	3005-987	1	Washer
2	3006-467	1	Rotor/Flywheel	8	<u>3007-424</u>	1	Washer, Lock
3	3006-022	1	Base, Stator - Plate	9	<u>3007-433</u>	2	Screw
4	<u>3007-449</u>	4	Bolt	10	3005-926	1	Sensor, Ignition Timing
5	<u>3007-489</u>	3	Bolt	11	3006-531	1	Grommet, Magneto Lead Wire
6	3006-476	1	Bolt				

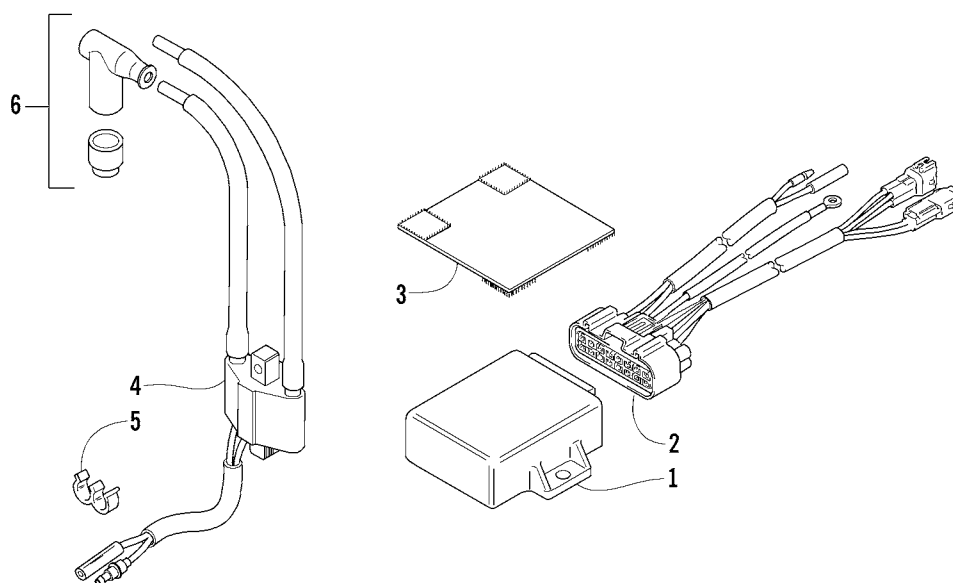

ELECTRICAL

0739-394

Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	<u>3007-490</u>	1	CDI Unit	4	3006-534	1	Coil, Ignition
2	3006-533	1	Harness, CDI	5	3005-387	1	Clamp
3	3003-474	1	Cover, Connector	6	3006-367	2	Cap, Spark Plug

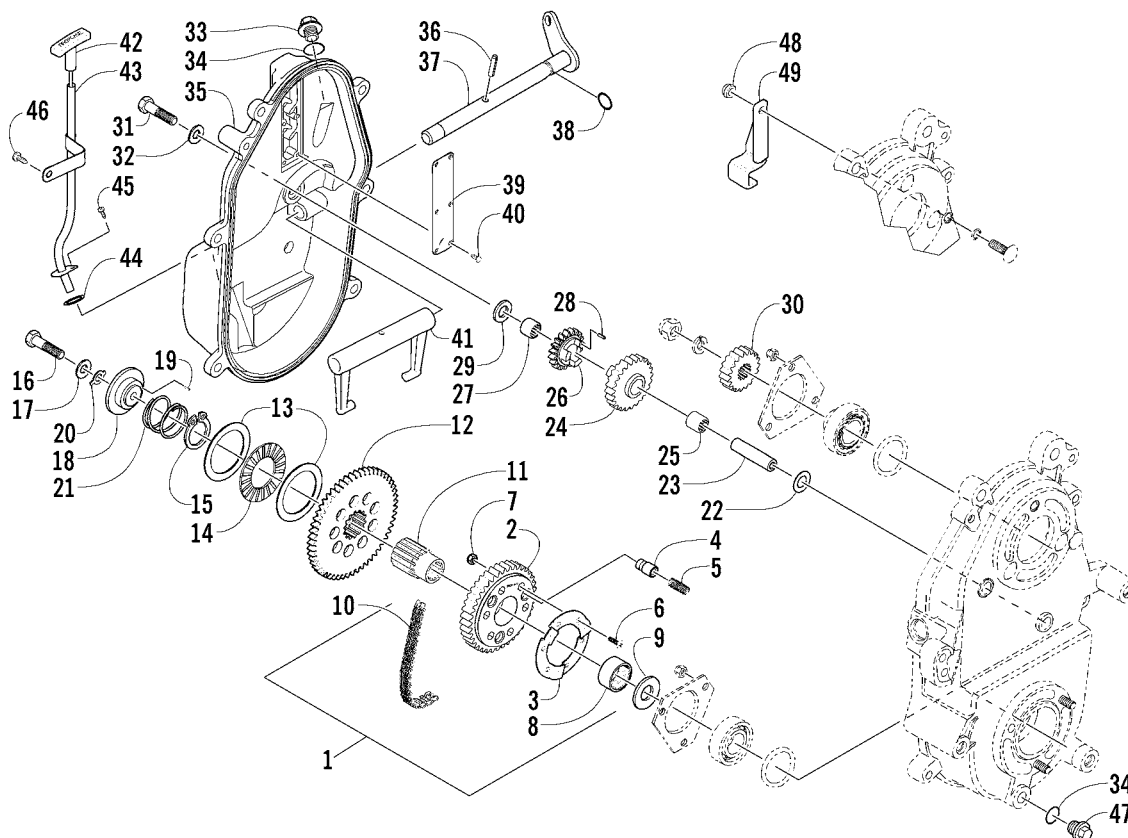


DRIVE/REVERSE DROPCASE ASSEMBLY (Optional)

(Optional Kit p/n 1639-921 Low/High Alt.)

0738-004 *Not a Service Part


Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	0702-170	1	Sprocket Assembly - 39T (inc. 2-8)	26	0702-366	1	Idler, Reverse Assembly - 19T (inc. 27)
2	*	1	● Sprocket	27	1602-045	1	● Bearing
3	0602-144	1	● Retainer, Spring	28	0602-366	1	Aligner, Idler - Pin
4	0602-133	3	● Pin, Slip	29	1602-044	1	Washer, Thrust
5	0602-138	3	● Spring, Compression	30	0602-444	1	Sprocket - 19T
6	0623-182	6	● Screw, Cap	31	8002-130	1	Screw, Cap
7	0123-430	6	● Nut, Lock	32	8050-242	1	Washer
8	0602-016	1	● Bearing	33	0623-293	2	Plug, Drain (One Included in Kit)
9	0602-012	1	Spacer, Shaft	34	1602-213	3	O-Ring
10	1602-041	1	Chain - 70P	35	1602-222	1	Cover, Dropcase
11	1602-048	1	Extension, Driveshaft	36	0623-542	1	Pin, Spring
12	0702-048	1	Gear, Reverse - 55T (inc. 13-15)	37	0702-291	1	Shaft, Shift Fork
13	0602-023	2	● Washer, Thrust	38	0602-021	1	Seal, O-Ring
14	0602-022	1	● Bearing, Thrust	39	1602-151	1	Cover, Oil Vent
15	0602-024	1	● Ring, Retaining	40	0623-081	6	Screw, Self-Tapping
16	8002-230	1	Screw, Cap	41	0602-085	1	Fork, Shift
17	8050-272	1	Washer	42	1602-107	1	Stick, Oil Level
18	0702-372	1	Retainer, Shaft (inc. 19)	43	1602-106	1	Tube, Oil Level Stick
19	8070-153	1	● Pin, Spring	44	0605-014	1	O-Ring, Oil Level Stick Tube
20	1602-046	1	Washer, Tab Lock	45	0623-914	1	Screw, Self-Tapping
21	0602-028	1	Spring, Return	46	0623-640	1	Screw, Self-Tapping
22	0602-215	1	Spacer, Reverse Idler	47	0602-479	1	Plug, Drain - Magnetic
23	0602-094	1	Shaft, Reverse	48	0623-122	1	Nut, Lock
24	0702-260	1	Idler, Reverse Assembly - 24T (inc. 25)	49	0602-466	1	Bracket, Chain Backing
25	0602-018	1	● Bearing				

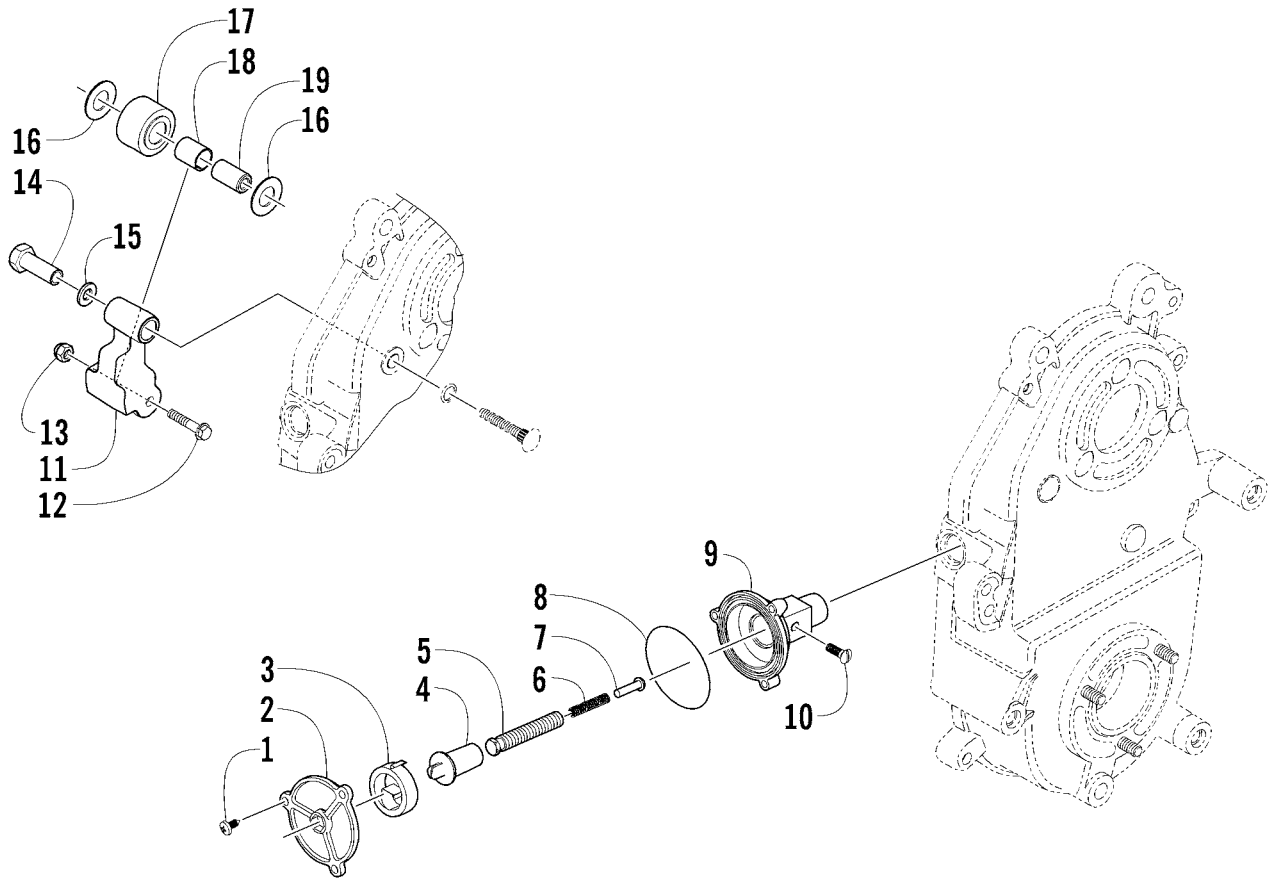

DROPCASE CHAIN TENSION ASSEMBLY (Optional)

0737-922

Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	0623-526	3	Screw, Self-Tapping	11	0602-675	1	Arm, Chain Roller
2	0602-645	1	Cover, Adjuster Housing	12	8002-045	1	Screw, Cap
3	0602-803	1	Spring, Power - Adjuster Shaft	13	0623-122	1	Nut, Lock
4	1602-536	1	Shaft, Chain Adjuster	14	0602-681	1	Nut, Roller Arm
5	0602-748	1	Screw, Chain Adjuster	15	8050-222	1	Washer
6	0602-901	1	Spring, Compression	16	0623-525	2	Washer
7	0602-804	1	Rivet, Button Head	17	0702-129	1	Roller, Chain Tightener (inc. 18)
8	0602-801	1	O-Ring, Cover - Chain Adjuster	18	0602-383	1	● Bearing, Chain Tightener
9	0602-746	1	Housing, Screw - Chain Adjuster	19	0602-676	1	Shaft, Chain Roller
10	0623-541	1	Screw, Machine				

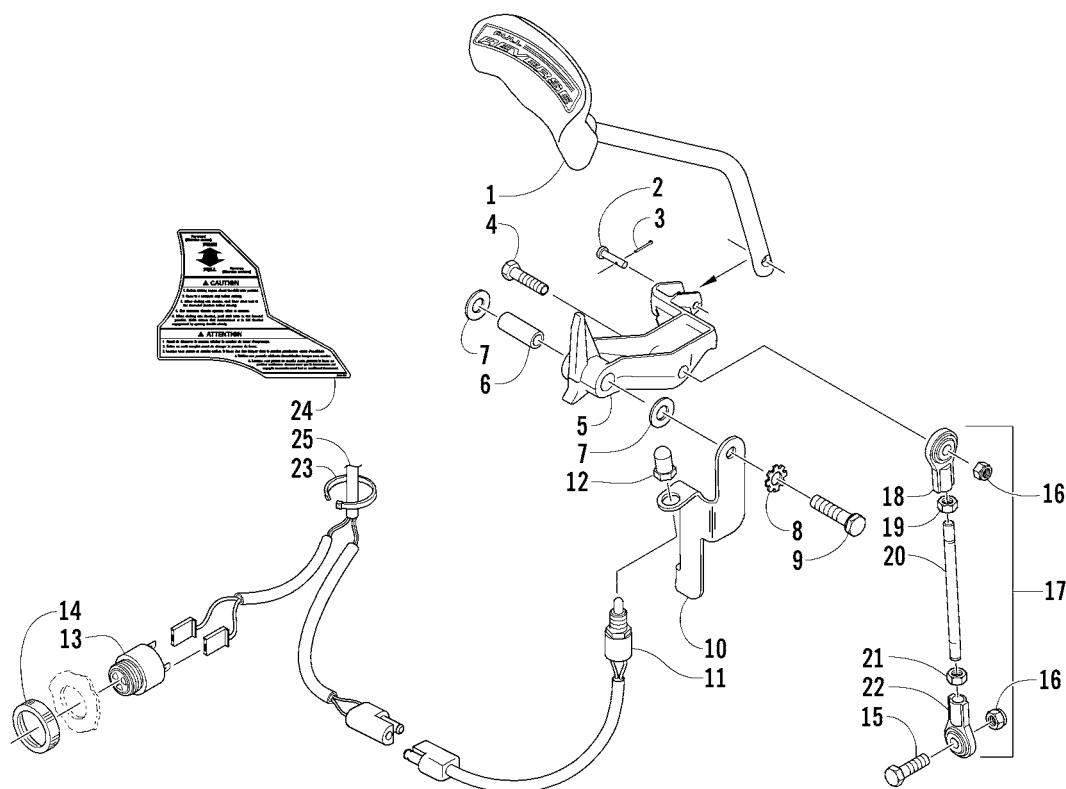

REVERSE SHIFT LEVER ASSEMBLY (Optional)

(Optional Kit p/n 1639-005)

0739-431 *Not a Service Part **Included in Kit








Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	0602-978	1	Lever	15	8002-132	1	Screw, Cap
2	0623-641	1	Pin, Clevis	16	8040-426	2	Nut, Lock
3	0117-868	1	Pin, Cotter	17	0702-347	1	Linkage, Shifting - Assembly (inc. 18-22)
4	8002-137	1	Screw, Cap	18	0602-305	1	● Rod End - Left
5	0702-743	1	Shift Pivot	19	0623-260	1	● Nut, Jam - Left
6	1602-830	1	Axle	20	*	1	● Rod, Linkage
7	8050-247	2	Washer	21	0123-144	1	● Nut, Jam - Right
8	8053-242	1	Washer, Lock - External Tooth	22	0602-322	1	● Rod End - Right
9	8002-140	1	Screw, Cap	23	0123-788	3	Cable Tie - 8 in.**
10	0702-465	1	Bracket, Reverse Switch	24	3611-026	1	Decal, Reverse**
11	0630-011	1	Switch, Alarm		3611-364	1	Decal, Reverse**
12	0630-013	1	Boot, Switch		3611-580	1	Decal, Reverse**
13	0630-010	1	Alarm, Reverse (inc. 14)	25	0686-120	1	Harness, Wiring - Alarm**
14	0630-017	1	● Ring, Retaining				

ALTERNATE CARBURETOR PARTS

MAIN JETS AVAILABLE			
JET	P/N	JET	P/N
120	6505-270	400	6505-124
130	6505-216	410	6505-212
140	6505-217	420	6505-125
150	6505-168	430	6505-146
160	6505-064	440	6505-126
170	6505-065	450	6505-147
180	6505-056	460	6505-127
190	6505-066	470	6505-148
200	6505-144	480	6505-149
210	6505-145	490	6505-150
220	6505-137	500	6505-151
230	6505-067	510N	6506-378
240	6505-079	520	6505-530
250	6505-068	520N	6506-379
260	6505-017	530N	6506-380
270	6505-069	540	6505-531
280	6505-080	540N	6506-381
290	6505-123	550N	6506-382
300	6505-128	560	6505-172
310	6505-136	560N	6506-383
320	6505-074	580	6505-211
330	6505-070	600	6505-532
340	6505-076	620	6505-174
350	6505-071	640	6505-533
360	6505-038	660	6505-535
370	6505-072	680	6505-169
380	6505-077	700	6505-536
390	6505-078	720	6505-538

PISTON VALVES AVAILABLE		
SLIDE	CARBURETOR SIZE (mm)	P/N
2.0	28-30	6505-048
3.0	28-30	6505-161
3.0	30	6505-510
3.5	30	6505-528
2.5	32-34	6505-246
3.5	32-34	6505-248
2.5	34	6505-500
2.5	34	6505-614*
3.0	34	6505-507
3.0	34	6505-561*
2.0	36	6505-877
3.0	36	6505-592*
3.0	38	6505-643
3.5	38	6505-436
3.5	38	6505-525
3.5	38	6505-526
3.5	38	6505-554
3.5	38	6505-613*
4.0	38	6505-504
3.5	40	6505-575*
1.0	40-44	6505-092
2.5	40-44	6505-570
3.5	40-44	6505-548
3.0	40-44	6505-809
3.5	40-44	6505-813*

* For models with carburetor switch.

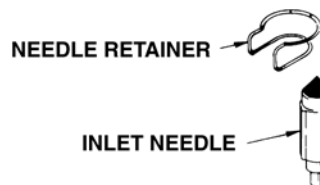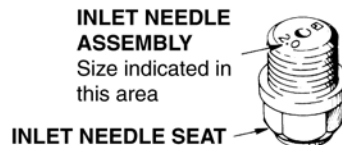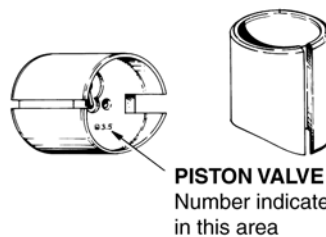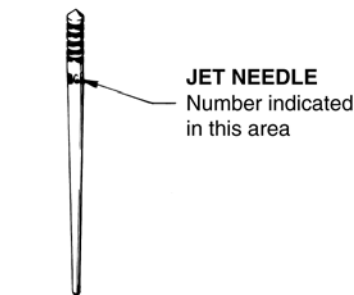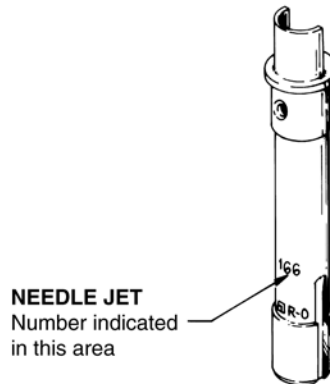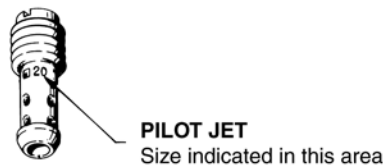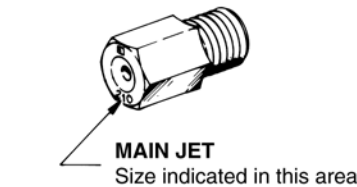

NEEDLE JETS AVAILABLE			
NEEDLE JET	P/N	NEEDLE JET	P/N
O-6 (480)	6505-931	Q-3 (480)	6505-599
O-8 (480)	6505-824	Q-4 (166)	6505-214
P-0 (159)	6505-155	Q-4 (480)	6505-636
P-0 (166)	6505-007	Q-5 (159)	6505-119
P-0 (169)	6505-051	Q-5 (166)	6505-520
P-0 (480)	6505-598	Q-5 (480)	6505-580
P-2 (480)	6505-595	Q-6 (166)	6505-506
P-4 (159)	6505-221	Q-8 (480)	6506-112
P-4 (169)	6505-540	R-0 (166)	6505-505
P-4 (180)	6505-164	Z-4 (224)	6505-808
P-5 (480)	6505-542	Z-5 (224)	6505-541
P-6 (159)	6505-247	Z-6 (224)	6505-597
P-6 (166)	6505-268	Z-8 (224)	6505-572
P-6 (480)	6505-539	Z-9 (224)	6505-618
P-8 (159)	6505-298	AA-0 (224)	6505-544
P-8 (166)	6505-433	AA-1 (224)	6505-609
P-8 (480)	6505-543	AA-3 (224)	6505-604
Q-0 (159)	6505-260	AA-4 (224)	6505-605
Q-0 (166)	6505-190	AA-5 (224)	6505-099
Q-0 (480)	6505-529	AA-8 (224)	6505-571
Q-2 (166)	6505-508	BB-0 (224)	6505-182
Q-2 (480)	6505-641	BB-5 (224)	6505-180

JET NEEDLES AVAILABLE	
JET NEEDLE	P/N
6CH3	6505-519
6DH2	6505-252
6DH3	6505-509
6DH4	6505-003
6DH7	6505-215
6DH8	6505-236
6DF7	6506-297
7DJ2	6505-549
7DH2	6505-097
7DH5	6505-814

INLET NEEDLE ASSEMBLIES AVAILABLE		
SEAT DIA.	CARB. SIZE (mm)	P/N
1.5 mm (Steel)	28, 30, 32, 34	6505-026
1.5 mm (Viton)	28, 30, 32, 34	6505-160
1.5 mm (Steel)	28 — 34 GVM	6505-245
1.5 mm (Viton)	36, 38, 40, 44	6505-171
1.8 mm (Viton)	36, 38, 40, 44	6505-175
2.0 mm (Viton)	36, 38, 40, 44	6505-176

PILOT JETS AVAILABLE			
JET NO.	P/N	JET NO.	P/N
17.5	6505-218	35	6505-029
20	6505-138	40	6505-047
22.5	6505-310	45	6505-278
25	6505-075	50	6505-262
27.5	6505-503	52.5	6505-261
30	6505-073	55	6505-255

RELATED ITEMS

2007 Z 570

(Model No. S2007ZADFCUSO)

(Model No. S2007ZADLXUSO - LX)

4639-653	Altitude Kit (5-9000 ft)	3639-727	Hat Bag
4639-654	Altitude Kit (Over 9000 ft)	1639-507	Hitch, Pivot
4639-653	Altitude Kit (5-9000 ft) - LX	2257-732	Manual, Illustrated Parts
4639-654	Altitude Kit (Over 9000 ft) - LX	2257-617	Manual, Operator's (E)
0639-776	Backrest Kit (Fixed)	2257-834	Manuel de opérateur (F)
3639-310	Carbide Wear Bar, 4 in. w/Hardweld	2639-477	Mirror (Right or Left)
3639-311	Carbide Wear Bar, 6 in. w/Hardweld	0652-105	Paint, Hood - Orange (1/2 oz)
3639-312	Carbide Wear Bar, 8 in. w/Hardweld	0652-112	Paint, Metal - Platinum (1/2 oz)
0636-062	Choke Lever Kit	1639-921	Reverse Dropcase Kit (High & Low Alt)
3639-019	Cover, Machine (Storage)	1639-005	Reverse Shift Lever Kit
4639-395	Cover, Machine (Deluxe)	3639-723	Seat Trunk
2639-148	Electric Start Kit	1639-417	Skid Plate (Black)
2639-147	Gasket Set	4639-322	Sway Bar
2257-231	Handbook, Safety (E/F)	2639-628	Tachometer
3639-721	Handlebar Bag	4639-133	Tank Jacket
0639-456	Handlebar Muffs	3639-961	Windshield Flair Bags
3639-309	Hardweld Wear Bars		

■ **NOTE:** For a complete list of related items, refer to the current accessory catalog.

