

2017

PARTS MANUAL



ZR[®] 9000 RR 137

 
S2017ZXXRRUSG



Contents

A-ARM AND SWAY BAR ASSEMBLY [99578]	1
AIR INTAKE ASSEMBLY [104608]	3
BATTERY AND TRAY ASSEMBLY [104545]	5
BELT GUARD ASSEMBLY [104541]	6
CAMSHAFT, CHAIN, AND VALVE ASSEMBLY [104549]	7
CHAIN CASE ASSEMBLY [105035]	9
CONSOLE ASSEMBLY [105039]	11
COOLING ASSEMBLY [104957]	12
CRANKCASE ASSEMBLY [104546]	14
CYLINDER HEAD ASSEMBLY [104547]	16
DRIVE CLUTCH [105043]	17
DRIVE TRAIN SHAFTS AND BRAKE ASSEMBLIES [105034]	18
DRIVEN CLUTCH [104788]	20
ENGINE AND RELATED PARTS [105019]	21
EXHAUST ASSEMBLY [104605]	22
FRONT BUMPER AND FRAME ASSEMBLY [104966]	24
FRONT SHOCK ABSORBER ASSEMBLY [104094]	26
FRONT SUSPENSION SHOCK ABSORBER [103941]	27
FUEL PUMP ASSEMBLY [104543]	28
GAS TANK ASSEMBLY [104542]	29
HANDLEBAR AND CONTROLS [105033]	30
HEADLIGHT AND WIRING ASSEMBLIES [105040]	32
HOOD ASSEMBLY [105037]	34
HYDRAULIC BRAKE CONTROL ASSEMBLY [97987]	36
IDLER WHEEL ASSEMBLY [104089]	37
MAGNETO AND COVER ASSEMBLY [104555]	39
OIL PAN ASSEMBLY [104550]	41
OIL PUMP ASSEMBLY [104552]	42
OIL TANK ASSEMBLY [104536]	43
PISTON AND CRANKSHAFT ASSEMBLY [104548]	45
REAR SUSPENSION FRONT ARM ASSEMBLY [103944]	47
REAR SUSPENSION FRONT ARM SHOCK ABSORBER [103945]	48
REAR SUSPENSION REAR ARM ASSEMBLY [103946]	49
REAR SUSPENSION REAR ARM SHOCK ABSORBER [103947]	51
SEAT ASSEMBLY [105042]	52
SKI AND SPINDLE ASSEMBLY [102891]	53
SKID PLATE AND SIDE PANEL ASSEMBLY [105041]	54
SLIDE RAIL AND TRACK ASSEMBLY [103956]	56
STARTER MOTOR ASSEMBLY [104556]	58
STEERING POST ASSEMBLY [105032]	59
STEERING SUPPORT ASSEMBLY [104578]	60
THROTTLE BODY ASSEMBLY [104554]	62
TIE ROD ASSEMBLY [104963]	64
TUNNEL, REAR BUMPER, AND SNOWFLAP ASSEMBLY [105036]	65
TURBOCHARGER ASSEMBLY [104557]	68
WATER PUMP ASSEMBLY [104553]	69
WINDSHIELD AND INSTRUMENTS ASSEMBLIES [105038]	71


A-ARM AND SWAY BAR ASSEMBLY [99578]

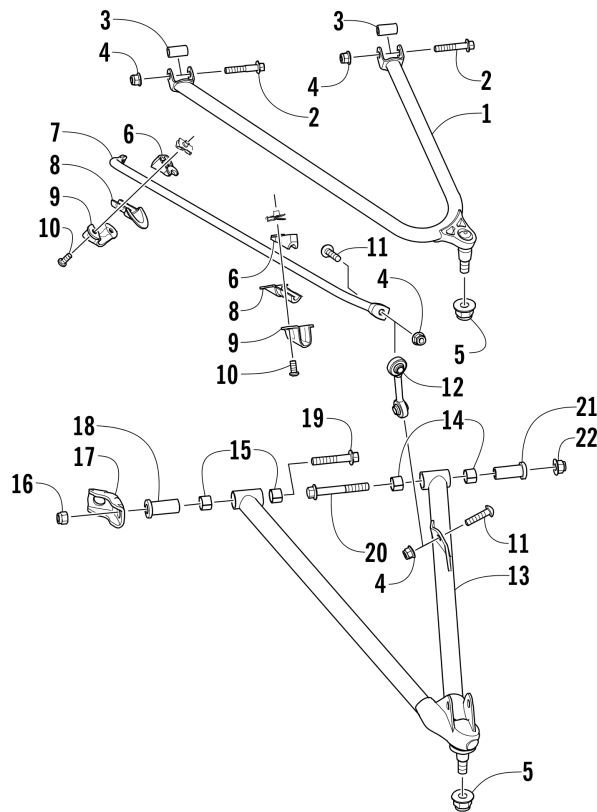

Item	Part No.	New Part	Qty	Name	Context	Footnote
1	2703-956		1	A-Arm, Upper - Right - White		
1	2703-957		1	A-Arm, Upper - Left - White		
2	8408-845		4	Screw, Cap		
3	2603-841		4	Axle		
4	8427-802		8	Nut, Lock		
5	8427-202		4	Nut, Lock		
6	2603-946		2	Bushing		
7	2703-793		1	Bar, Sway		
8	2603-947		2	Bushing		
9	2603-857		2	Bracket, Mounting - Sway Bar		
10	8468-621		4	Screw, Machine		
11	8476-835		4	Screw, Cap		
12	3603-295		2	Link, Sway Bar		
13	3703-136		1	A-Arm, Lower - Right - White	(inc. 14-15)	
13	3703-137		1	A-Arm, Lower - Left - White	(inc. 14-15)	
14	1603-895		4	Bearing		
15	2603-911		4	Bearing		
16	1623-965		2	Nut, Lock		
17	2603-909		1	Brace, Lower A-Arm - Front		
18	2603-916		2	Axle, Inner - Lower A-Arm - Front		
19	1623-953		2	Screw, Cap		
20	8409-075		2	Screw, Cap		
21	2603-543		2	Axle, Lower A-Arm - Rear		

Item	Part No.	New Part	Qty	Name	Context	Footnote
22	8427-002		2	Nut, Lock		

 
AIR INTAKE ASSEMBLY [104608]

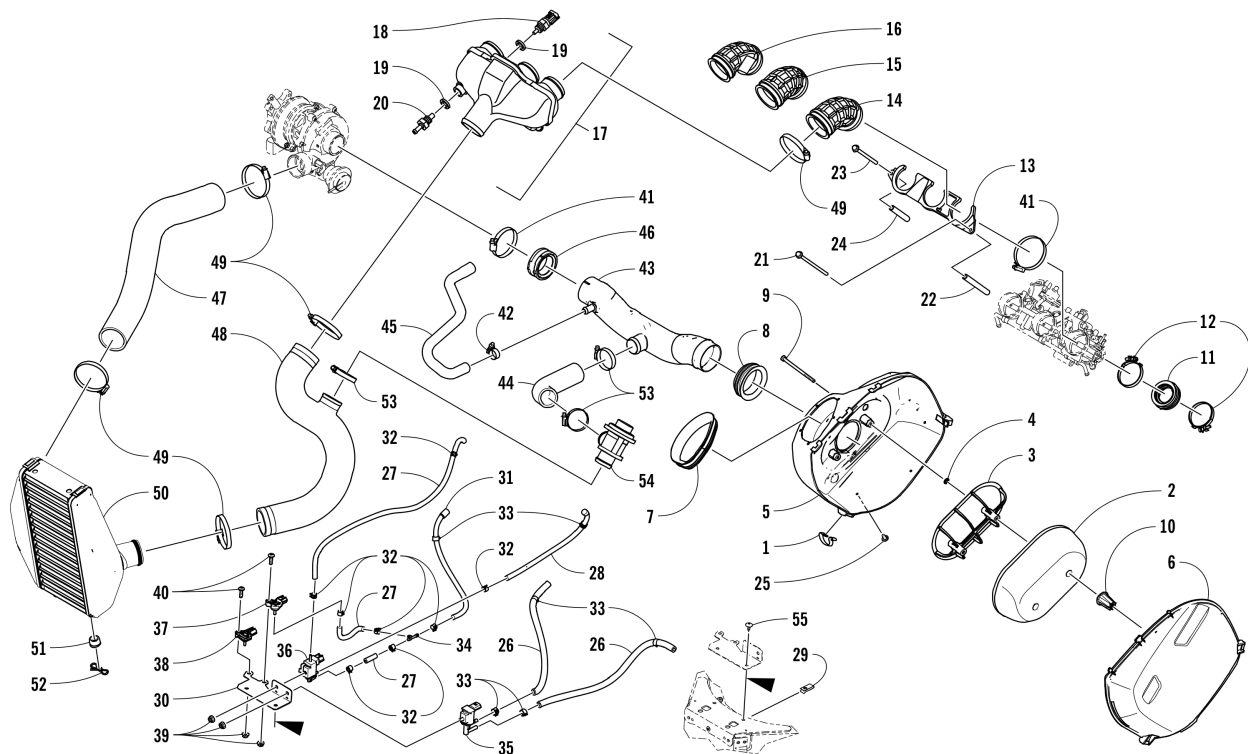

Item	Part No.	New Part	Qty	Name	Context	Footnote
1	0423-455		2	Clip, Spring		
2	0470-580		1	Filter, Air		
3	0470-731		1	Cage, Air Filter		
4	1623-409		2	Retainer, Pushnut		
5	2670-501	X	1	Silencer, Air		
6	2670-513	X	1	Cover, Air Silencer		
7	2670-552	X	1	Boot, Upper Plenum		
8	2670-567	X	1	Seal, Air Silencer		
9	8402-600		2	Screw, Cap		
10	2623-175	X	2	Knob		
11	3020-189		3	Boot, Intake		
12	3020-188		6	Clamp		
13	3020-375	X	1	Bracket		
14	3020-376	X	1	Joint		
15	3020-377	X	1	Joint		
16	3020-378	X	1	Joint		
17	3020-412		1	Manifold, Intake - Assembly	(inc. 18 and one No. 19)	
18	3020-380		1	Sensor		
19	3020-381		2	Washer		
20	3020-586		1	Fitting		
21	2623-127		1	Screw, Cap		
22	0608-752		1	Spacer, Intake - PTO		
23	2623-128		1	Screw, Cap		


Item	Part No.	New Part	Qty	Name	Context	Footnote
24	0608-753		1	Spacer, Intake - MAG		
25	2623-164	X	3	Screw, Self-Tapping		
26	0410-143		1	Hose - 25 ft		
27	0610-538		1	Hose - 25 ft		
28	0610-131	X	1	Hose, ABV Control		
29	1623-030		2	Clip, U-Nut		
30	0645-806	X	1	Bracket, Control - Solenoid		
31	1610-012	X	1	Hose, Boost Pressure		
32	1623-042		8	Clamp, 10mm		
33	1623-966		6	Clamp, Hose		
34	2623-137	X	1	Fitting		
35	3020-394	X	1	Valve, Solenoid - Waste Gate Control		
36	3020-395	X	1	Valve, Solenoid - Boost Control		
37	3020-398	X	1	Sensor, Pressure		
38	3020-399	X	1	Sensor, Pressure - MAP		
39	8424-602		4	Nut		
40	8468-620		2	Screw, Machine		
41	0423-066		4	Clamp		
42	2623-062		1	Clamp, Hose		
43	2670-502	X	1	Duct, Intake		
44	2670-549	X	1	Hose, Air Bypass Valve Outlet		
45	2670-540	X	1	Hose, Cut Off Valve/Intake Duct		
46	2670-568	X	1	Seal, Turbo Inlet		
47	2670-504	X	1	Hose, Compressor - Out		
48	2670-548	X	1	Hose, Intercooler - Out		
49	0423-019		7	Clamp		
50	2670-510	X	1	Intercooler		
51	0423-533		2	Grommet		
52	1623-546		2	Clip, Retaining		
53	2623-210	X	3	Clamp, Hose		
54	3020-382		1	Valve, Air Bypass - Assembly		
55	2623-166		2	Screw, Self-Tapping		

 BATTERY AND TRAY ASSEMBLY [104545]

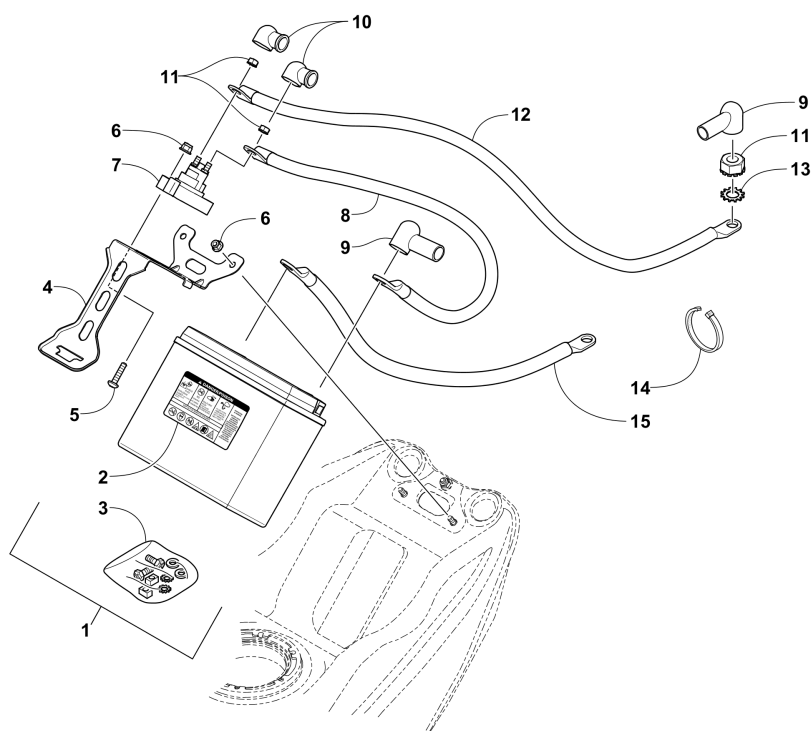


Item	Part No.	New Part	Qty	Name	Context	Footnote
1	0745-406		1	Battery	(inc. 2-3)	
2	0645-430		1	Decal, Warning		
3	0445-082		1	Kit, Hardware		
4	0645-722		1	Bracket, Hold-Down - Battery		
5	8468-630		2	Screw, Machine		
6	8427-602		4	Nut, Lock		
7	0445-058		1	Solenoid		
8	0645-649		1	Cable, Battery/Solenoid	(inc. 9-10)	
9	0645-662		2	Boot, Terminal - Battery		
10	0645-697		2	Boot, Terminal - Battery		
11	0623-038		3	Nut w/Washer		
12	0645-690		1	Cable, Solenoid/Starter	(inc. 9-10)	
13	8053-212		1	Washer, External Tooth Lock		
14	0123-788		AR	Tie, Cable - 8 in.		
15	0645-691		1	Cable, Ground - Battery/Starter		

 BELT GUARD ASSEMBLY [104541]

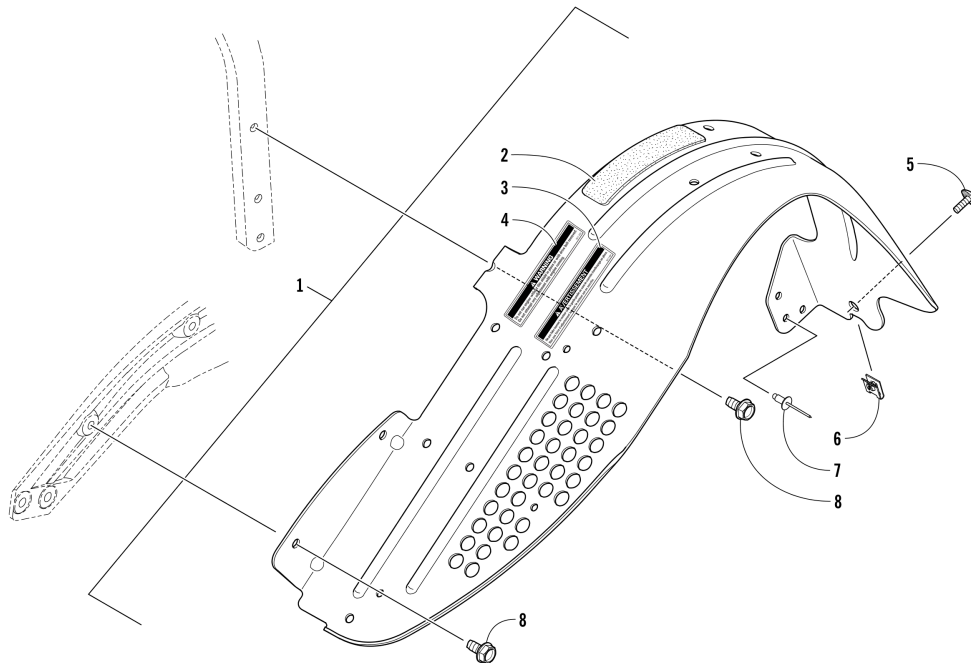

Item	Part No.	New Part	Qty	Name	Context	Footnote
1	2707-775	X	1	Guard, Belt	(inc. 2-4)	
2	0617-733		1	Pad, Gas Tank		
3	9611-691		1	Decal, Warning (French)		
4	9611-690		1	Decal, Warning (English)		
5	2623-164	X	1	Screw, Self-Tapping		
6	1623-052		1	Clip, U-Nut		
7	8060-686		2	Rivet		
8	0423-538		2	Screw, Self-Tapping		

 
CAMSHAFT, CHAIN, AND VALVE ASSEMBLY [104549]

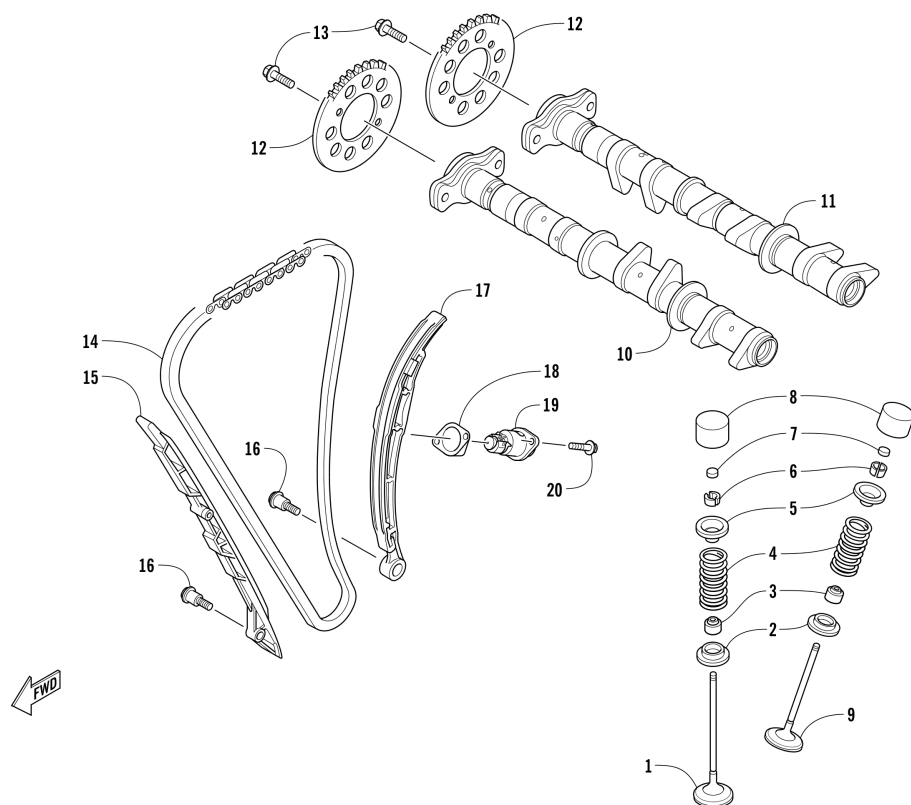

Item	Part No.	New Part	Qty	Name	Context	Footnote
1	3020-438		6	Valve, Intake		
2	3020-440		12	Seat, Spring		
3	3020-442		12	Seal		
4	3020-441		12	Spring, Valve		
5	3020-240		12	Retainer, Spring		
6	3020-241		24	Cotter, Valve		
7	3020-242		AR	Shim, Tappet - 1.20 mm		
7	3020-243		AR	Shim, Tappet - 1.25 mm		
7	3020-244		AR	Shim, Tappet - 1.30 mm		
7	3020-245		AR	Shim, Tappet - 1.35 mm		
7	3020-246		AR	Shim, Tappet - 1.40 mm		
7	3020-247		AR	Shim, Tappet - 1.45 mm		
7	3020-248		AR	Shim, Tappet - 1.50 mm		
7	3020-249		AR	Shim, Tappet - 1.55 mm		
7	3020-250		AR	Shim, Tappet - 1.60 mm		
7	3020-251		AR	Shim, Tappet - 1.65 mm		
7	3020-252		AR	Shim, Tappet - 1.70 mm		
7	3020-253		AR	Shim, Tappet - 1.75 mm		
7	3020-254		AR	Shim, Tappet - 1.80 mm		
7	3020-255		AR	Shim, Tappet - 1.85 mm		
7	3020-256		AR	Shim, Tappet - 1.90 mm		
7	3020-257		AR	Shim, Tappet - 1.95 mm		
7	3020-258		AR	Shim, Tappet - 2.00 mm		

Item	Part No.	New Part	Qty	Name	Context	Footnote
7	3020-259		AR	Shim, Tappet - 2.05 mm		
7	3020-260		AR	Shim, Tappet - 2.10 mm		
7	3020-261		AR	Shim, Tappet - 2.15 mm		
7	3020-262		AR	Shim, Tappet - 2.20 mm		
7	3020-263		AR	Shim, Tappet - 2.25 mm		
7	3020-264		AR	Shim, Tappet - 2.30 mm		
7	3020-265		AR	Shim, Tappet - 2.35 mm		
7	3020-266		AR	Shim, Tappet - 2.40 mm		
8	3020-267		12	Tappet - Yellow		
8	3020-268		12	Tappet - Green		
9	3020-439		6	Valve, Exhaust		
10	3020-445		1	Camshaft, Intake		
11	3020-446		1	Camshaft, Exhaust		
12	3020-447		2	Sprocket		
13	3020-273		4	Screw, Cap		
14	3020-274		1	Chain, Cam		
15	3020-275		1	Guide, Cam Chain		
16	3020-451		2	Screw, Shoulder		
17	3020-450		1	Tensioner, Cam Chain		
18	3020-278		1	Gasket		
19	3020-448		1	Adjuster, Tensioner - Assembly		
20	3020-280		2	Screw, Cap		

 
CHAIN CASE ASSEMBLY [105035]

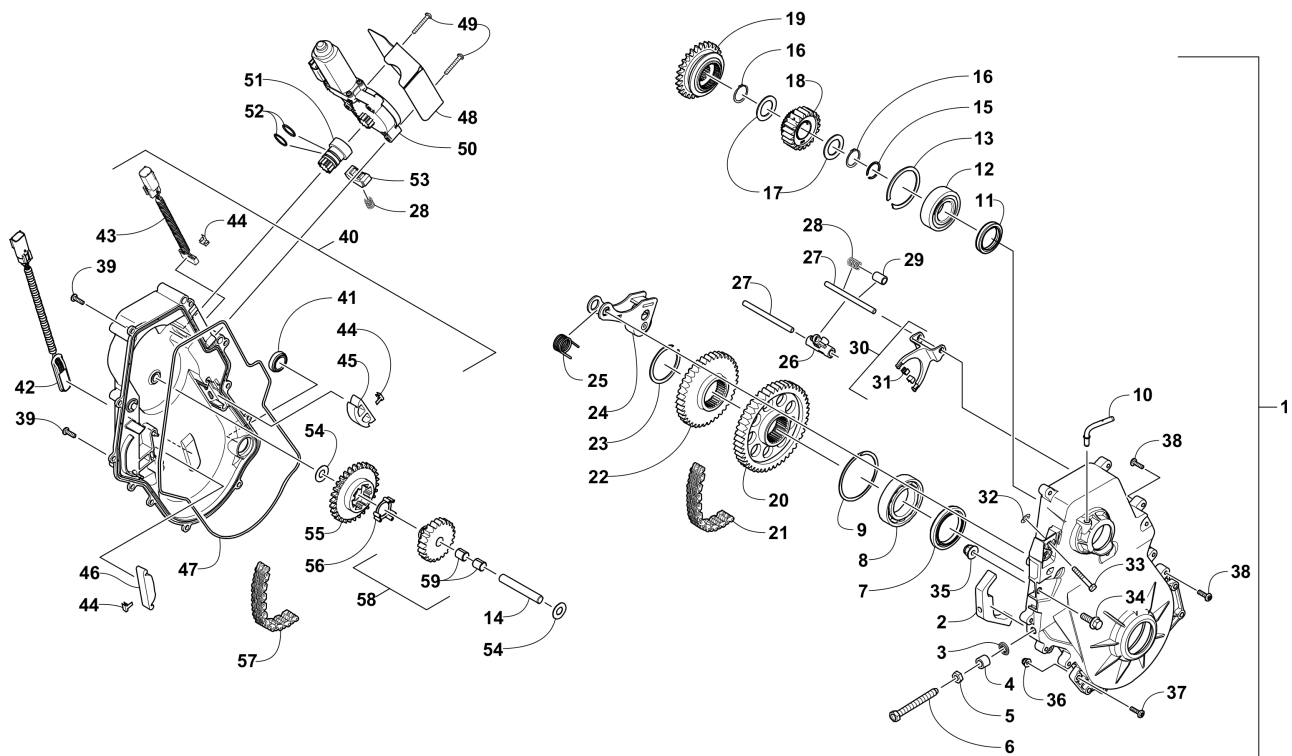

Item	Part No.	New Part	Qty	Name	Context	Footnote
1	1702-454		1	Chain Case Assembly	(inc. 2-13)	
2	2602-465		1	Plate, Ratchet		
3	2623-057		1	Seal		
4	2602-707		1	Spacer		
5	0123-150		1	Nut		
6	2602-735		1	Screw, Adjuster		
7	2602-172		1	Seal		
8	2602-281		1	Bearing		
9	2602-280		1	Ring, Retaining		
10	2602-641		1	Fitting, Elbow		
11	2602-204		1	Seal		
12	2602-937		1	Bearing		
13	2602-729		1	Ring, Retaining		
14	2602-277		1	Shaft, Reverse		
15	1423-175		1	Ring, Retaining		
16	1623-690		2	Ring, Retaining		
17	2602-339		2	Washer, Thrust		
18	1702-396	X	1	Sprocket - 24T (15 Wide)		
19	2602-270		1	Gear, Shift - Reverse		
20	2602-746		1	Sprocket - 50T (13 Wide)		
21	2602-841		1	Chain - 92P (15 Wide)		
22	2602-276		1	Sprocket - 40T (11 Wide)		
23	2602-629		1	Ring, Retaining		


Item	Part No.	New Part	Qty	Name	Context	Footnote
24	1702-400		1	Arm, Tensioner - Assembly		
25	2602-336		1	Spring		
26	1702-265		1	Arm, Shift Fork		
27	2602-418		2	Shaft, Reverse		
28	2602-417		2	Spring		
29	2602-579		1	Bushing		
30	1702-299		1	Shift Fork - Assembly	(inc. 31)	
31	2602-341		2	Pad, Wear - Shift Fork		
32	1623-409		2	Retainer, Pushnut		
33	8402-640		2	Screw, Cap		
34	8408-820		1	Screw, Cap		
35	8427-802		1	Nut, Lock		
36	8427-602		4	Nut, Lock		
37	8476-630		4	Screw, Machine		
38	1623-814		6	Screw, Machine		
39	8468-626		11	Screw, Machine		
40	1702-422		1	Cover, Chain Case	(inc. 34-35, 39, and 41-45)	
41	2602-232		1	Glass, Sight		
42	0730-172		1	Kit, Speedometer Sensor		
43	0630-263		1	Kit, Gear Position Sensor		
44	1623-703		3	Clip		
45	2602-749		1	Snubber, Chain		
46	2602-387		1	Snubber, Chain		
47	2602-817		1	Seal, Chain Case		
48	0630-350		1	Shield, Actuator		
49	8468-535		3	Screw, Machine		
50	0630-347		1	Actuator, Reverse		
51	0630-331		1	Extension, Actuator		
52	0830-185		2	O-Ring		
53	0630-332		1	Block, Detent		
54	2602-338		2	Washer, Thrust		
55	2602-751		1	Gear, Reverse Idler - 30T (11 Wide)		
56	2602-415		1	Insert, Idler		
57	2602-342		1	Chain - 68P (11 Wide)		
58	1702-173		1	Idler, Reverse - Assembly	(inc. 59)	
59	2602-337		2	Bearing		

 CONSOLE ASSEMBLY [105039]

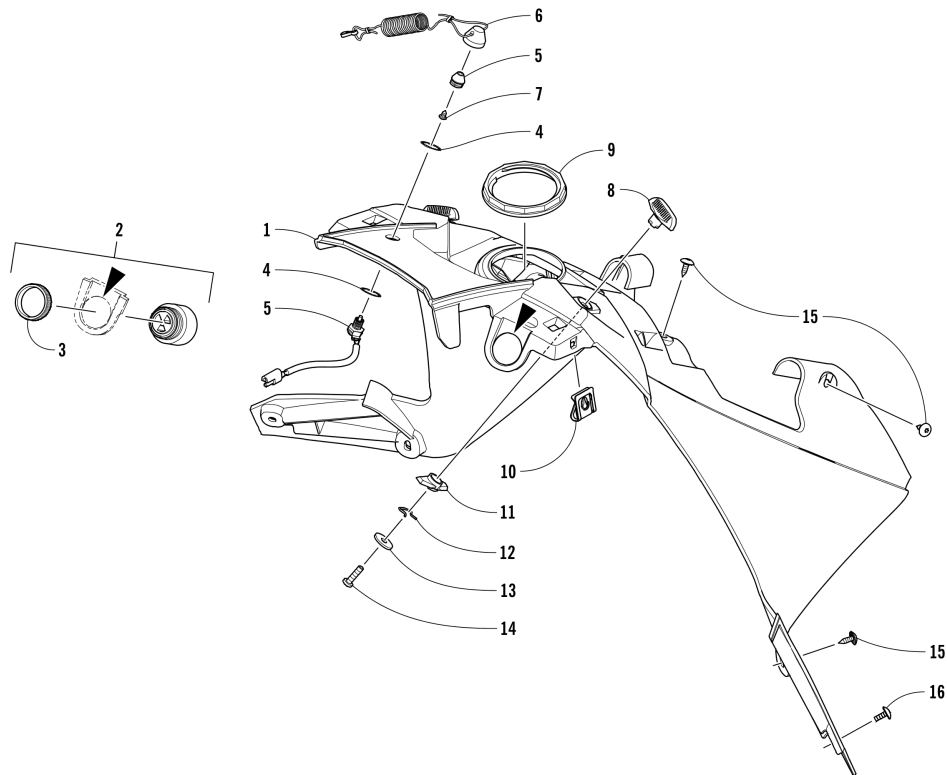

Item	Part No.	New Part	Qty	Name	Context	Footnote
1	6706-218	X	1	Console - Black		
2	0630-243		1	Alarm, Reverse	(inc. 3)	
3	0630-017		1	Ring, Retaining		
4	0123-985		2	Washer, Internal Tooth Lock		
5	0636-078		1	Switch, Tether		
6	0709-054		1	Tether Switch Assembly		
7	0623-338		1	Screw, Self-Tapping		
8	7606-265	X	2	Knob, Holddown		
9	6606-390		1	Nut, Retaining		
10	2623-005		2	Clip, Retaining		
11	7606-296	X	2	Plate, Backing		
12	2623-155	X	2	Clip, Retaining		
13	2623-171	X	2	Washer, Flat		
14	1623-933		2	Screw, Self-Tapping		
15	2623-166		6	Screw, Self-Tapping		
16	2623-164	X	2	Screw, Self-Tapping		

 
COOLING ASSEMBLY [104957]

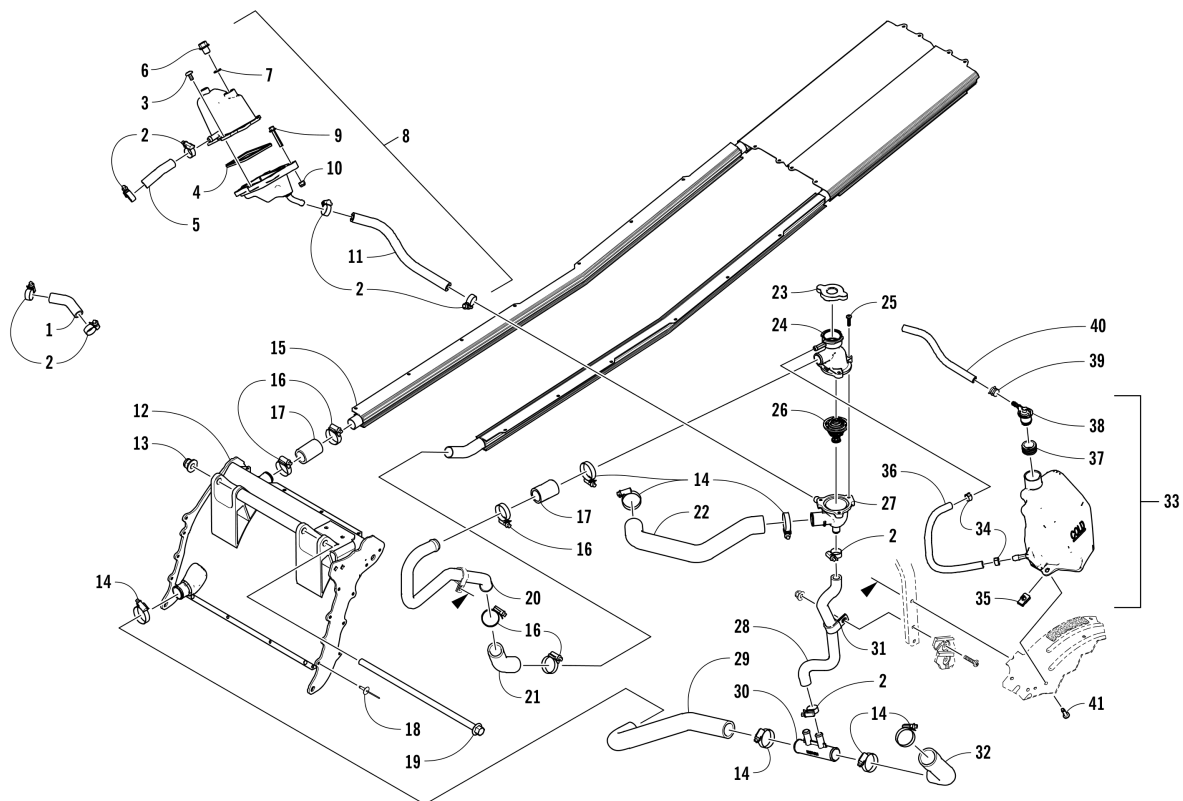

Item	Part No.	New Part	Qty	Name	Context	Footnote
1	0613-140		1	Hose, Coolant		
2	2623-062		8	Clamp, Hose		
3	0826-029		6	Screw, Machine		
4	0613-266		1	Seal		
5	0613-211	X	1	Hose, Coolant - Vapor/Overflow		
6	2602-099		1	Plug		
7	1602-213		1	O-Ring		
8	0713-231		1	Tank, Coolant - Vapor - Assembly	(inc. 2-7 and 11)	
9	8408-635		2	Screw, Machine		
10	8422-602		2	Nut		
11	1610-033		1	Hose, Coolant		
12	0713-170		1	Exchanger, Heat		
13	8427-202		1	Nut, Lock		
14	2623-088		7	Clamp, Hose		
15	0713-166	X	1	Exchanger, Heat - Rear		
16	2623-038		5	Clamp, Hose		
17	0613-214	X	2	Hose, Coolant		
18	8060-706		AR	Rivet		
19	2623-126	X	1	Screw, Cap		
20	0713-173	X	1	Tube, Coolant - Thermostat/Exchanger		
21	0613-220	X	1	Hose, Coolant - Thermostat/Exchanger		
22	0613-217	X	1	Hose, Coolant		
23	2606-284		1	Cap		

Item	Part No.	New Part	Qty	Name	Context	Footnote
24	0613-215	X	1	Neck, Filler		
25	8470-520		3	Screw, Machine		
26	0613-078		1	Thermostat		
27	0713-176	X	1	Housing, Thermostat		
28	0613-208		1	Hose, Coolant Bypass		
29	0613-206		1	Hose, Coolant - Exchanger		
30	0613-089		1	Fitting, Double-T		
31	0423-833		1	Clamp, Tube		
32	0613-207		1	Hose, Coolant, Engine		
33	0713-174		1	Tank, Assembly	(inc. 34-38)	
34	0610-415		2	Clamp, Hose		
35	0423-577		2	Clip		
36	0610-970		1	Hose - 25 ft		
37	0613-167		1	Stopper		
38	1670-787		1	Valve, Check		
39	1623-042		1	Clamp, 10mm		
40	6101-009		1	Hose - 50 ft		
41	2623-059		2	Screw, Machine		

 
CRANKCASE ASSEMBLY [104546]

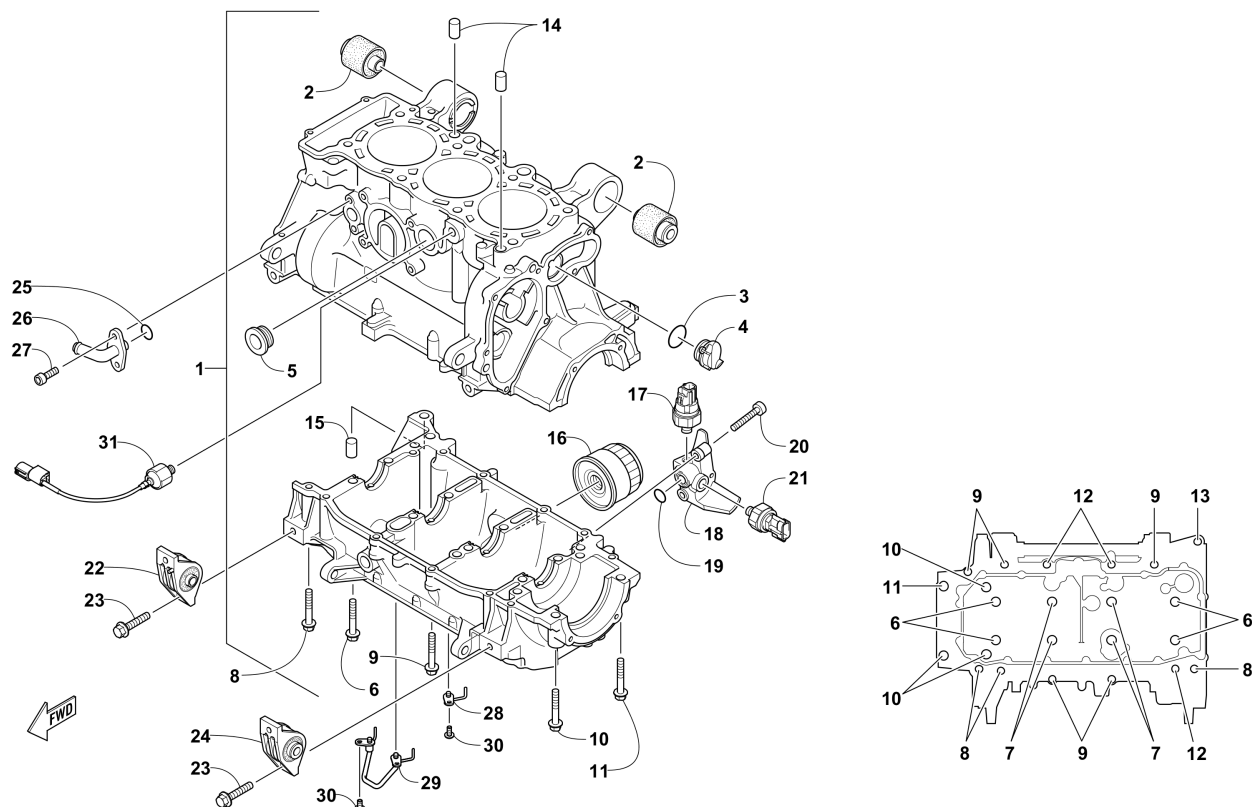

Item	Part No.	New Part	Qty	Name	Context	Footnote
1	3020-609		1	Crankcase Assembly	(inc. 2-7)	
2	3020-139		2	Mount, Engine - Rear		
3	3020-140		1	O-Ring		
4	3020-141		1	Plug		
5	3020-142		1	Plug		
6	3020-143		4	Screw, Cap		
7	3020-144		4	Screw, Cap		
8	3020-145		3	Screw, Cap		
9	3020-146		5	Screw, Cap		
10	3020-147		3	Screw, Cap		
11	3020-148		1	Screw, Cap		
12	3020-149		3	Screw, Cap		
13	3020-150		1	Screw, Cap		
14	3020-128		2	Pin, Dowel		
15	3020-155		1	Pin, Dowel		
16	3020-156		1	Filter, Oil		
17	3020-157		1	Switch, Oil Pressure		
18	3020-158		1	Housing, Sensor		
19	3020-159		1	O-Ring		
20	3020-160		2	Screw, Cap		
21	3020-161		1	Sensor, Oil Pressure		
22	3020-162		1	Mount, Engine - Front - Right		
23	3020-163		4	Screw, Cap		


Item	Part No.	New Part	Qty	Name	Context	Footnote
24	3020-164		1	Mount, Engine - Front - Left		
25	3020-165		1	O-Ring		
26	3020-403		1	Fitting, Elbow		
27	3020-167		2	Screw, Cap		
28	3020-610		1	Nozzle		
29	3020-611		1	Nozzle Assembly		
30	3020-612		3	Screw		
31	3020-401		1	Sensor, Knock		

 CYLINDER HEAD ASSEMBLY [104547]

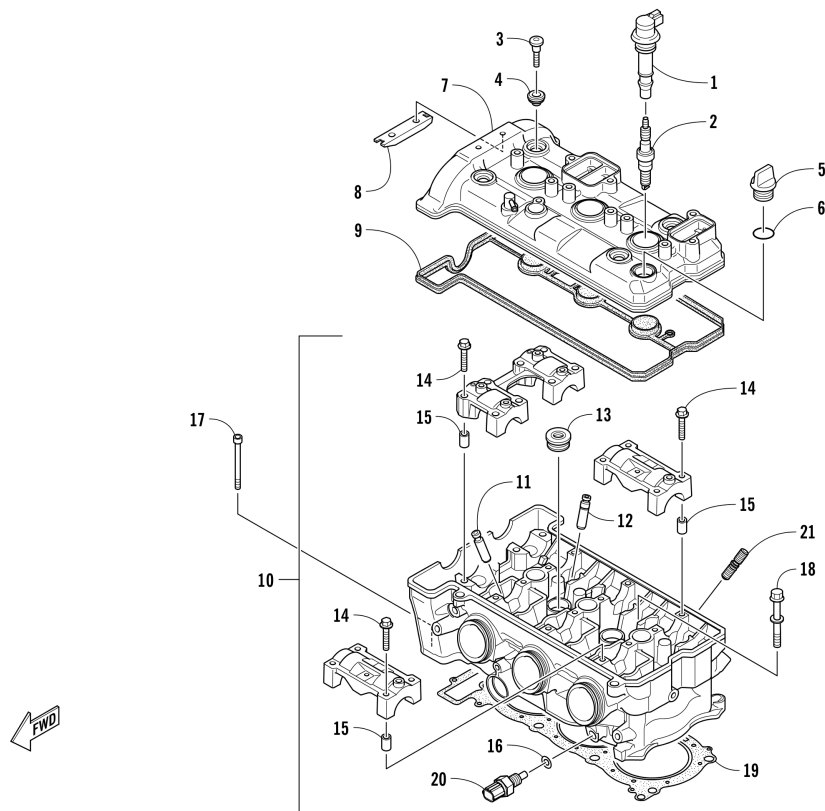


Item	Part No.	New Part	Qty	Name	Context	Footnote
1	3020-168		3	Coil, Ignition		
2	0217-705		3	Plug, Spark		
3	3020-169		4	Screw, Shoulder		
4	3020-170		4	Grommet		
5	3020-171		1	Plug		
6	3020-172		1	O-Ring		
7	3020-568		1	Cover, Cylinder Head	(inc. 8)	
8	3020-174		1	Guide, Chain		
9	3020-420		1	Gasket, Cylinder Cover		
10	3020-563		1	Head, Cylinder - Assembly	(inc. 11-17)	
11	3020-177		6	Guide, Valve - Intake		
12	3020-178		6	Guide, Valve - Exhaust		
13	3020-142		2	Plug		
14	3020-179		16	Screw, Cap		
15	3020-180		6	Pin, Dowel		
16	3020-566		1	Gasket		
17	3020-183		2	Screw, Cap		
18	3020-567		8	Screw, Cap		
19	3020-569		1	Gasket, Cylinder Head		
20	3020-565		1	Unit, Thermo		
21	3020-564		6	Bolt, Stud (M9 Stud)		

 DRIVE CLUTCH [105043]

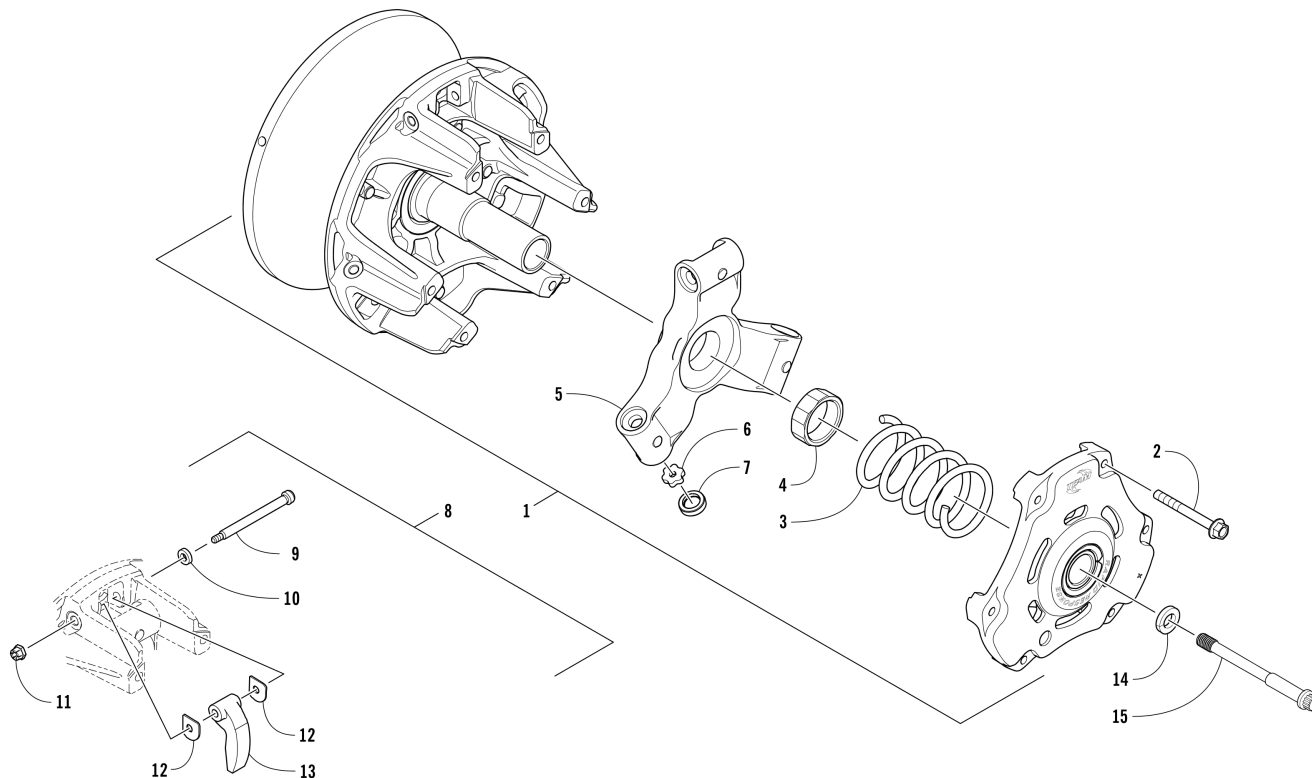

Item	Part No.	New Part	Qty	Name	Context	Footnote
1	0746-875		1	Clutch, Drive - Uncalibrated	(inc. 2, 4-7, and 9-12)	
2	0646-950		6	Screw, Shoulder		
3	0646-474	X	1	Spring, Drive Clutch		
4	0646-936	X	1	Nut, Jam		
5	0646-955		1	Spider		
6	0646-951		6	Plug, Torque Button		
7	0646-465		6	Button, Torque - Primary		
8	7639-127		1	Kit, Cam Arm	(inc. 9-12)	
9	0823-396		3	Pin, Cam Arm		
10	2623-091		3	Washer		
11	0823-399		3	Nut, Lock		
12	0646-880		6	Washer, Thrust		
13	0646-907		3	Arm, Cam		
14	0623-210		1	Washer, High Collar		
15	0623-804		1	Bolt, Clutch		

 
DRIVE TRAIN SHAFTS AND BRAKE ASSEMBLIES [105034]

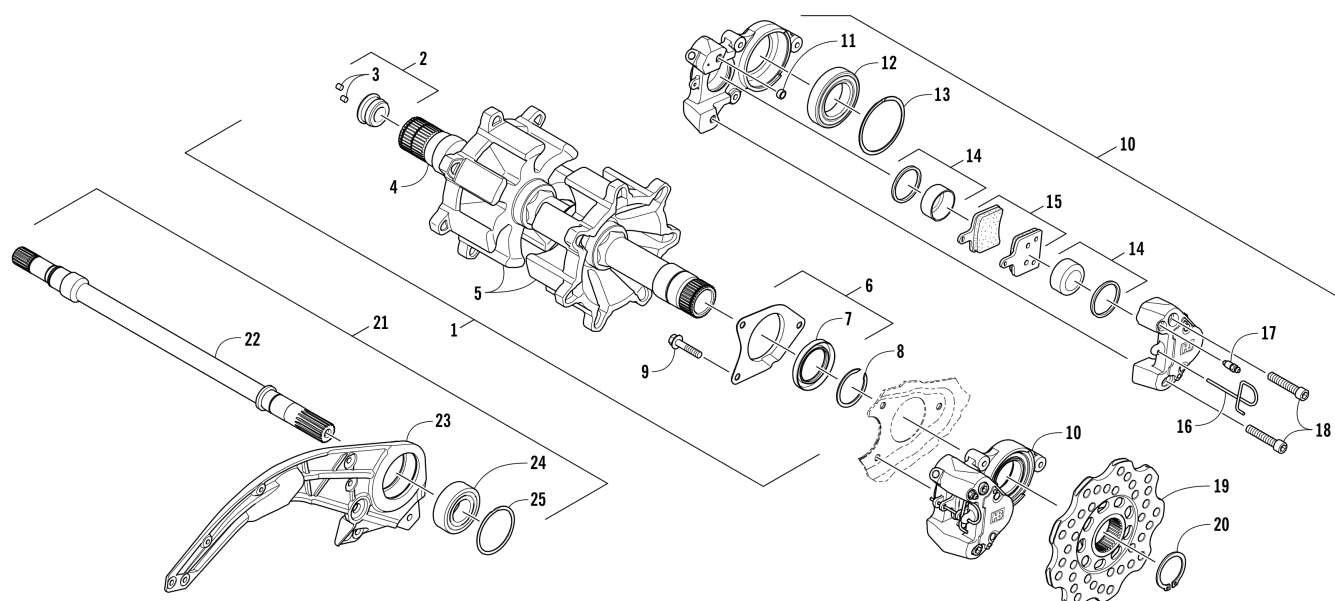

Item	Part No.	New Part	Qty	Name	Context	Footnote
1	0728-236		1	Track, Drive - Assembly	(inc. 2-8)	
2	1702-243		1	Plug, Magnetic - Assembly	(inc. 3)	
3	2602-211		8	Magnet		
4	2602-740		1	Driveshaft		
5	2602-912		2	Sprocket, Drive		
6	1702-206		1	Plate, Retaining - Seal	(inc. 7)	
7	1602-344		1	Seal		
8	2602-233		1	Ring, Retaining		
9	8408-831		3	Screw, Cap		
10	2602-486		1	Caliper, Brake - Assembly	(inc. 11-18)	
11	2602-411		1	Seal		
12	2602-198		1	Bearing		
13	2602-280		1	Ring, Retaining		
14	2602-410		2	Piston Set		
15	1702-245		1	Pad, Brake - Set	(inc. 16)	
16	2602-409		1	Pin, Retaining		
17	2602-408		1	Fitting, Bleed		
18	2602-412		2	Screw, Cap		
19	2602-720		1	Disc, Brake		
20	2602-629		1	Ring, Retaining		
21	1702-460	X	1	Shaft, Driven - Assembly	(inc. 22-25)	
22	2602-971	X	1	Shaft, Driven		
23	2707-751	X	1	Support, Chassis - Left		


Item	Part No.	New Part	Qty	Name	Context	Footnote
24	2602-524		1	Bearing		
25	2602-729		1	Ring, Retaining		

 DRIVEN CLUTCH [104788]

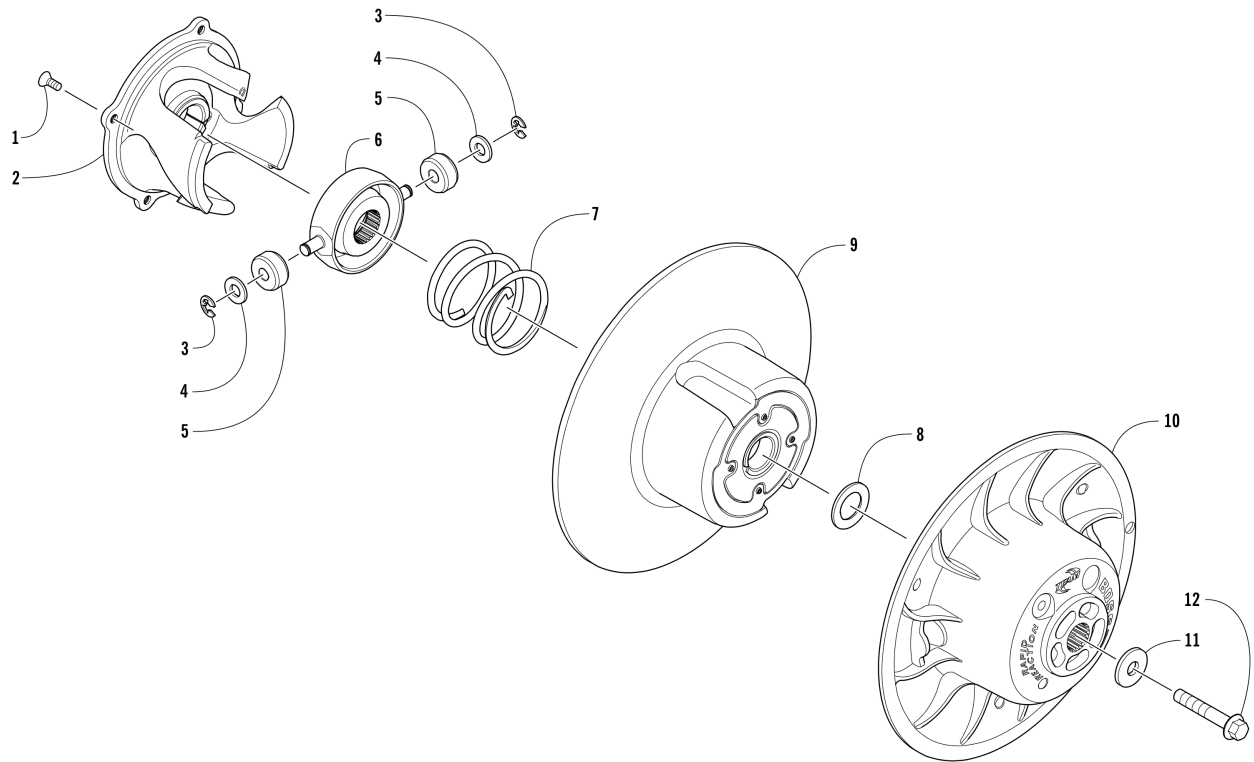


Item	Part No.	New Part	Qty	Name	Context	Footnote
-	0726-396	X	1	Clutch, Driven - Assembly		
1	0648-875		4	Screw, Machine		
2	0648-901		1	Cam, Driven		
3	0648-701		2	Ring, Retaining		
4	0648-700		2	Washer, Thrust		
5	0648-842		2	Roller		
6	0648-841		1	Spider		
7	0648-860		1	Spring, Driven Clutch		
8	0648-850		AR	Washer, Shim (.090 in.)		
8	0648-849		AR	Washer, Shim (.030 in.)		
8	0648-852		AR	Washer, Shim (.015 in.)		
9	0748-776		1	Sheave, Moveable		
10	0748-040	X	1	Sheave, Stationary		
11	2623-120		1	Washer		
12	8409-060		1	Screw, Cap		

 ENGINE AND RELATED PARTS [105019]

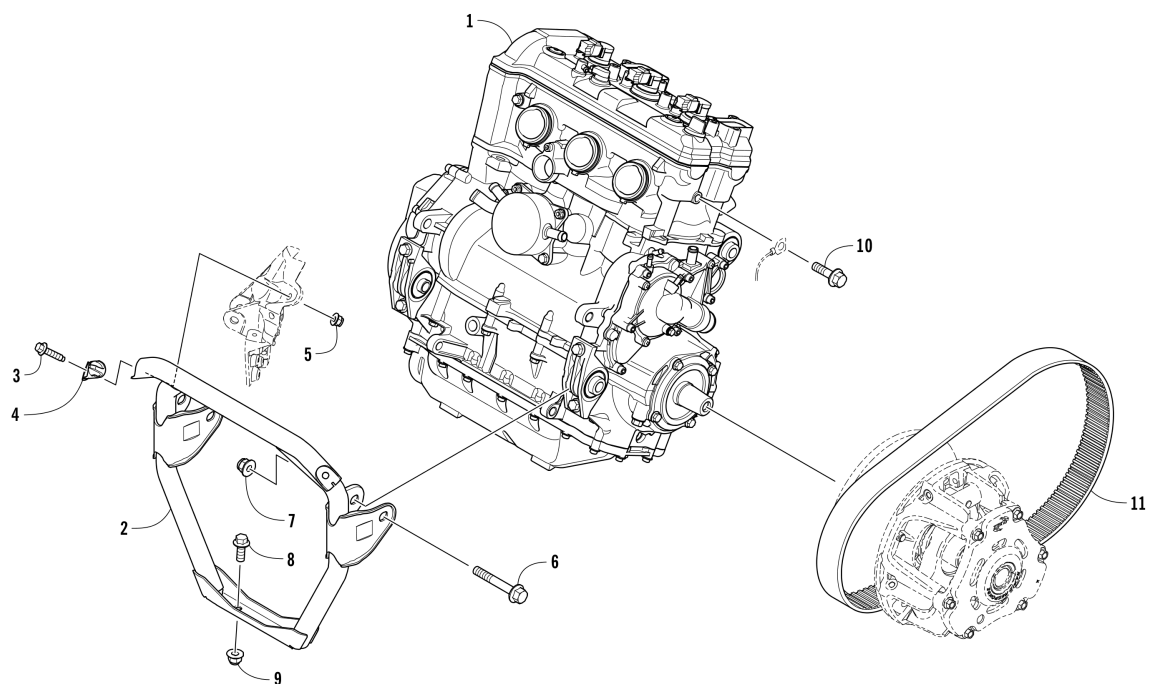

Item	Part No.	New Part	Qty	Name	Context	Footnote
1	0662-615		1	Engine, 998T		
2	0708-644	X	1	Bracket, Engine Mounting - Front		
3	8408-830		2	Screw, Cap		
4	1607-002		2	Insert		
5	8427-802		2	Nut, Lock		
6	8413-275		2	Screw, Cap		
7	8427-202		2	Nut, Lock		
8	8408-025		2	Screw, Cap		
9	8427-002		2	Nut, Lock		
10	0923-018		1	Screw, Cap		
11	0627-104	X	1	Belt, Drive		

 
EXHAUST ASSEMBLY [104605]

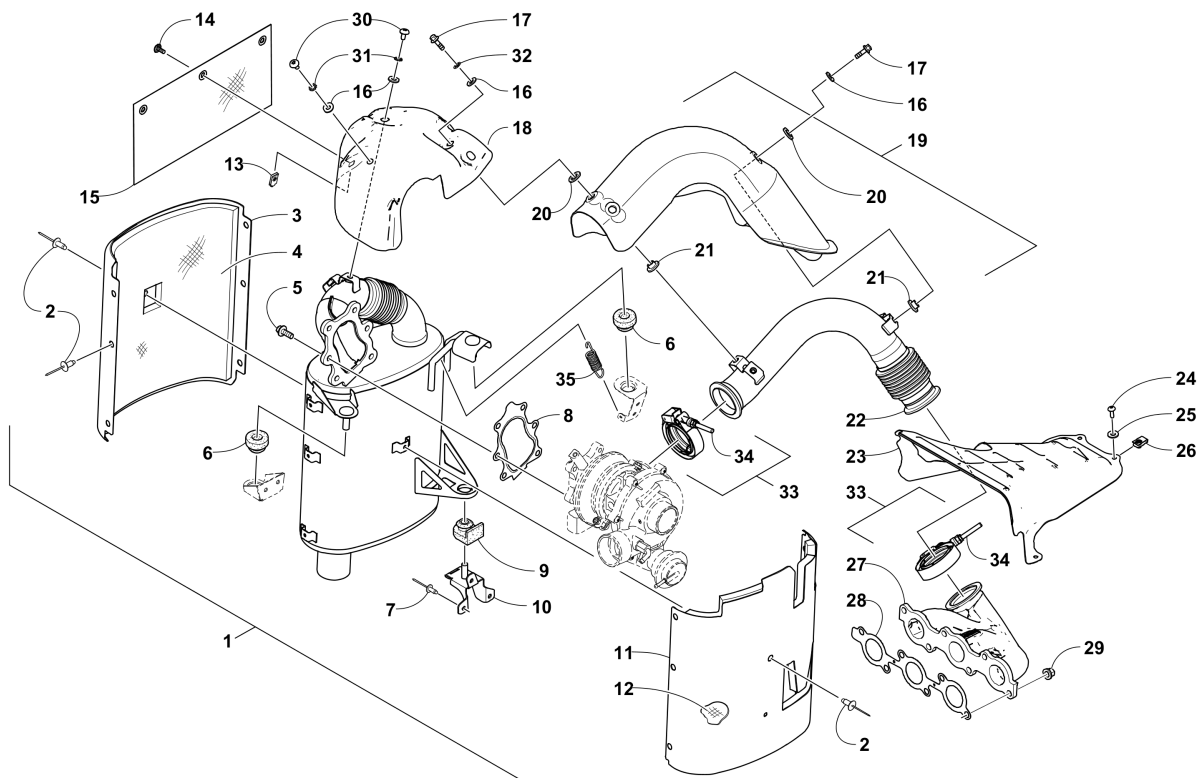

Item	Part No.	New Part	Qty	Name	Context	Footnote
1	2712-008	X	1	Resonator, Exhaust - Assembly	(inc. 2-4 and 11-12)	
2	8061-682		8	Rivet		
3	3612-180	X	1	Shield, Heat - Right		
4	3612-276		1	Packing, Resonator - Outer		
5	2623-207		6	Screw, Cap		
6	2612-186		2	Grommet		
7	8060-710		3	Rivet		
8	3612-194		1	Gasket		
9	2612-912		1	Grommet		
10	1712-790		1	Bracket, Mounting - Lower		
11	3612-181	X	1	Shield, Heat - Left		
12	3612-182	X	2	Packing, Resonator		
13	1623-052		3	Clip, U-Nut		
14	2623-164	X	3	Screw, Self-Tapping		
15	2712-061		1	Shield, Heat w/Grommets		
16	8050-223		5	Washer, Flat		
17	2623-232		4	Screw, Cap		
18	3612-159	X	1	Shield, Heat		
19	2712-082		1	Shield, Heat - w/Isolators	(inc. 20-21)	
20	2623-231		4	Isolator, Washer		
21	2623-230		4	Isolator, Washer		
22	2712-043	X	1	Pipe, Exhaust		
23	3612-135	X	1	Shield, Heat - Manifold		

Item	Part No.	New Part	Qty	Name	Context	Footnote
24	8476-516		4	Screw, Machine		
25	8050-217		4	Washer		
26	1623-637		4	Clip, U-Nut		
27	3020-384	X	1	Manifold		
28	3020-458	X	1	Gasket		
29	3020-385		6	Nut		
30	8476-612		3	Screw, Machine		
31	8053-212		3	Washer, External Tooth Lock		
32	1623-409		2	Retainer, Pushnut		
33	3612-134		2	Clamp, Exhaust	(inc. 34)	
34	3612-272	X	1	Bolt w/Nut		
35	0612-668		1	Spring		

 
FRONT BUMPER AND FRAME ASSEMBLY [104966]

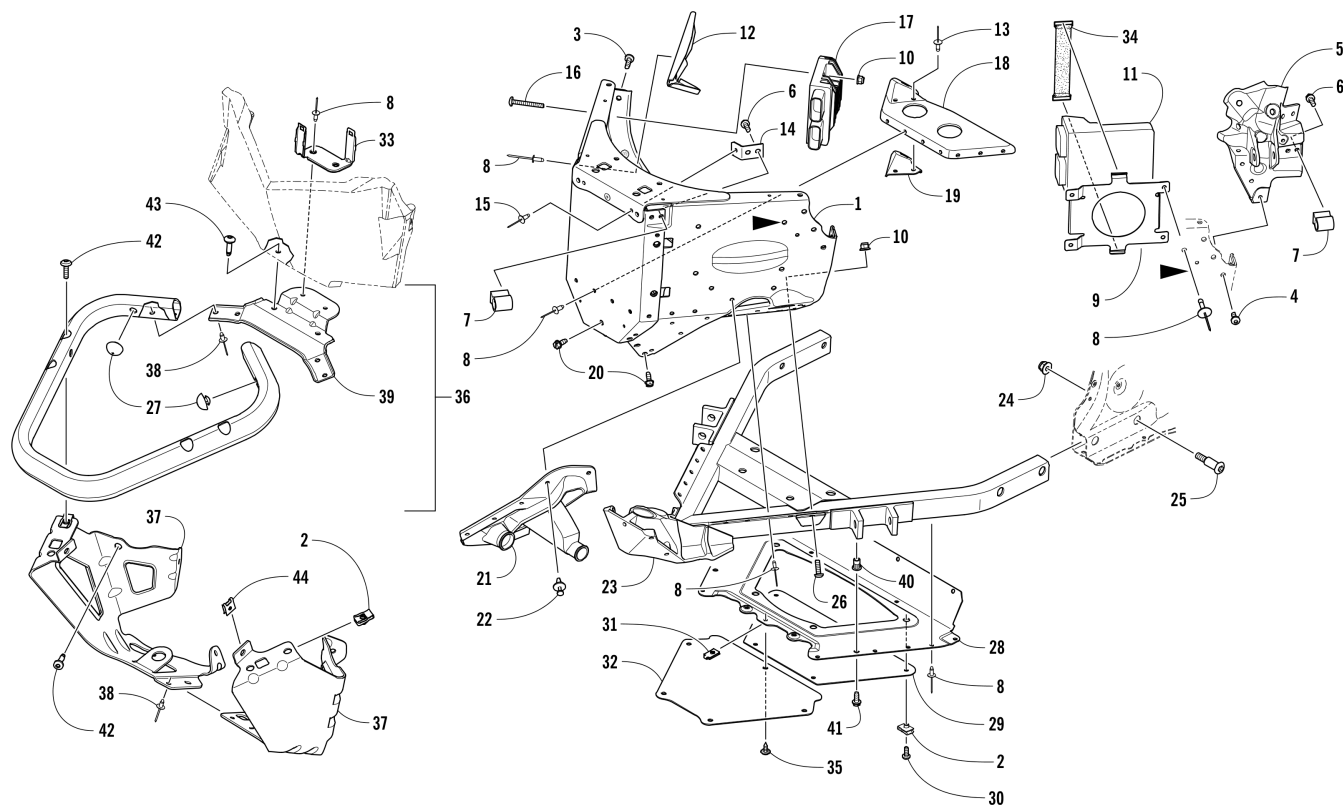

Item	Part No.	New Part	Qty	Name	Context	Footnote
1	2707-669	X	1	Panel, Front - Assembly - Black	(inc. eight No. 2 and 3-5)	
2	0423-577		15	Clip		
3	1623-683		1	Screw, Self-Tapping		
4	0423-538		10	Screw, Self-Tapping		
5	1707-776		1	Bracket, Shock Mount - Upper Right - Black		
5	1707-777		1	Bracket, Shock Mount - Upper Left - Black		
6	8413-617		8	Screw, Cap		
7	1607-233		4	Bracket, Mounting - Upper A-Arm		
8	8060-686		AR	Rivet		
9	0609-960	X	1	Bracket, Mounting - ECM		
10	8427-602		4	Nut, Lock		
11	0730-253		1	ECM		
12	1607-126		1	Bracket, Steering Stop		
13	8060-706		AR	Rivet		
14	1607-561		2	Gusset, A-Arm Mounting Bracket		
15	1623-241		2	Rivet		
16	8477-625		2	Screw, Machine		
17	0824-072		1	Regulator, Voltage		
18	1607-715	X	1	Bracket, Reinforcement		
19	1607-716	X	1	Bracket, Mounting - Steering Post Brace		
20	1623-959		3	Screw, Self-Tapping		
21	1605-028		1	Boot, Steering - Right		
21	1605-029		1	Boot, Steering - Left		


Item	Part No.	New Part	Qty	Name	Context	Footnote
22	0623-362		16	Rivet, Reinstallable		
23	1707-862		1	Frame, Front - Lower - Black		
24	8427-802		4	Nut, Lock		
25	1623-817		4	Screw, Shoulder		
26	8468-620		2	Screw, Machine		
27	2670-614		2	Bumper, Intercooler		
28	1607-626	X	1	Belly Pan - Center		
29	1607-218		1	Cover, Access		
30	8468-617		4	Screw, Machine		
31	1623-052		1	Clip, U-Nut		
32	1607-063		1	Panel, Access		
33	0645-675		1	Bracket, Mounting - PDM		
34	3020-415		1	Strap, ECM		
35	2623-166		3	Screw, Self-Tapping		
36	2707-781	X	1	Bumper, Front - Assembly - Black	(inc. 27 and 38-39)	
37	2707-676	X	1	Bracket, Mounting - Bumper - Right - Black		
37	2707-677	X	1	Bracket, Mounting - Bumper - Left - Black		
38	1623-257		4	Rivet		
39	1607-654		1	Bracket, Mounting - Bumper - Upper		
40	1623-797		2	Insert		
41	8476-520		4	Screw, Machine		
42	2623-063		6	Screw, Machine		
43	2623-189	X	2	Screw, Shoulder		
44	1623-939		2	Clip, U-Nut		

 FRONT SHOCK ABSORBER ASSEMBLY [104094]

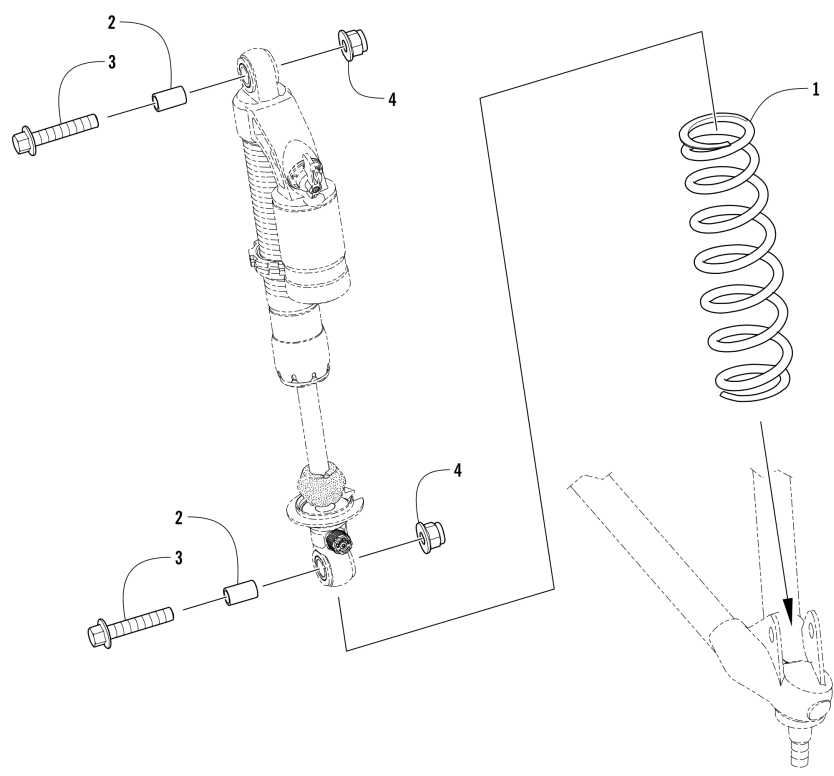


Item	Part No.	New Part	Qty	Name	Context	Footnote
1	3703-496		2	Spring, Compression - White		
2	3604-109		4	Sleeve		
3	8408-050		4	Screw, Cap		
4	8427-002		4	Nut, Lock		

 FRONT SUSPENSION SHOCK ABSORBER [103941]

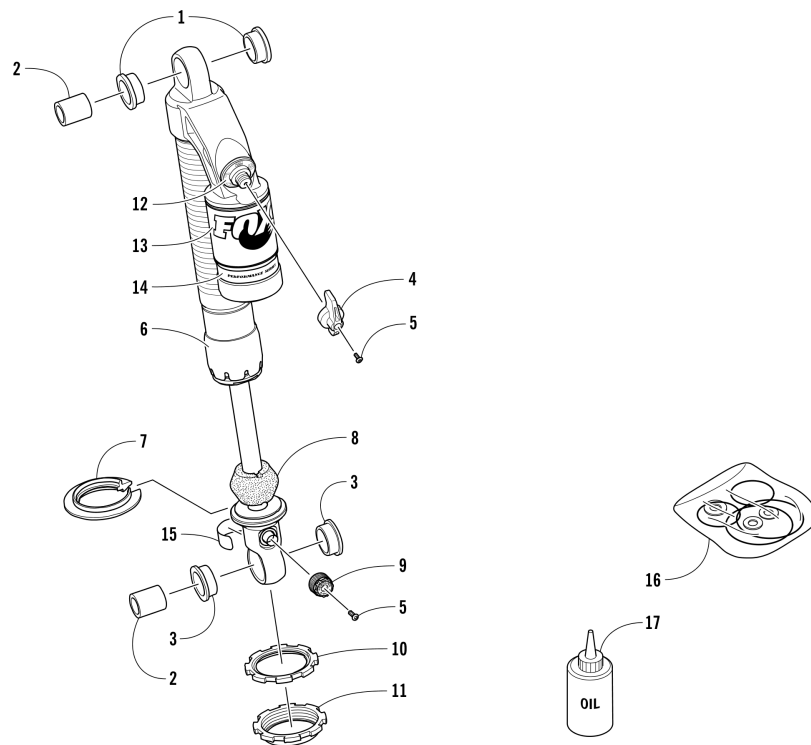


Item	Part No.	New Part	Qty	Name	Context	Footnote
-	3703-597	X	1	Complete Shock Absorber		
1	1604-222		2	Bushing		
2	2604-223		2	Sleeve		
3	3603-283		2	Bushing		
4	3603-520		1	Knob, Damping Adjuster - Rebound		
5	3603-377		2	Screw, Machine		
6	4604-016		1	Guide, Spring		
7	4604-186		1	Retainer, Spring		
8	3603-024		1	Bumper, Shaft		
9	3603-386		1	Knob, Damping Adjuster - Rebound		
10	3603-026		1	Preload Ring, Back-Up		
11	3603-027		1	Preload Ring		
12	3603-523		1	Decal, Base Valve		
13	3603-562	X	1	Decal, Reservoir		
14	3603-365		1	Decal, "Performance Series"		
15	3603-561		1	Decal, Rebound		
16	3603-522		1	Kit, Seal/Cap Rebuild		
17	5639-530		AR	Oil, Shock - 1 qt		

 FUEL PUMP ASSEMBLY [104543]

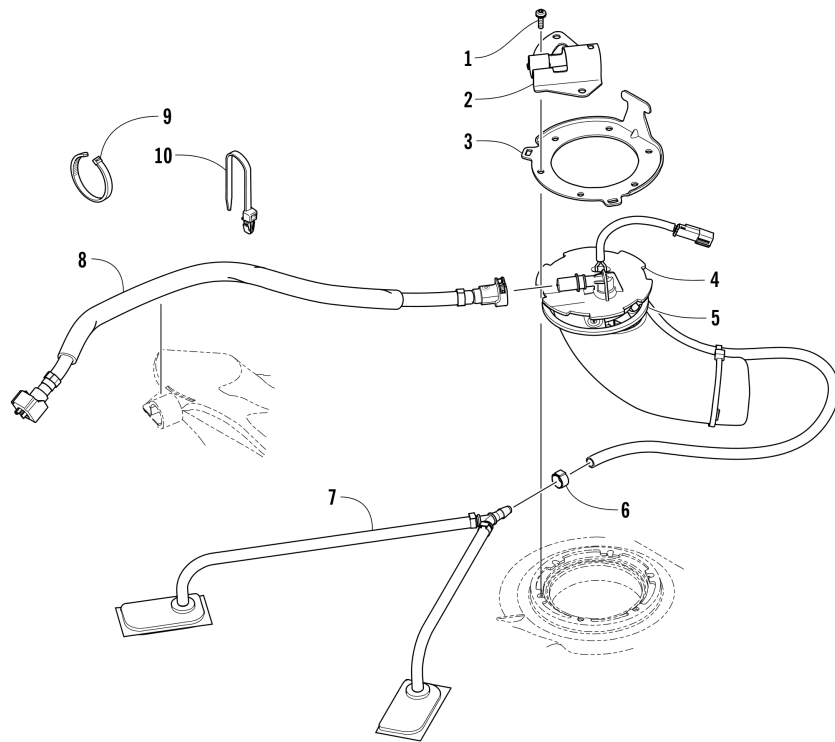


Item	Part No.	New Part	Qty	Name	Context	Footnote
1	0423-898		6	Screw, Self-Tapping		
2	2670-467		1	Protector, Fuel Pump		
3	2670-395		1	Plate, Retaining - Fuel Pump		
4	2670-560	X	1	Pump, Fuel - Assembly		
5	0470-838		1	Seal		
6	1623-655		1	Clamp, Hose		
7	2670-278		1	Pickup, Fuel - Assembly		
8	1770-140	X	1	Fuel Line - Assembly		
9	0123-788		AR	Tie, Cable - 8 in.		
10	0623-677		AR	Tie, Cable - Push-Mount		

 GAS TANK ASSEMBLY [104542]

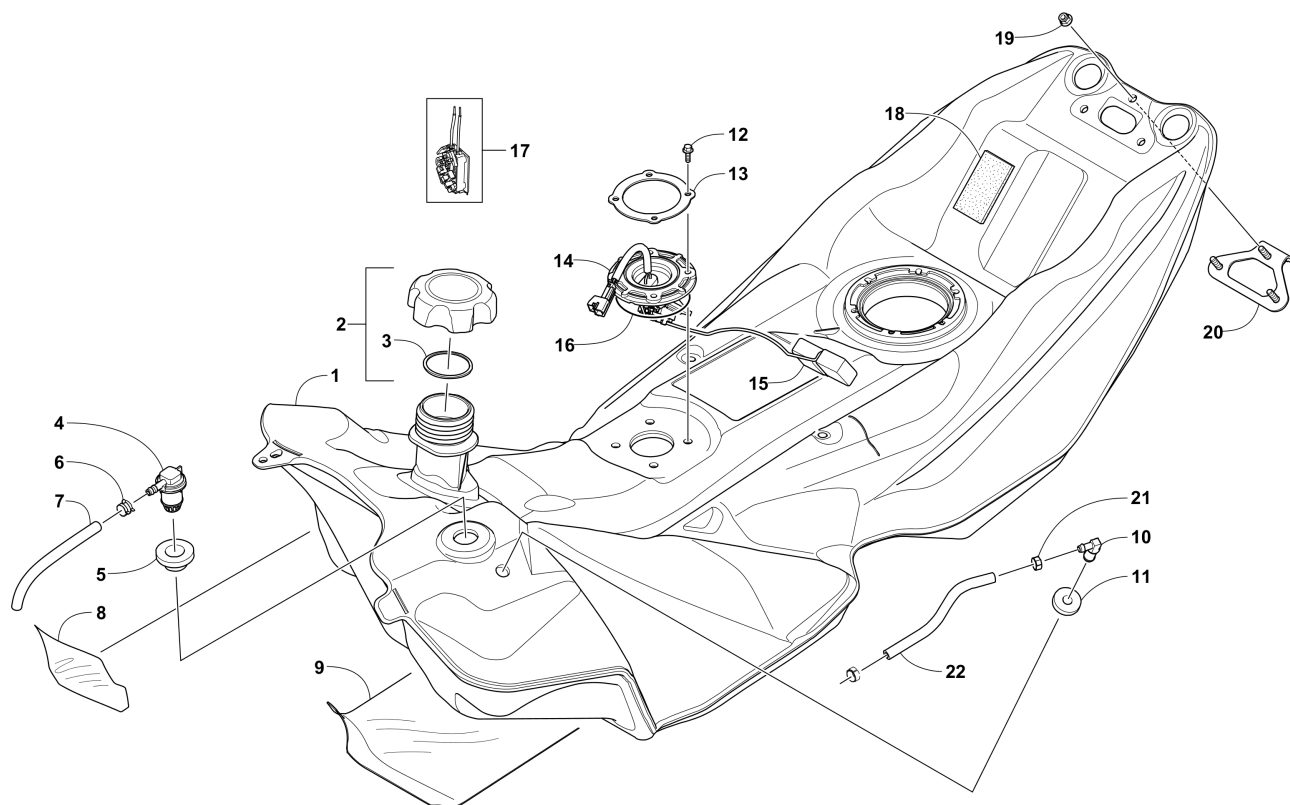

Item	Part No.	New Part	Qty	Name	Context	Footnote
1	1770-090	X	1	Tank, Gas - Assembly	(inc. 4-5 and 10-11)	
2	2670-048		1	Cap, Gas Tank - Assembly	(inc. 3)	
3	0109-733		1	Seal, Gas Tank Cap		
4	1670-787		1	Valve, Check		
5	1670-822		1	Grommet		
6	1623-233		1	Clamp, Hose		
7	6101-009		AR	Hose - 50 ft		
7	6101-001		AR	Hose - 100 ft		
8	2670-451		1	Foil, Protective		
9	2670-434		1	Foil, Protective		
10	1670-494		1	Fitting, Oil Tank		
11	1670-325		1	Grommet		
12	8408-517		4	Screw, Cap		
13	2670-431		1	Plate, Retaining		
14	2670-386		1	Sensor, Fuel Level	(inc. 15)	
15	2670-235		2	Float		
16	2623-035		1	O-Ring		
17	1770-170		1	Fuel Level Sensor Kit		
18	0645-760		AR	Pad, Battery		
19	8427-602		1	Nut, Lock		
20	5706-771		1	Bracket, Hold-Down		
21	0610-415		1	Clamp, Hose		
22	0410-143		1	Hose - 25 ft		

 
HANDLEBAR AND CONTROLS [105033]

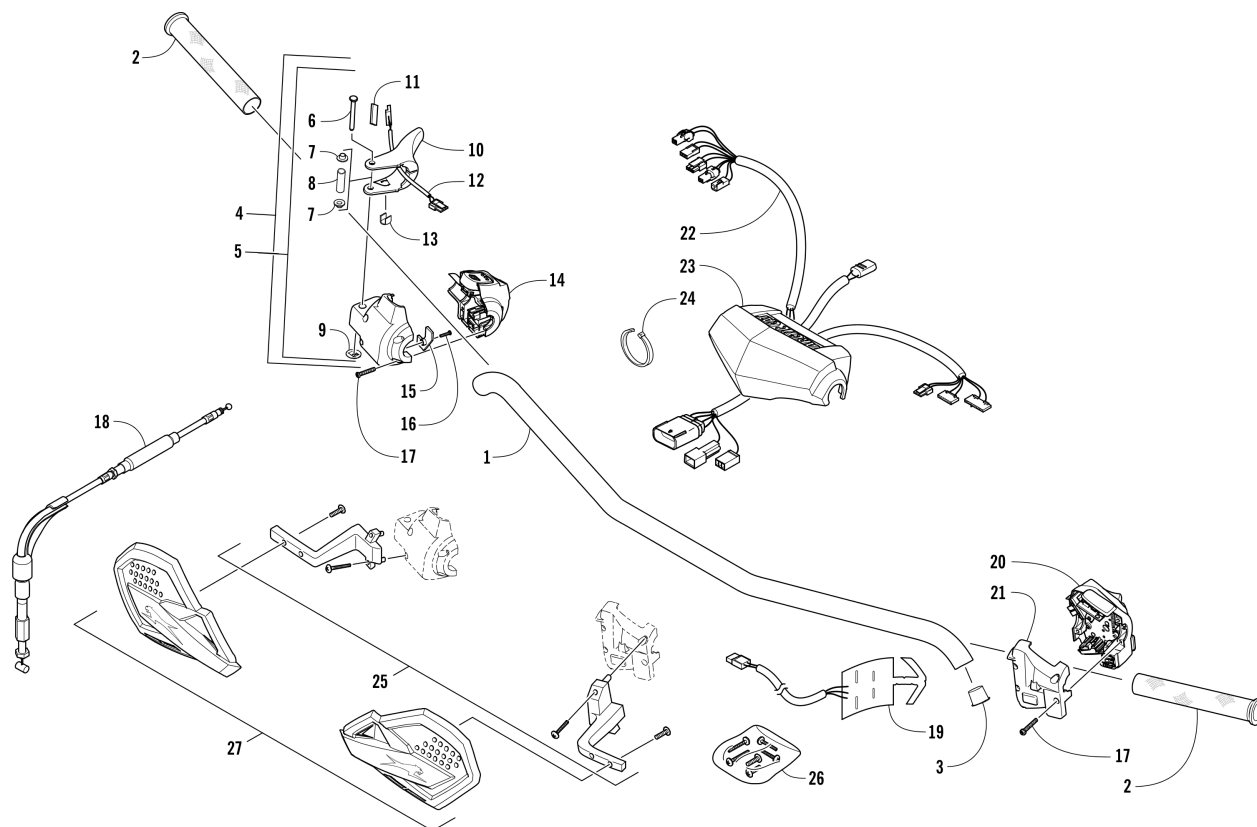

Item	Part No.	New Part	Qty	Name	Context	Footnote
1	1705-532		1	Handlebar - Black		
2	1605-166		2	Grip, Handlebar		
3	2623-200	X	2	Plug		
4	0609-882		1	Control, Throttle - Right - Rear	(inc. 5-10)	
5	0609-859		1	Kit, Throttle Lever Mounting	(inc. 6-9)	
6	0		1	Axle, Lever - Throttle	Included in Kit	
7	0		2	Cap, Lever Axle	Included in Kit	
8	0		1	Spacer, Lever Axle	Included in Kit	
9	0123-766		1	Nut, Push	Included in Kit	
10	0609-795		1	Lever, Throttle		
11	0617-248		1	Pad, Insulator		
12	0609-827		1	Element, Thumbwarmer		
13	0609-595		1	Clip, Retaining		
14	0609-884		1	Control, Right Hand - Front - w/Reverse		
15	0609-792		1	Cover, Connector		
16	0609-793		1	Screw, Machine		
17	0609-791		8	Screw, Self-Tapping		
18	0687-244		1	Cable, Throttle		
19	0609-948		1	Element, Handwarmer - Right		
19	0609-949		1	Element, Handwarmer - Left		
20	0609-929		1	Control, Dimmer - Front		
21	0609-883		1	Control, Dimmer - Rear		
22	1686-656		1	Harness, Handlebar		

Item	Part No.	New Part	Qty	Name	Context	Footnote
23	6606-129		1	Pad, Handlebar		
24	0123-811		AR	Tie, Cable - 4 in.		
24	0123-788		AR	Tie, Cable - 8 in.		
25	5639-385		1	Kit, Handguard Mount	(inc. 26)	
26	0641-261		1	Kit, Hardware		
27	5639-581		1	Kit, Handguard - Black		

 
HEADLIGHT AND WIRING ASSEMBLIES [105040]

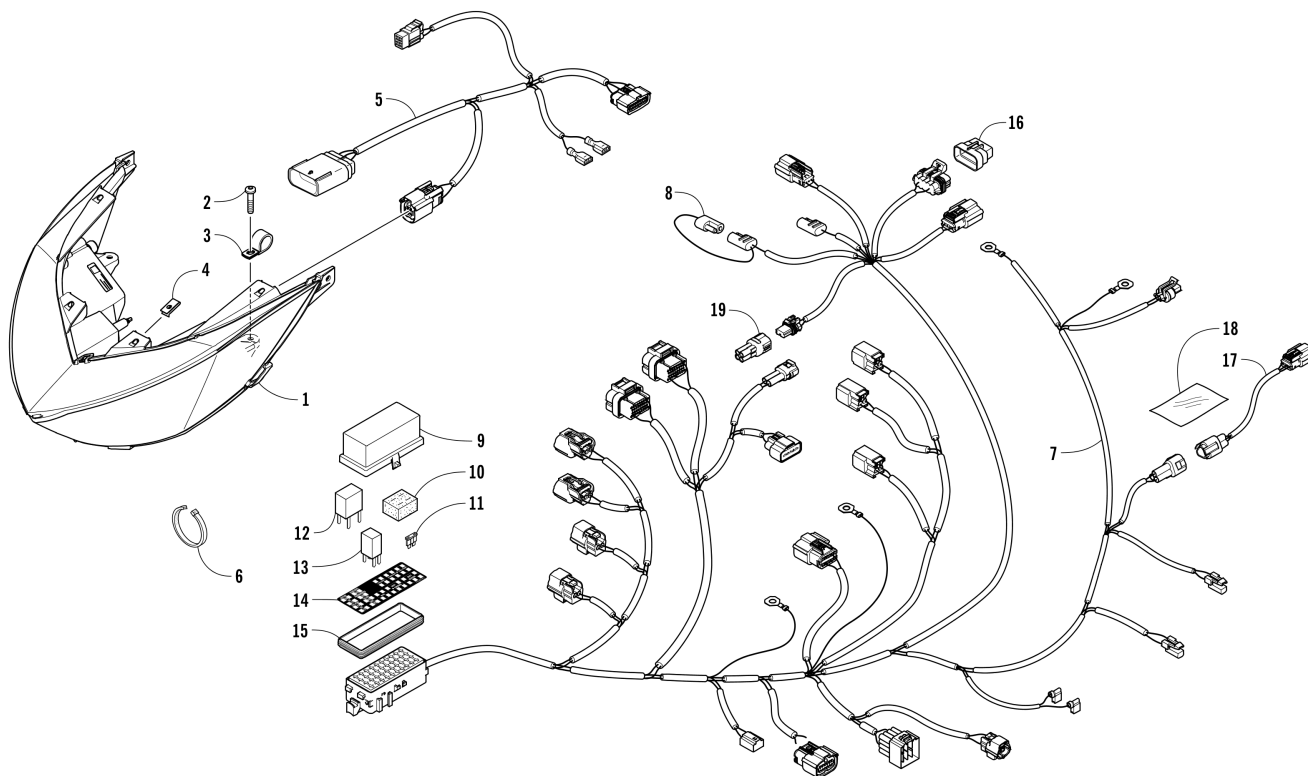

Item	Part No.	New Part	Qty	Name	Context	Footnote
1	0609-959	X	1	Headlight, LED - Assembly		
2	1623-915		3	Screw, Self-Tapping		
3	1623-675		1	Clamp		
4	0423-031		4	Speed Nut		
5	1686-771	X	1	Harness, Hood		
6	0123-811		AR	Tie, Cable - 4 in.		
6	0123-788		AR	Tie, Cable - 8 in.		
6	0123-903		AR	Tie, Cable - 11.5 in.		
7	1686-807		1	Harness, Main	(inc. 8-16)	
8	0486-164		1	Tether, Accessory Connector		
9	0430-085		1	Cover, Fuse Block		
10	0430-037		1	Holder, Fuse		
11	0430-031		4	Fuse - 15 Amp		
11	0430-098		4	Fuse, Mini - 20 Amp		
11	0430-099		2	Fuse, Mini - 25 Amp		
11	0430-030		2	Fuse - 30 Amp		
12	0430-033		2	Relay (5-pin) 30 amp		
13	0430-045		4	Relay (4-pin) 20 amp		
14	2621-912		1	Decal, Fuse Block		
15	0430-086		1	Seal		
16	0430-103		1	Cover, Diagnostics Connector		
17	1686-703		1	Harness, Extension - Taillight		
18	0619-206		AR	Foil, Protective		

Item	Part No.	New Part	Qty	Name	Context	Footnote
19	0630-364		1	Cover, Diagnostics Connector		

 
HOOD ASSEMBLY [105037]

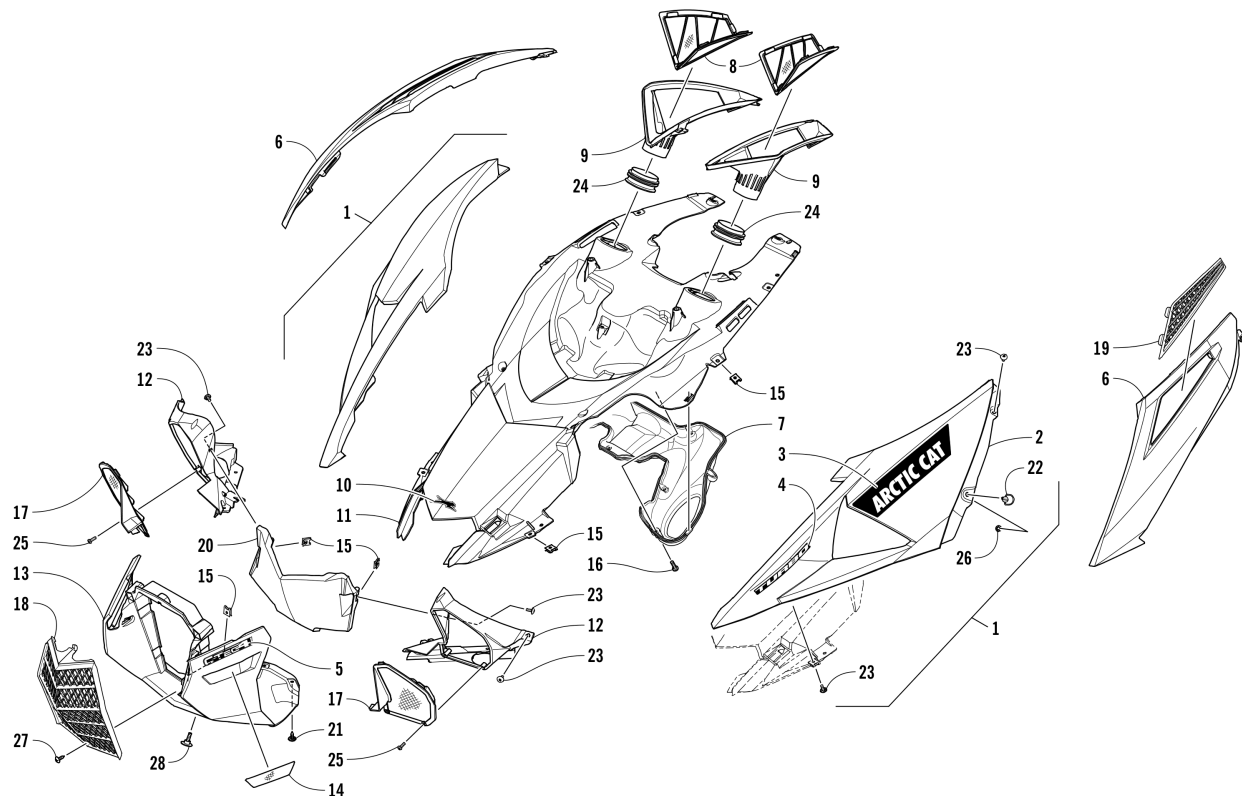

Item	Part No.	New Part	Qty	Name	Context	Footnote
1	5718-218	X	1	Hood w/Decals - Right - Black	(inc. 2-4)	
1	5718-219	X	1	Hood w/Decals - Left - Black	(inc. 2-4)	
2	7606-138	X	1	Hood w/o Decals - Right - Black		
2	7606-139	X	1	Hood w/o Decals - Left - Black		
3	3621-582	X	1	Decal, Hood - Rear - Right		
3	3621-583	X	1	Decal, Hood - Rear - Left		
4	3621-577	X	2	Decal, Front Fascia		
5	0621-993		2	Decal, Hood - "C-TEC4"		
6	7606-152	X	1	Panel, Upper Side - Right - Black		
6	7606-153	X	1	Panel, Upper Side - Left - Black		
7	2670-500		1	Plenum, Intake - Lower		
8	0608-758	X	1	Screen, Intake Duct - Right		
8	0608-759	X	1	Screen, Intake Duct - Left		
9	0608-748	X	1	Duct, Intake - Right		
9	0608-749	X	1	Duct, Intake - Left		
10	4411-479		1	Decal, AirCat		
11	7606-095	X	1	Plenum, Intake - Upper		
12	7606-054	X	1	Vent - Right		
12	7606-055	X	1	Vent - Left		
13	5718-284	X	1	Fascia, Front	(inc. 5)	
14	2621-915	X	2	Decal, Reflector - Amber		
15	1623-939		7	Clip, U-Nut		
16	1623-933		9	Screw, Self-Tapping		


Item	Part No.	New Part	Qty	Name	Context	Footnote
17	7606-056	X	1	Bezel, Vent - Right		
17	7606-057	X	1	Bezel, Vent - Left		
18	7606-117	X	1	Grille		
19	7606-272	X	1	Vent, Upper - Side Panel - Right		
19	7606-273	X	1	Vent, Upper - Side Panel - Left		
20	7606-097	X	1	Close-Off		
21	2623-166		2	Screw, Self-Tapping		
22	2623-003		2	Pin, Retaining		
23	2623-164	X	8	Screw, Self-Tapping		
24	6606-386		2	Seal		
25	2623-211		4	Screw		
26	2623-004		2	Nut, Push		
27	1423-060		1	Screw, Shoulder		
28	2623-167	X	1	Screw, Self-Tapping		

 HYDRAULIC BRAKE CONTROL ASSEMBLY [97987]

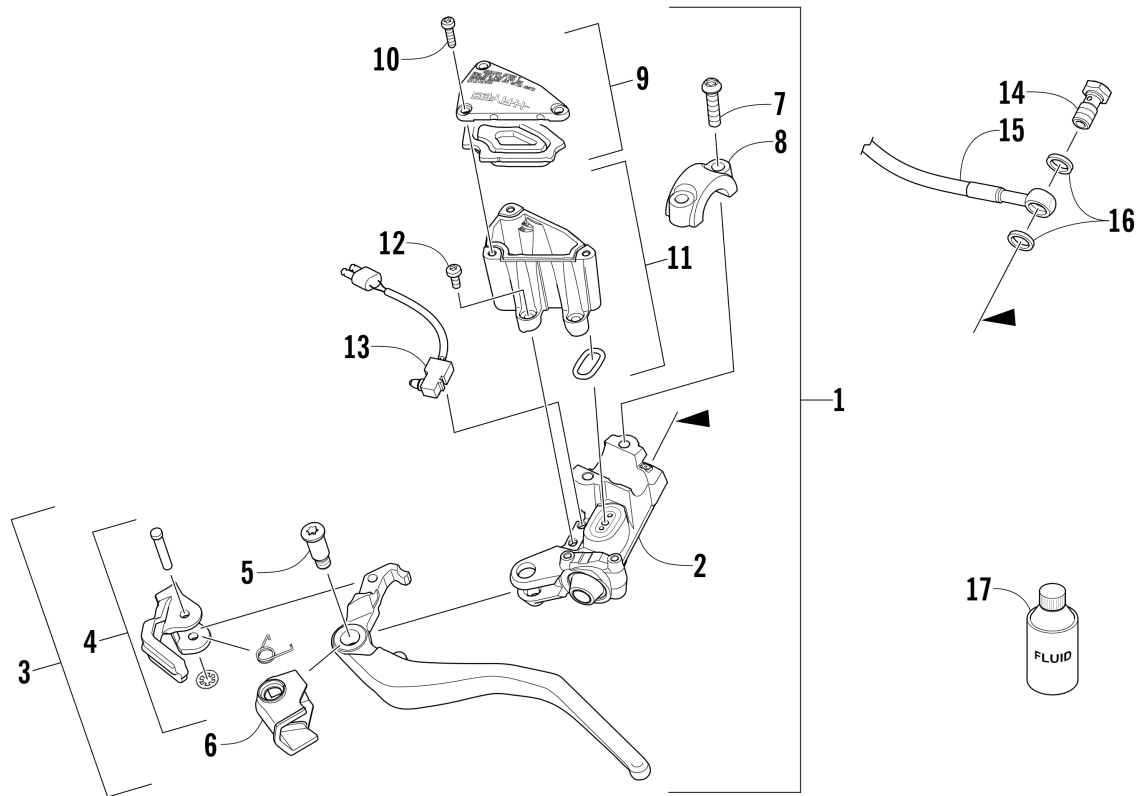

Item	Part No.	New Part	Qty	Name	Context	Footnote
1	2602-477		1	Brake Assembly	(inc. 2-13)	
2	2602-479		1	Piston Assembly		
3	2602-427		1	Lever, Brake - Assembly	(inc. 4-6)	
4	2602-428		1	Lock, Brake Lever - Kit		
5	2602-624		1	Screw, Shoulder		
6	2602-625		1	Boot		
7	1602-936		2	Screw, Machine		
8	0502-869		1	Clamp, Brake		
9	2602-429		1	Cover, Reservoir		
10	2602-430		3	Screw, Self-Tapping		
11	2602-433		1	Reservoir	(inc. 12)	
12	2602-519		3	Screw, Self-Tapping		
13	2602-432		1	Switch, Brake		
14	0423-413		2	Bolt, Banjo-Fitting		
15	2602-424		1	Brakeline, Hydraulic		
16	0423-178		4	Washer, Crush		
17	5639-848		AR	Fluid, Brake - 12 oz		

 
IDLER WHEEL ASSEMBLY [104089]

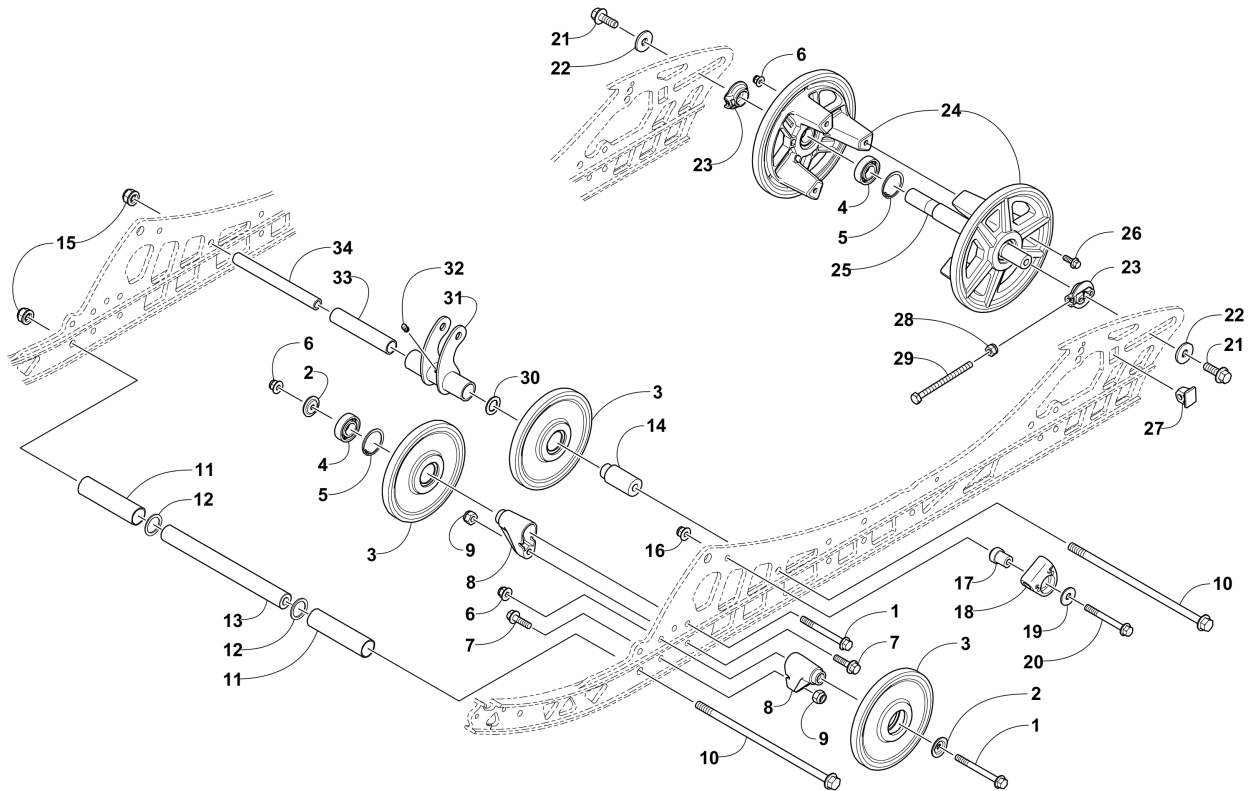

Item	Part No.	New Part	Qty	Name	Context	Footnote
1	8413-675		4	Screw, Cap		
2	2623-025		4	Washer		
3	3604-039		6	Wheel, Idler	(inc. 4-5)	
4	3604-033		8	Bearing		
5	0623-946		8	Ring, Retaining		
6	8427-602		7	Nut, Lock		
7	8413-620		4	Screw, Cap		
8	3604-899		4	Block, Mounting - Idler Wheel		
9	8422-602		4	Nut		
10	1423-431		2	Screw, Cap		
11	3604-083		2	Spacer		
12	0623-912		2	Washer		
13	3604-269		1	Axle		
14	3604-327		2	Block, Mounting - Idler Wheel		
15	2623-202		2	Nut, Lock w/Washer		
16	8427-802		2	Nut, Lock		
17	3604-204		2	Block, Slide		
18	2604-515		2	Slide, Spring		
19	8450-133		2	Washer		
20	8408-855		2	Screw, Cap		
21	8413-031		2	Screw, Cap		
22	1623-931		2	Washer		
23	3604-641		2	Bushing, Adjuster		

Item	Part No.	New Part	Qty	Name	Context	Footnote
24	4604-137		2	Wheel, Idler - Tri-Hub - 8.00 w/0.787 ID	(inc. two No. 4-5)	
25	3604-640		1	Axle, Rear		
26	8408-620		3	Screw, Cap		
27	3604-647		2	Adjuster, Track		
28	8422-802		2	Nut, Lock		
29	1623-682		2	Screw, Cap		
30	1623-794		2	Washer		
31	1704-674		1	Pivot, Shock	(inc.32)	
32	1623-010		1	Fitting, Grease		
33	3604-325		1	Spacer		
34	3604-285		1	Axle		

 
MAGNETO AND COVER ASSEMBLY [104555]

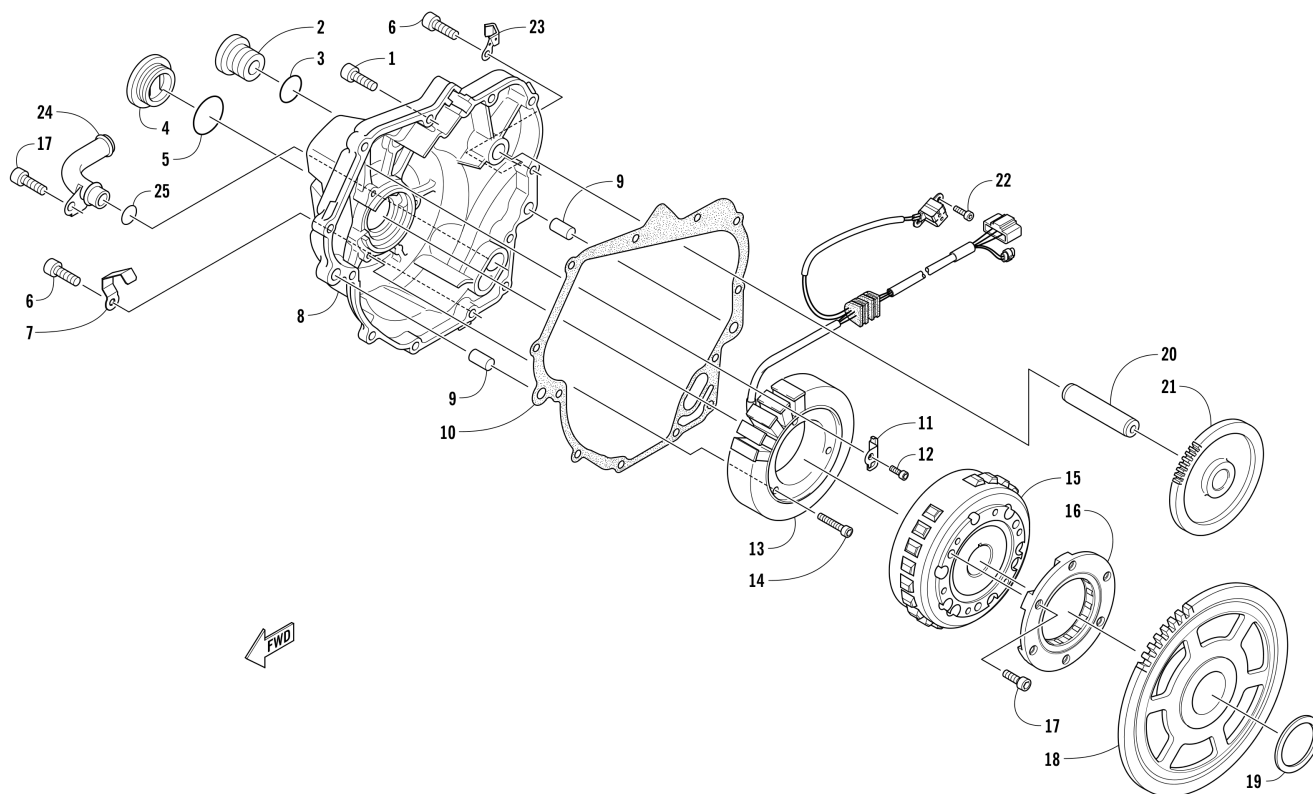

Item	Part No.	New Part	Qty	Name	Context	Footnote
1	3020-345		2	Screw, Cap		
2	3020-346		1	Plug		
3	3020-347		1	O-Ring		
4	3020-616		1	Plug		
5	3020-617		1	O-Ring		
6	3020-314		10	Screw, Cap		
7	3020-350		1	Bracket, Retaining		
8	3020-613		1	Cover, Magneto		
9	3020-293		2	Pin, Dowel		
10	3020-436		1	Gasket, Magneto Cover		
11	3020-620		1	Bracket, Retaining		
12	3020-354		1	Screw, Cap		
13	3020-396		1	Stator		
14	3020-356		3	Screw, Cap		
15	3020-619		1	Rotor/Flywheel		
16	3020-457		1	Clutch, Starter - One-Way		
17	3020-359		6	Screw, Cap		
18	3020-360		1	Gear, Starter Clutch		
19	3020-361		1	Washer		
20	3020-362		1	Shaft, Idler Gear		
21	3020-456		1	Gear, Idler - Starter		
22	3020-621		2	Bolt		
23	3020-618		1	Clamp		


Item	Part No.	New Part	Qty	Name	Context	Footnote
24	3020-614		1	Pipe, Oil		
25	3020-615		1	O-Ring		

 OIL PAN ASSEMBLY [104550]

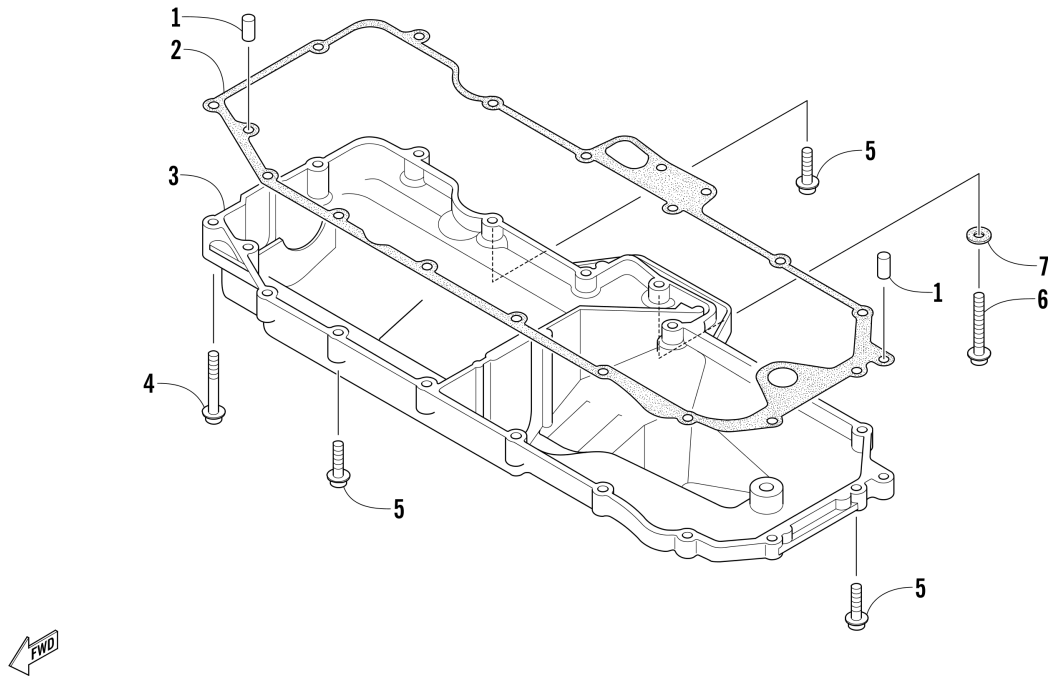


Item	Part No.	New Part	Qty	Name	Context	Footnote
1	3020-293		2	Pin, Dowel		
2	3020-453		1	Gasket, Oil Pan		
3	3020-452		1	Pan, Oil		
4	3020-454		2	Screw, Cap		
5	3020-314		15	Screw, Cap		
6	3020-298		1	Screw, Cap		
7	3020-455		1	Gasket		

 OIL PUMP ASSEMBLY [104552]

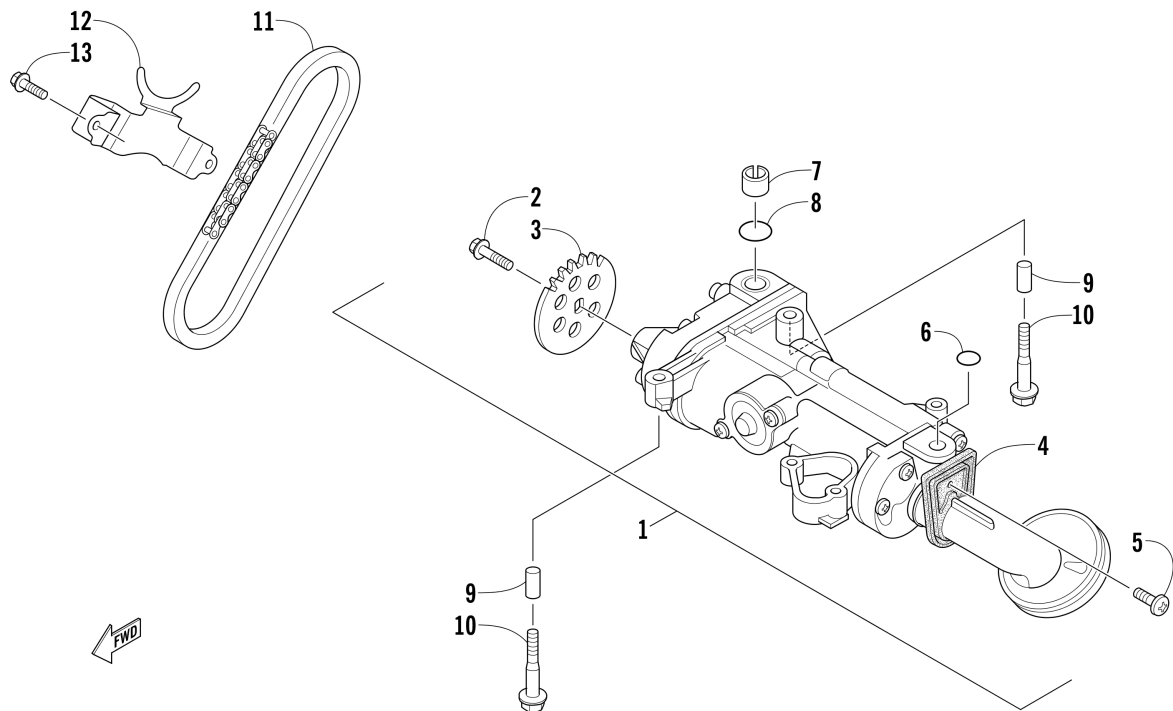

Item	Part No.	New Part	Qty	Name	Context	Footnote
1	3020-584		1	Pump, Oil - Assembly	(inc. 2-5)	
2	3020-282		1	Screw, Cap		
3	3020-585		1	Sprocket		
4	3020-284		1	Isolator, Oil Strainer		
5	0		1	Screw, Machine	Part Number Not Available	
6	3020-285		1	O-Ring		
7	3020-286		1	Insert		
8	3020-287		1	O-Ring		
9	3020-288		2	Pin, Dowel		
10	3020-289		5	Screw, Cap		
11	3020-290		1	Chain		
12	3020-291		1	Bracket, Retainer - Chain		
13	3020-292		2	Screw, Cap		

 
OIL TANK ASSEMBLY [104536]

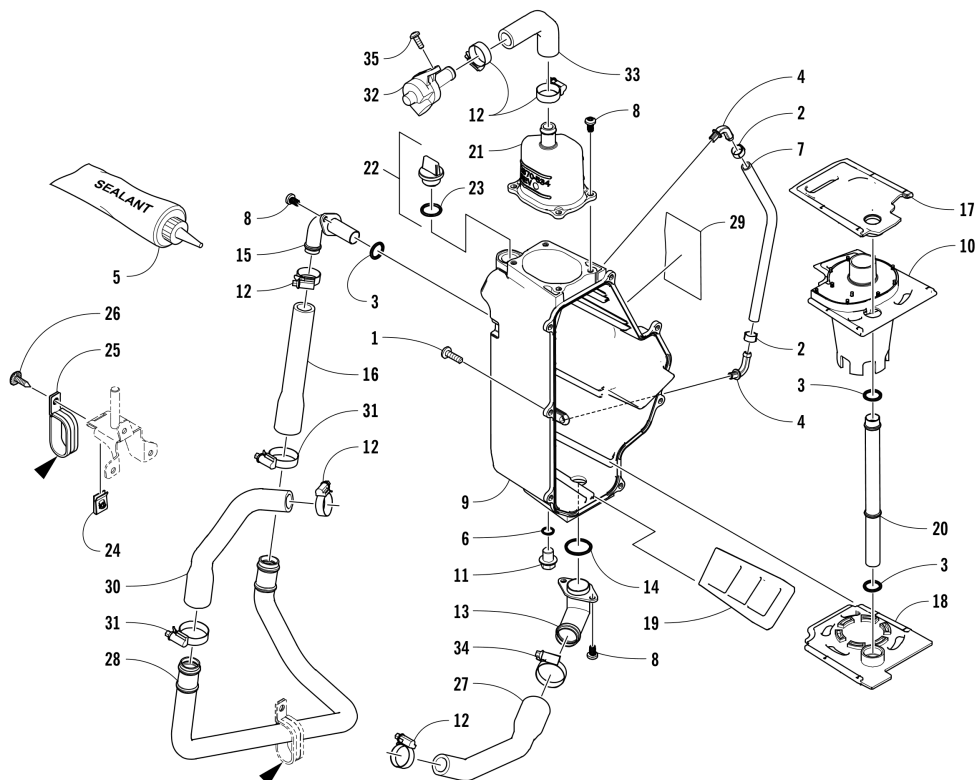

Item	Part No.	New Part	Qty	Name	Context	Footnote
1	1623-814		7	Screw, Machine		
2	0610-415		2	Clamp, Hose		
3	0670-183		3	O-Ring		
4	0913-004	X	2	Fitting, 90 Deg		
5	1048-063		AR	Sealant - 70 ml		
6	1602-213		1	O-Ring		
7	0610-968		1	Hose - Clear - 25 ft		
8	1623-969		8	Screw, Self-Tapping		
9	1770-144	X	1	Tank, Oil		
10	1770-188	X	1	Baffle, Mid-Cone - Assembly		
11	2602-099		1	Plug		
12	2623-152	X	5	Clamp, Hose		
13	2670-220		1	Fitting, Oil Supply - Engine		
14	2670-290		1	O-Ring		
15	2670-523	X	1	Fitting, Oil Tank Return		
16	2670-526	X	1	Hose, Oil		
17	2670-527	X	1	Baffle, Oil Tank - Upper		
18	2670-528	X	1	Baffle, Oil Tank - Lower		
19	2670-531	X	1	Baffle, Oil Tank - Screen		
20	2670-532	X	1	Tube - Oil Tank		
21	2670-534	X	1	Breather, Oil Tank		
22	2670-535	X	1	Cap, Oil Tank	(inc. 23)	
23	2670-536	X	1	O-Ring, Oil Cap		

Item	Part No.	New Part	Qty	Name	Context	Footnote
24	1623-939		1	Clip, U-Nut		
25	2623-181		1	Clamp, Routing		
26	2623-163		1	Screw, Self-Tapping		
27	2670-525	X	1	Tube, Oil Feed		
28	2670-497		1	Tube, Oil Return		
29	3621-576	X	1	Decal, Oil Level		
30	1610-005		1	Hose, Oil Engine Outlet - Return Tube		
31	2623-038		2	Clamp, Hose		
32	3020-416	X	1	Valve		
33	2670-539	X	1	Hose, Breather		
34	2623-088		1	Clamp, Hose		
35	8468-616		1	Screw, Machine		

 
PISTON AND CRANKSHAFT ASSEMBLY [104548]

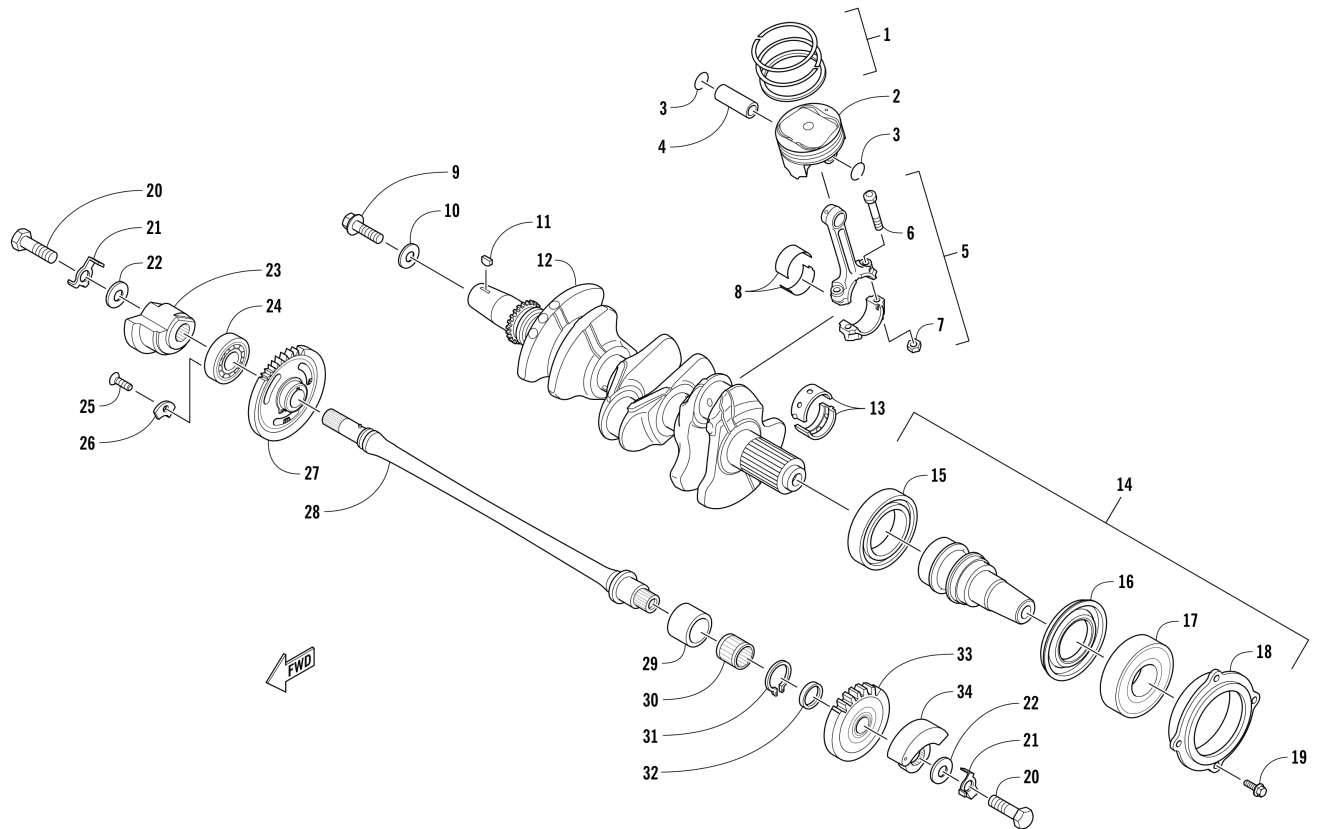

Item	Part No.	New Part	Qty	Name	Context	Footnote
1	3020-573		3	Ring Set, Piston		
2	3020-572		3	Piston		
3	3020-575		6	Circlip		
4	3020-574		3	Pin, Piston		
5	3020-571		3	Rod, Connecting - Assembly	(inc. 6)	
6	3020-195		2	Screw, Cap		
7	3020-196		2	Nut		
8	3020-197		6	Bearing, Connecting Rod - White		
8	3020-198		6	Bearing, Connecting Rod - Blue		
8	3020-199		6	Bearing, Connecting Rod - Black		
8	3020-200		6	Bearing, Connecting Rod - Brown		
8	3020-201		6	Bearing, Connecting Rod - Green		
8	3020-202		6	Bearing, Connecting Rod - Yellow		
9	3020-203		1	Screw, Cap		
10	3020-204		1	Washer		
11	3020-206		1	Key		
12	3020-570		1	Crankshaft Assembly		
13	3020-208		8	Bearing, Crankshaft - Black		
13	3020-209		8	Bearing, Crankshaft - Brown		
13	3020-210		8	Bearing, Crankshaft - Green		
13	3020-211		8	Bearing, Crankshaft - Yellow		
13	3020-212		8	Bearing, Crankshaft - Pink		
13	3020-213		8	Bearing, Crankshaft - Red		


Item	Part No.	New Part	Qty	Name	Context	Footnote
13	3020-214		8	Bearing, Crankshaft - White		
14	3020-576		1	Shaft, Output - Assembly	(inc. 15-18)	
15	3020-216		1	Bearing		
16	3020-217		1	Seal		
17	3020-218		1	Bearing		
18	3020-430		1	Housing, Bearing		
19	3020-220		4	Screw, Cap		
20	3020-221		2	Screw, Cap		
21	3020-222		2	Washer, Tab		
22	3020-223		2	Washer		
23	3020-433		1	Counterweight		
24	3020-579		1	Bearing		
25	3020-226		1	Screw, Machine		
26	3020-227		1	Plate, Retaining		
27	3020-432		1	Gear, Balancer		
28	3020-431		1	Shaft, Balancer		
29	3020-230		1	Housing, Bearing		
30	3020-231		1	Bearing		
31	3020-232		1	Circlip		
32	3020-233		1	Spacer		
33	3020-234		1	Gear, Driven		
34	3020-235		1	Counterweight		

 REAR SUSPENSION FRONT ARM ASSEMBLY [103944]

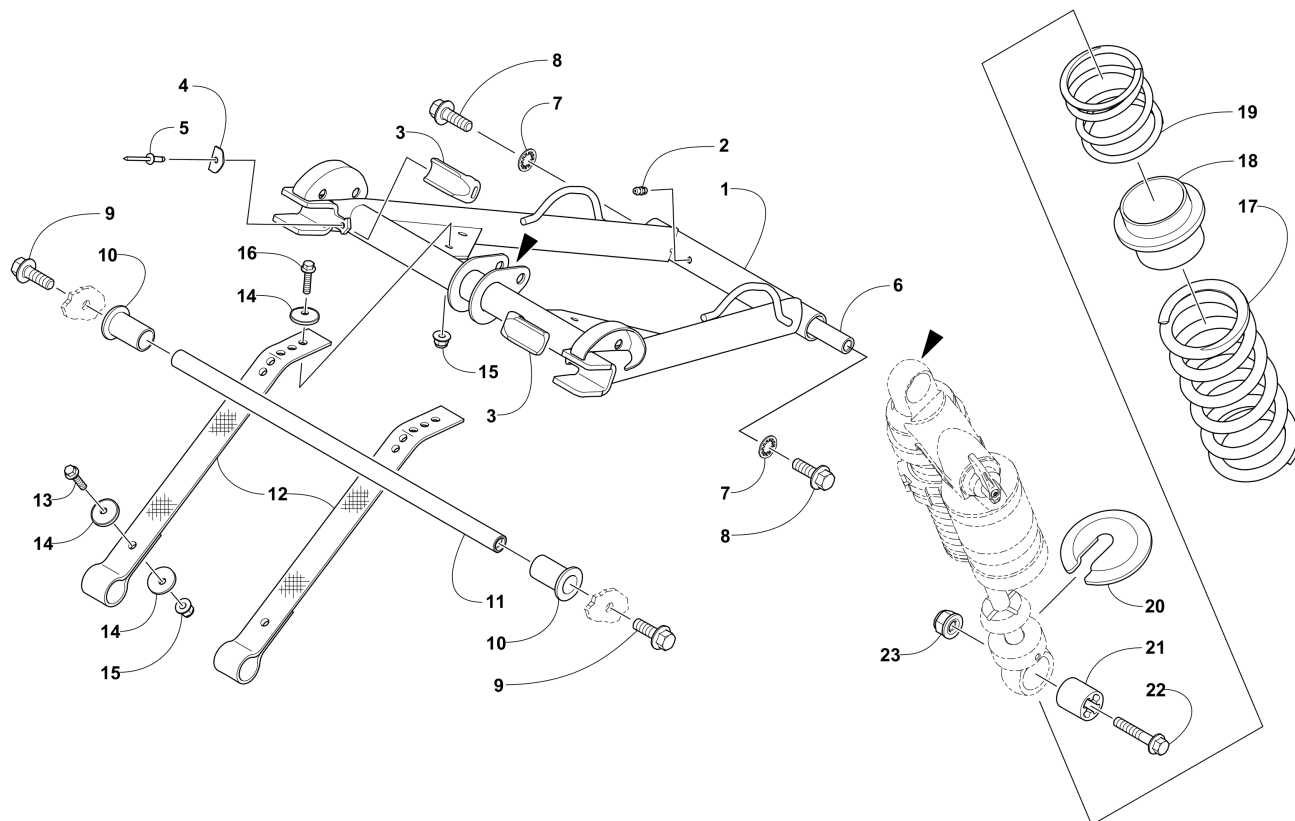


Item	Part No.	New Part	Qty	Name	Context	Footnote
1	3704-004	X	1	Arm, Front Suspension - Black	(inc. 2-5)	
2	1623-010		1	Fitting, Grease		
3	3604-141		2	Bumper, Front Slider		
4	3604-968		2	Plate, Retaining		
5	8060-708		2	Rivet		
6	4604-086		1	Axle, Inner		
7	1623-992		2	Washer, Internal Tooth Lock		
8	8413-031		2	Screw, Cap		
9	8408-041		2	Screw, Cap		
10	3604-233		2	Bushing, Flared		
11	3604-663		1	Axle, Front Slider		
12	3604-823		2	Strap, Limiter		
13	8408-630		2	Screw, Cap		
14	8450-109		6	Washer		
15	8427-602		4	Nut, Lock		
16	8408-620		2	Screw, Cap		
17	3704-039		1	Spring, Compression - Black		
18	4604-238		1	Ring, Communicator		
19	3704-035		1	Spring, Compression - Black		
20	0403-490		1	Retainer, Spring		
21	4604-228	X	1	Axle, Shock		
22	8408-045		1	Screw, Cap		
23	2623-076		1	Nut, Lock w/Washer		

 REAR SUSPENSION FRONT ARM SHOCK ABSORBER [103945]

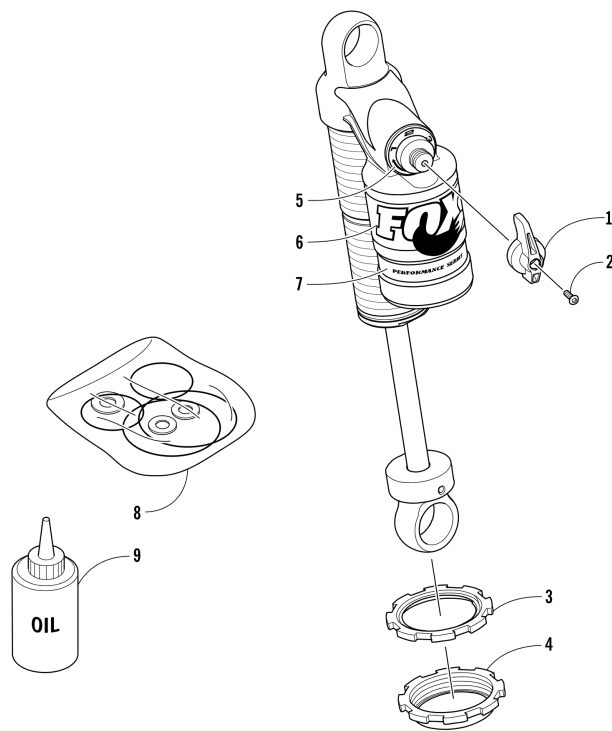

Item	Part No.	New Part	Qty	Name	Context	Footnote
-	2704-966	X	1	Complete Shock Absorber		
1	3603-520		1	Knob, Damping Adjuster - Rebound		
2	3603-377		1	Screw, Machine		
3	3603-026		1	Preload Ring, Back-Up		
4	3603-027		1	Preload Ring		
5	3603-523		1	Decal, Base Valve		
6	3603-562	X	1	Decal, Reservoir		
7	3603-365		1	Decal, "Performance Series"		
8	3603-522		1	Kit, Seal/Cap Rebuild		
9	5639-530		AR	Oil, Shock - 1 qt		

 
REAR SUSPENSION REAR ARM ASSEMBLY [103946]

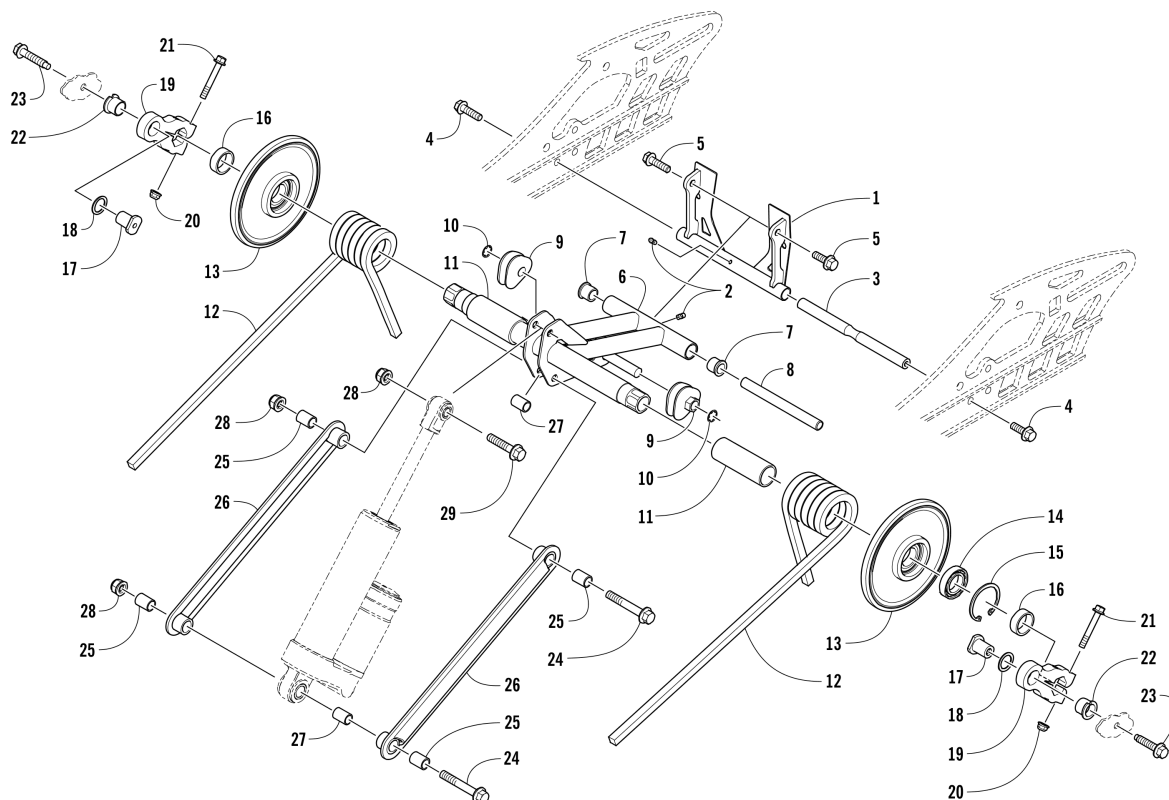

Item	Part No.	New Part	Qty	Name	Context	Footnote
1	2704-389		1	Arm, Rear - Black	(inc. one No. 2)	
2	1623-010		2	Fitting, Grease		
3	3604-965		1	Axle		
4	8413-031		2	Screw, Cap		
5	8413-041		2	Screw, Cap		
6	2704-002		1	Arm, Idler - Black	(inc. 7 and one No. 2)	
7	1604-100		2	Bushing, Flared		
8	3604-276		1	Axle		
9	1604-204		1	Block, Spring Adjuster - Right - Black		
9	1604-205		1	Block, Spring Adjuster - Left - Black		
10	0623-138		2	Ring, Retaining		
11	3604-288		2	Sleeve, Spring		
12	2704-026		1	Spring, Suspension - Right		
12	2704-027		1	Spring, Suspension - Left		
13	3604-901		2	Wheel, Idler	(inc. 14-15)	
14	3604-257		2	Bearing		
15	3604-256		2	Ring, Retaining		
16	3604-674		2	Spacer, Pivot - Idler Arm		
17	3604-979		2	Axle		
18	3604-930		2	Washer		
19	3704-007	X	2	Pivot - Idler Arm	(inc. 20-22)	
20	8427-802		2	Nut, Lock		
21	8408-860		2	Screw, Cap		


Item	Part No.	New Part	Qty	Name	Context	Footnote
22	3604-713		2	Bushing, Flared		
23	2623-002		2	Screw, Cap		
24	8408-090		2	Screw, Cap		
25	3604-330		4	Axle, Link		
26	0704-928		2	Link, Shock		
27	3604-109		2	Sleeve		
28	2623-076		3	Nut, Lock w/Washer		
29	8408-045		1	Screw, Cap		

 REAR SUSPENSION REAR ARM SHOCK ABSORBER [103947]

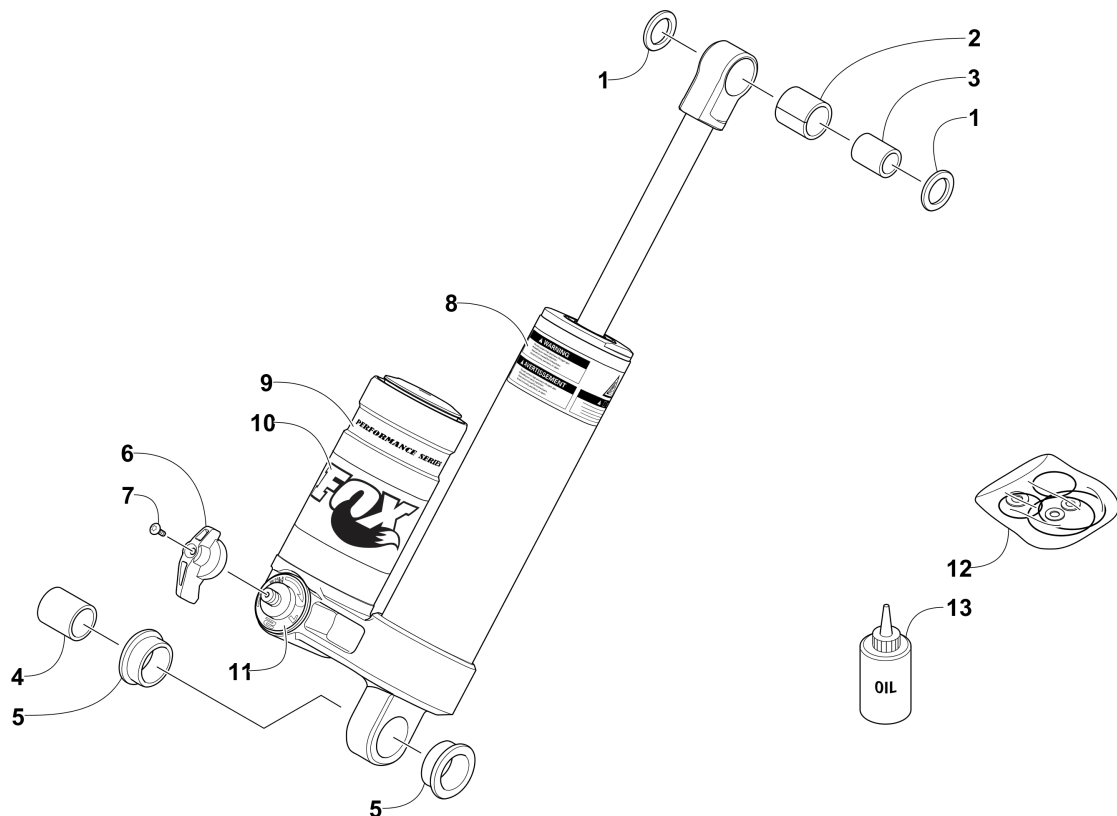


Item	Part No.	New Part	Qty	Name	Context	Footnote
-	3704-032	X	1	Complete Shock Absorber		
1	4604-215	X	2	Spacer		
2	3603-399		1	Bushing, Eyelet		
3	4604-216		1	Sleeve		
4	2604-223		1	Sleeve		
5	1604-222		2	Bushing		
6	3603-520		1	Knob, Damping Adjuster - Rebound		
7	3603-377		1	Screw, Machine		
8	3603-418		1	Decal, Warning		
9	3603-365		1	Decal, "Performance Series"		
10	3603-437		1	Decal, Reservoir		
11	3603-523		1	Decal, Base Valve		
12	4604-160		1	Kit, Seal/Rebuild		
13	5639-530		AR	Oil, Shock - 1 qt		

 SEAT ASSEMBLY [105042]

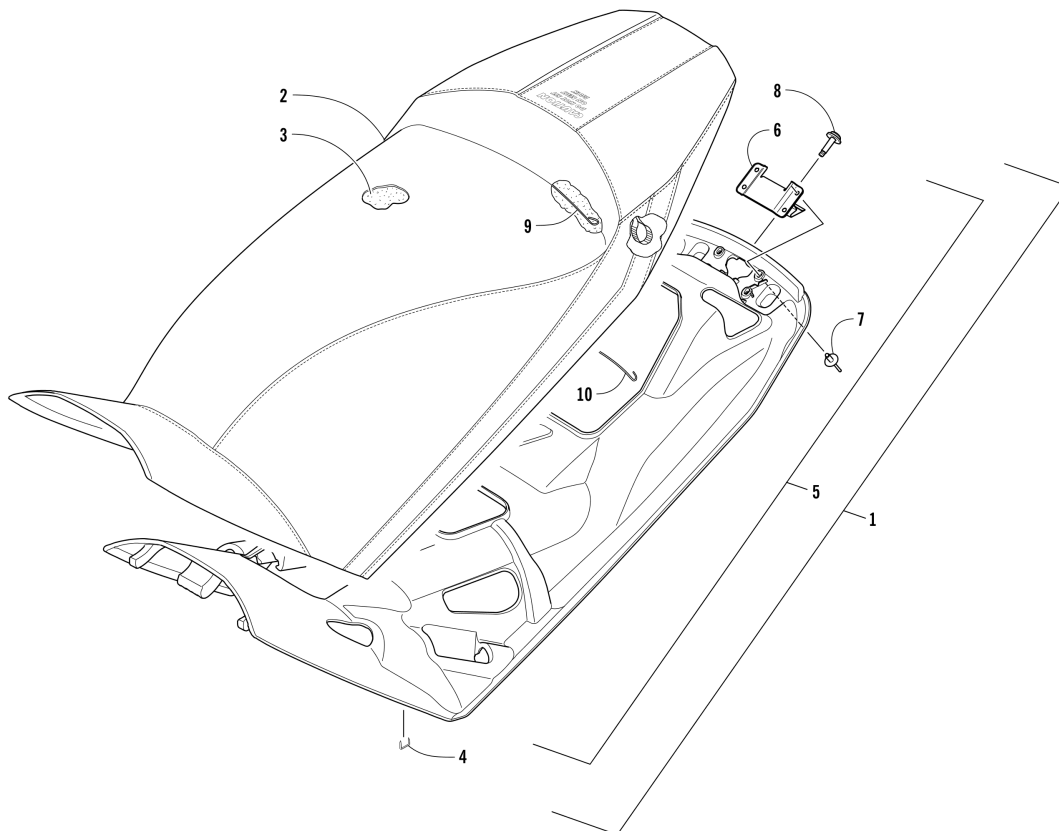


Item	Part No.	New Part	Qty	Name	Context	Footnote
1	6706-219	X	1	Complete Seat Assembly	(inc. 2-7 and 9-10)	
2	6706-220	X	1	Cover, Seat	(inc. 9)	
3	0717-214		1	Foam, Seat		
4	0624-528		AR	Staple		
5	6706-251	X	1	Seat-Base	(inc. 6-7)	
6	6606-833		1	Latch, Seat		
7	8061-708		4	Rivet		
8	0423-609		1	Screw, Machine		
9	3606-369		1	Wire, Seat		
10	6606-461		1	Wire, Seat		

 SKI AND SPINDLE ASSEMBLY [102891]

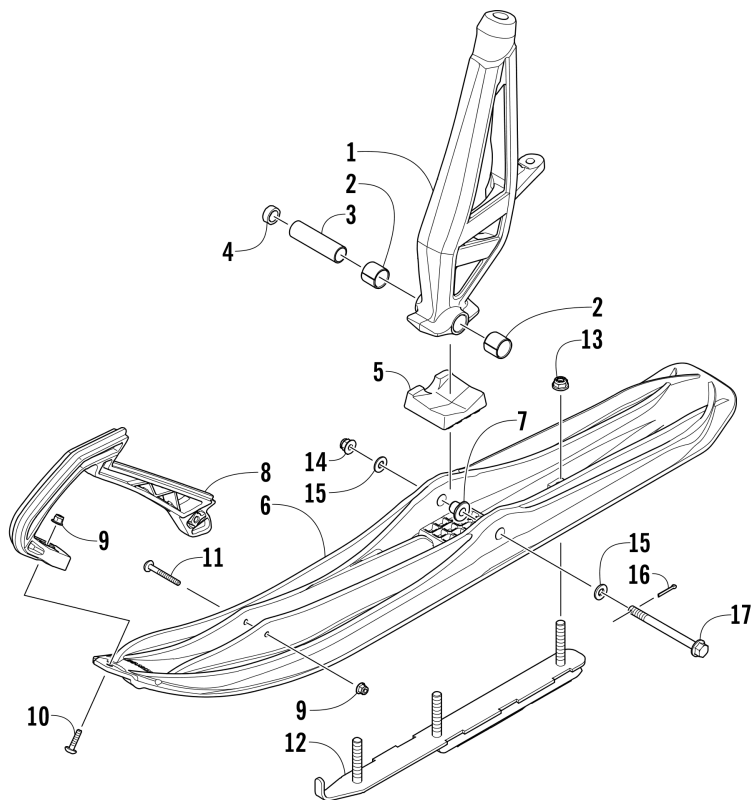

Item	Part No.	New Part	Qty	Name	Context	Footnote
1	3703-184		1	Spindle, Steering - Right - Green	(inc. two No. 2)	
1	3703-185		1	Spindle, Steering - Left - Green	(inc. two No. 2)	
2	0603-158		4	Bearing		
3	2603-813		2	Axle, Spindle		
4	2603-208		2	Spacer		
5	3603-237		2	Damper, Ski - Rubber		
6	3603-255		2	Ski, Plastic - White		
7	2603-746		4	Insert		
8	3603-228		2	Handle, Plastic - Green		
9	8427-602		4	Nut, Lock		
10	8476-625		2	Screw, Machine		
11	8476-650		2	Screw, Machine		
12	2603-988		1	Wearbar - Right		
12	2603-989		1	Wearbar - Left		
13	8047-486		6	Nut, Lock		
14	0423-744		2	Nut, Lock		
15	1623-801		4	Washer		
16	0123-458		2	Pin, Cotter		
17	1623-781		2	Screw, Cap		

 
SKID PLATE AND SIDE PANEL ASSEMBLY [105041]

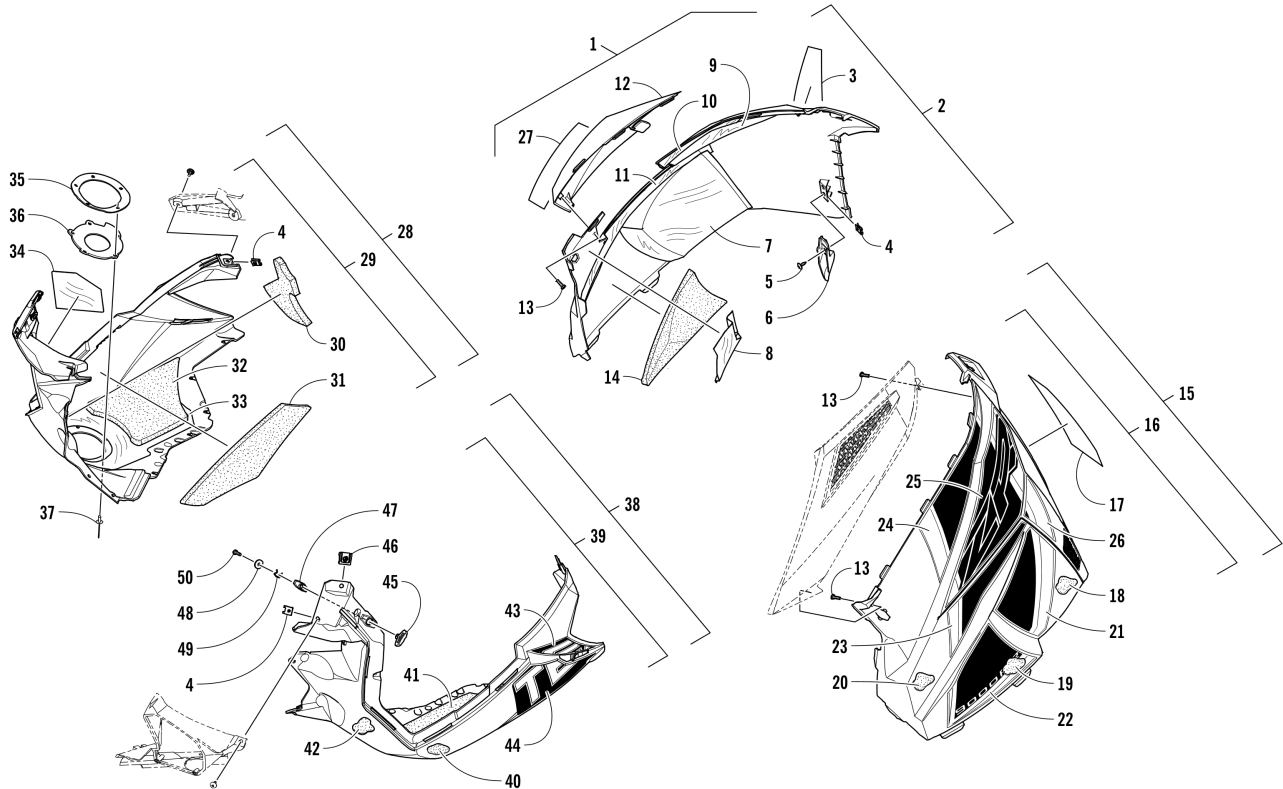

Item	Part No.	New Part	Qty	Name	Context	Footnote
1	5718-220	X	1	Panel, Side w/Decals - Right - Green	(inc. 2-14 and 21-27)	
2	5718-224	X	1	Panel, Side w/o Decals - Right - Green	(inc. 3-14)	
3	3621-487	X	1	Decal, Warning - English		
4	1623-939		8	Clip, U-Nut		
5	2623-166		2	Screw, Self-Tapping		
6	7606-292	X	1	Hook, Mounting - Right		
6	7606-293	X	1	Hook, Mounting - Left		
7	7606-076	X	1	Foil, Protective - Lower - Rear - Right		
8	7606-498		1	Foil, Protective - Upper Front - Right		
9	7606-288	X	1	Foil, Protective - Upper - Right		
10	7606-432	X	1	Foil, Protective - Right		
11	7606-116	X	1	Foil, Protective - Middle - Right		
12	7606-091	X	1	Vent, Side Panel		
13	2623-211		6	Screw		
14	0617-754	X	1	Foam, Side Panel - Lower Front - Right		
15	5718-221	X	1	Panel, Side w/Decals - Left - Green	(inc. 4-6 and 16-26)	
16	5718-225	X	1	Panel, Side w/o Decals - Left - Green	(inc. 4-6 and 17-20)	
17	3621-486	X	1	Decal, Warning - French		
18	0617-757	X	1	Foam, Side Panel - Lower Rear - Left		
19	0617-755	X	1	Foam, Side Panel - Lower Front - Left		
20	0617-759	X	1	Foam, Side Panel - Middle - Left		
21	3621-590	X	1	Decal, Side Panel - Lower Rear - Right		

Item	Part No.	New Part	Qty	Name	Context	Footnote
21	3621-591	X	1	Decal, Side Panel - Lower Rear - Left		
22	3621-592	X	1	Decal, Side Panel - Lower Front - "9000" - Right		
22	3621-593	X	1	Decal, Side Panel - Lower Front - "9000" - Left		
23	3621-588	X	1	Decal, Side Panel - Mid Front - Right		
23	3621-589	X	1	Decal, Side Panel - Mid Front - Left		
24	3621-154	X	1	Decal, Side Panel - Upper Vent - Right		
24	3621-613	X	1	Decal, Side Panel - Upper Front - Left		
25	3621-584	X	1	Decal, Side Panel - Upper Rear - Right		
25	3621-585	X	1	Decal, Side Panel - Upper Rear - Left		
26	3621-586	X	1	Decal, Side Panel - Lower Rear - Right		
26	3621-587	X	1	Decal, Side Panel - Lower Rear - Left		
27	3621-256	X	1	Decal, Side Panel - Vent Lower Right		
28	5718-228	X	1	Plate, Skid w/Decals - Right - Black	(inc. 4, 29-34, and 43-50)	
29	4718-970	X	1	Plate, Skid w/o Decals - Right - Black	(inc. 4, 30-34, and 45-50)	
30	0617-760	X	1	Foam, Skid Plate - Front - Right		
31	0617-762	X	1	Foam, Skid Plate - Middle - Right		
32	0617-764	X	1	Foam, Skid Plate - Lower - Right		
33	3612-192	X	1	Foil, Skid Plate - Right		
34	3612-274		1	Foil, Skid Plate - Right		
35	3612-193		1	Plate, Exhaust Outlet		
36	3612-191		1	Seal, Exhaust Outlet		
37	8061-708		AR	Rivet		
38	5718-229	X	1	Plate, Skid w/Decals - Left - Black	(inc. 4 and 40-50)	
39	4718-971	X	1	Plate, Skid w/o Decals - Left - Black	(inc. 4, 40-42, and 45-50)	
40	0617-765	X	1	Foam, Skid Plate - Lower - Left		
41	0617-763	X	1	Foam, Skid Plate - Middle - Left		
42	0617-761	X	1	Foam, Skid Plate - Front - Left		
43	3621-578	X	1	Decal, Skid Plate - Rear - Right		
43	3621-579	X	1	Decal, Skid Plate - Rear - Left		
44	3621-580	X	1	Decal, Skid Plate - Front - Right		
44	3621-581	X	1	Decal, Skid Plate - Front - Left		
45	7606-265	X	2	Knob, Holddown		
46	2623-005		2	Clip, Retaining		
47	7606-296	X	2	Plate, Backing		
48	2623-171	X	2	Washer, Flat		
49	2623-155	X	2	Clip, Retaining		
50	1623-933		2	Screw, Self-Tapping		

 
SLIDE RAIL AND TRACK ASSEMBLY [103956]

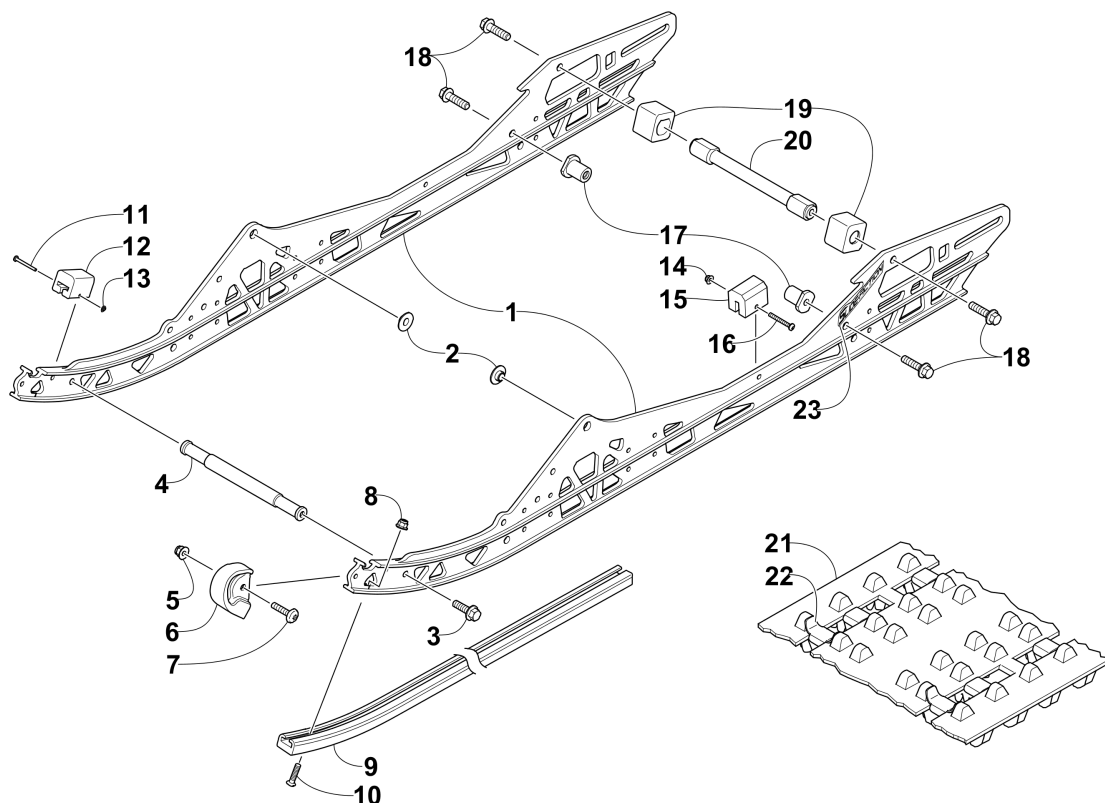

Item	Part No.	New Part	Qty	Name	Context	Footnote
-	3704-043	X	1	Complete Skid Frame Assembly - White		
1	2704-923		2	Rail, Formed - White		
2	3604-266		2	Insert, Rail		
3	8408-826		2	Screw, Cap		
4	3604-679		1	Axle		
5	8427-602		2	Nut, Lock		
6	4604-093		2	End Cap, Slide Rail		
7	8476-630		2	Screw, Machine		
8	8047-366		2	Nut, Lock		
9	3604-864		2	Wearstrip - Black		
10	0123-859		2	Screw, Machine		
11	0123-767		2	Rivet, Solid		
12	0104-631		2	Pad, Shock		
13	0123-766		2	Nut, Push		
14	8427-502		2	Nut, Lock		
15	1604-429		2	Pad, Shock		
16	8470-540		2	Screw, Machine		
17	3604-979		2	Axle		
18	8413-031		4	Screw, Cap		
19	2604-545		2	Block, Coupler		
20	3604-668		1	Axle		
21	2602-627		1	Track Assembly	(inc. 22)	
22	2602-386		48	Clip, Guide		


Item	Part No.	New Part	Qty	Name	Context	Footnote
23	0621-907		2	Decal, "Slide Action"		

 STARTER MOTOR ASSEMBLY [104556]

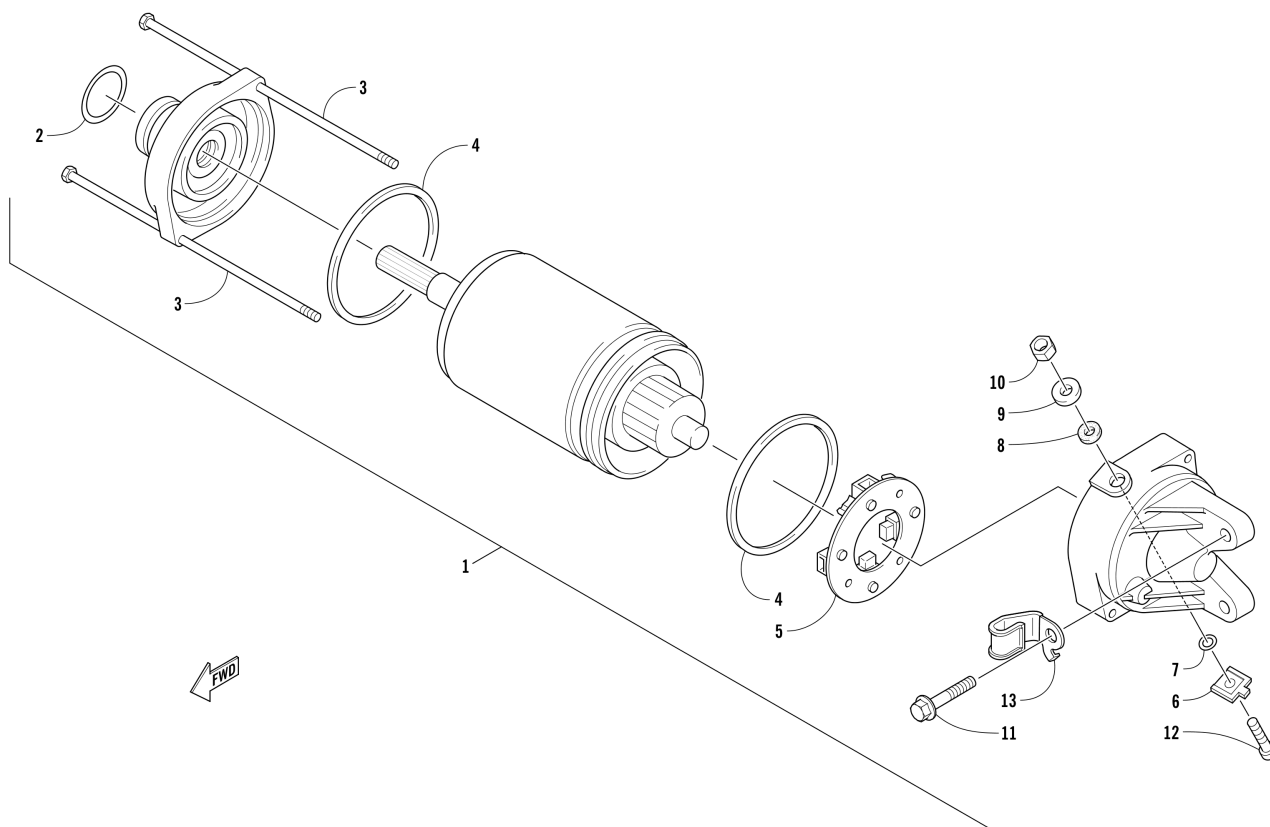


Item	Part No.	New Part	Qty	Name	Context	Footnote
1	3020-364		1	Motor, Starter - Assembly	(inc. 2-10)	
2	3020-365		1	O-Ring		
3	3020-366		2	Screw, Cap		
4	3020-367		2	Gasket		
5	3020-368		1	Brush Assembly		
6	3020-369		1	Terminal, Brush		
7	3020-370		1	O-Ring		
8	3020-371		1	Washer		
9	3020-372		1	Washer		
10	3020-373		1	Nut		
11	3020-163		2	Screw, Cap		
12	3020-622		1	Screw		
13	3020-623		1	Clamp		

 STEERING POST ASSEMBLY [105032]

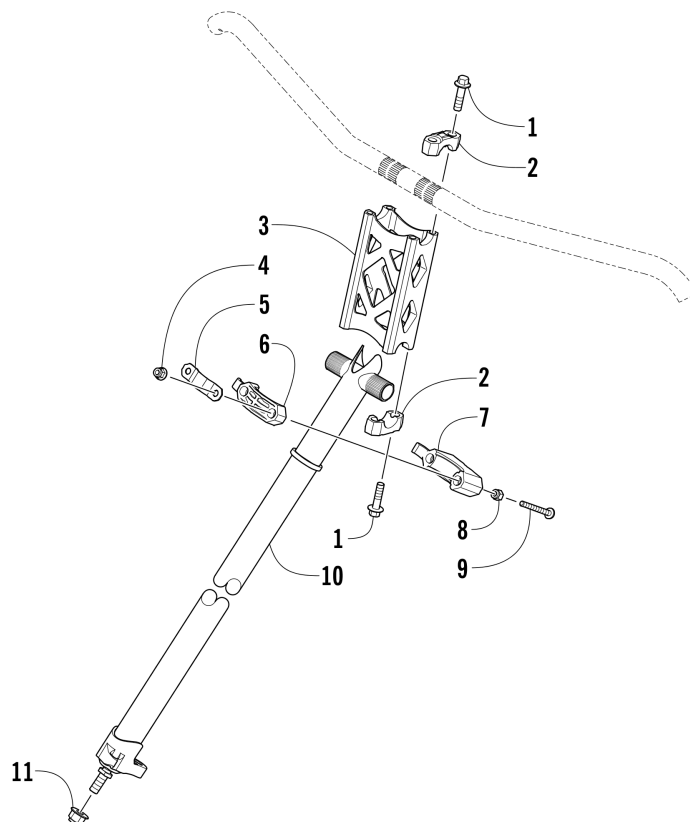

Item	Part No.	New Part	Qty	Name	Context	Footnote
1	8408-830		8	Screw, Cap		
2	1605-118		4	Cap, Riser Block		
3	1605-073		1	Block, Riser		
4	8427-602		2	Nut, Lock		
5	0605-998		1	Plate, Retaining		
6	1605-127		1	Block, Mounting - Steering Post - Upper		
7	1605-154		1	Block, Mounting - Steering Post - Lower		
8	8422-602		2	Nut		
9	2623-070		2	Screw, Machine		
10	1705-522	X	1	Post, Steering		
11	2623-202		1	Nut, Lock w/Washer		

 
STEERING SUPPORT ASSEMBLY [104578]

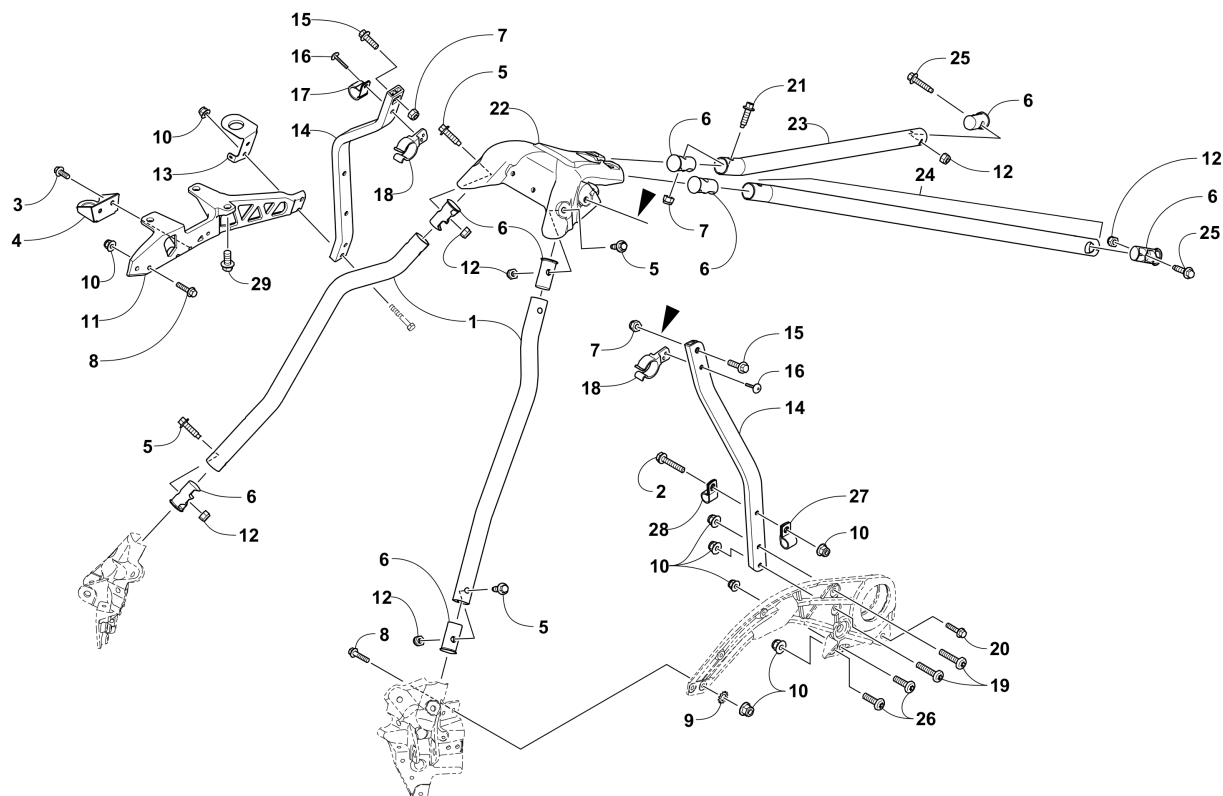

Item	Part No.	New Part	Qty	Name	Context	Footnote
1	2707-568	X	1	Spar, Front - Right		
1	2707-569	X	1	Spar, Front - Left		
2	2623-138	X	1	Screw		
3	8408-616		2	Screw, Cap		
4	3612-165	X	1	Bracket, Mounting - Resonator - Chassis		
5	1623-836		4	Screw, Cap		
6	1607-680		8	Insert		
7	8422-802		4	Nut, Lock		
8	8408-625		5	Screw, Cap		
9	8053-212		1	Washer, External Tooth Lock		
10	8427-602		11	Nut, Lock		
11	2707-566		1	Support, Chassis - Right		
12	8422-002		6	Nut, Lock		
13	2712-062		1	Bracket, Mounting - Resonator		
14	1607-660	X	1	Support, Side - Rear Right		
14	1607-133		1	Support, Side - Rear - Left		
15	8408-820		2	Screw, Cap		
16	2623-165		2	Self-Tapping		
17	2623-006		1	Clamp, Cable		
18	0609-937		2	Clip, Routing		
19	8476-635		2	Screw, Machine		
20	8408-825		1	Screw, Cap		
21	1623-982		2	Screw, Cap		

Item	Part No.	New Part	Qty	Name	Context	Footnote
22	2707-850	X	1	Support, Steering		
23	2707-686	X	1	Spar, Rear - Right		
24	2707-687	X	1	Spar, Rear - Left		
25	8408-030		2	Screw, Cap		
26	8468-625		2	Screw, Machine		
27	2623-083		1	Clamp, Routing		
28	1623-722		1	Clamp, Cable		
29	2623-179	X	3	Screw, Cap		

 
THROTTLE BODY ASSEMBLY [104554]

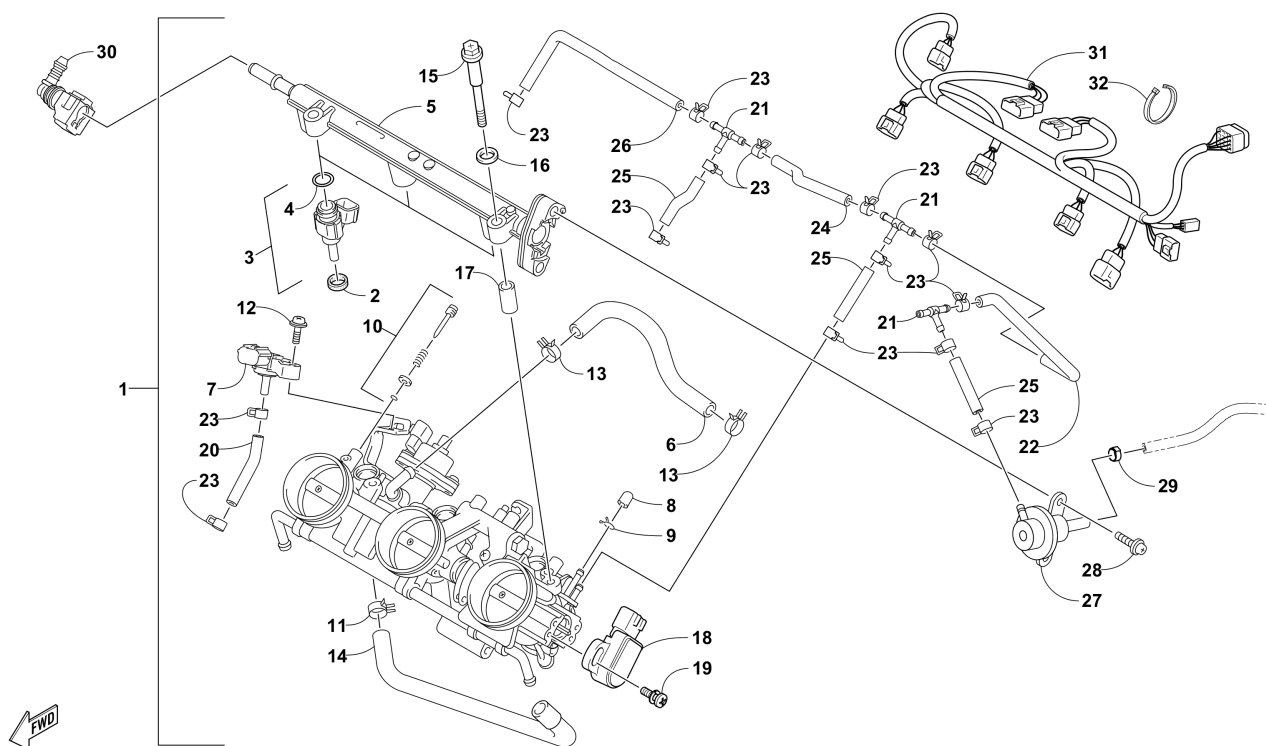

Item	Part No.	New Part	Qty	Name	Context	Footnote
1	3020-587		1	Body, Throttle - Assembly	(inc. 2-19)	
2	3020-334		3	Grommet		
3	3020-589		3	Injector	(inc. 4)	
4	3020-590		3	O-Ring		
5	3020-591		1	Rail, Fuel		
6	3020-339		1	Hose, ISC		
7	3020-398	X	1	Sensor, Pressure		
8	3020-592		6	Cap		
9	3020-593		6	Clamp, Hose		
10	3020-335		3	Screw, Adjustment		
11	3020-594		1	Clamp, Hose		
12	3020-595		1	Screw, Machine		
13	1623-285		2	Clamp, Hose		
14	3020-407		1	Hose		
15	3020-329		2	Screw, Shoulder		
16	3020-330		2	Washer		
17	3020-331		2	Spacer		
18	3020-342		1	Sensor, Throttle Position - Assembly		
19	3020-343		2	Screw, Machine		
20	3020-597		1	Hose, Vent		
21	3020-598		3	Fitting		
22	3020-599		1	Hose		
23	3020-600		14	Clamp, Hose		


Item	Part No.	New Part	Qty	Name	Context	Footnote
24	3020-601		1	Hose		
25	3020-602		3	Hose		
26	3020-603		1	Hose		
27	3020-604		1	Regulator, Pressure		
28	3020-605		2	Screw		
29	0610-419		1	Clamp, Hose		
30	3020-383	X	1	Quick Connect		
31	1686-762	X	1	Harness, Engine		
32	0123-788		AR	Tie, Cable - 8 in.		
32	0123-903		AR	Tie, Cable - 11.5 in.		

 TIE ROD ASSEMBLY [104963]

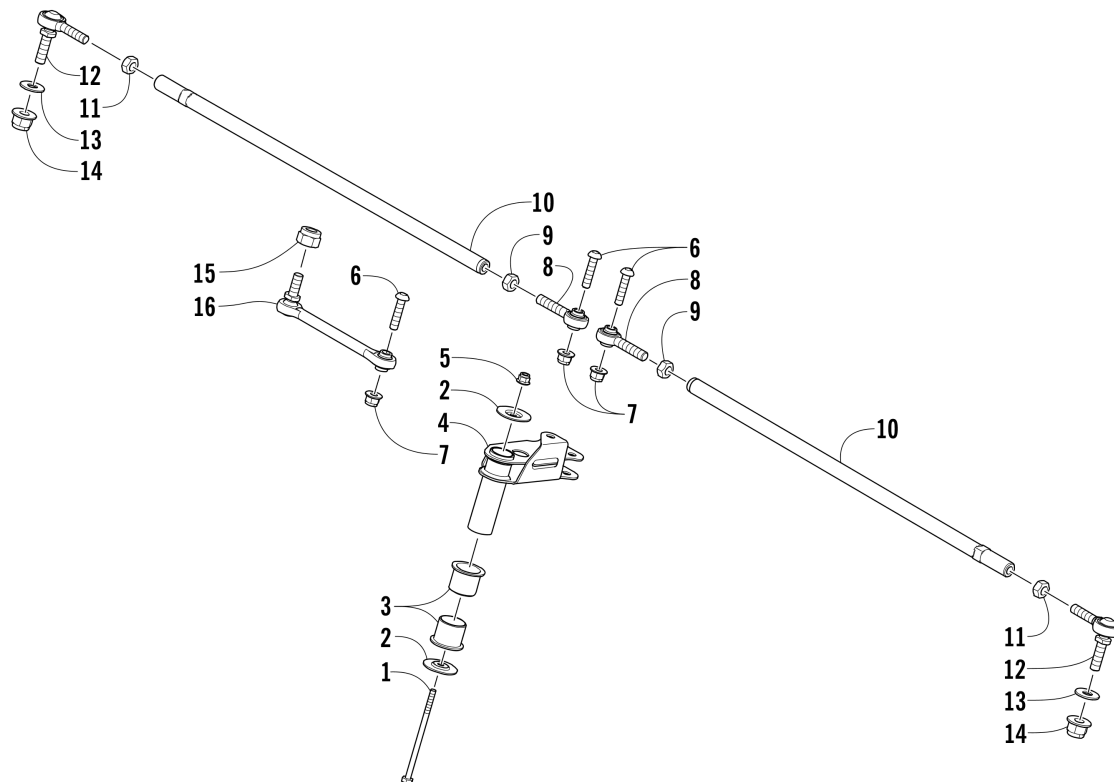

Item	Part No.	New Part	Qty	Name	Context	Footnote
1	8402-600		1	Screw, Cap		
2	1623-807		2	Washer		
3	1605-161		2	Bushing		
4	1705-488		1	Arm, Steering		
5	8427-602		1	Nut, Lock		
6	2623-026		3	Screw, Machine		
7	8427-802		3	Nut, Lock		
8	1605-032		2	Ball Joint, Tie Rod - Right-Hand Thread		
9	8420-002		2	Nut - Right-Hand Thread		
10	0605-477		2	Tube, Tie Rod - Spindle		
11	0423-013		2	Nut - Left-Hand Thread		
12	1605-019		2	Ball Joint, Steering - Left-Hand Thread		
13	1623-803		2	Washer		
14	8427-002		2	Nut, Lock		
15	2623-076		1	Nut, Lock w/Washer		
16	1605-109		1	Draglink, Steering - 106 mm		

 TUNNEL, REAR BUMPER, AND SNOWFLAP ASSEMBLY [105036]

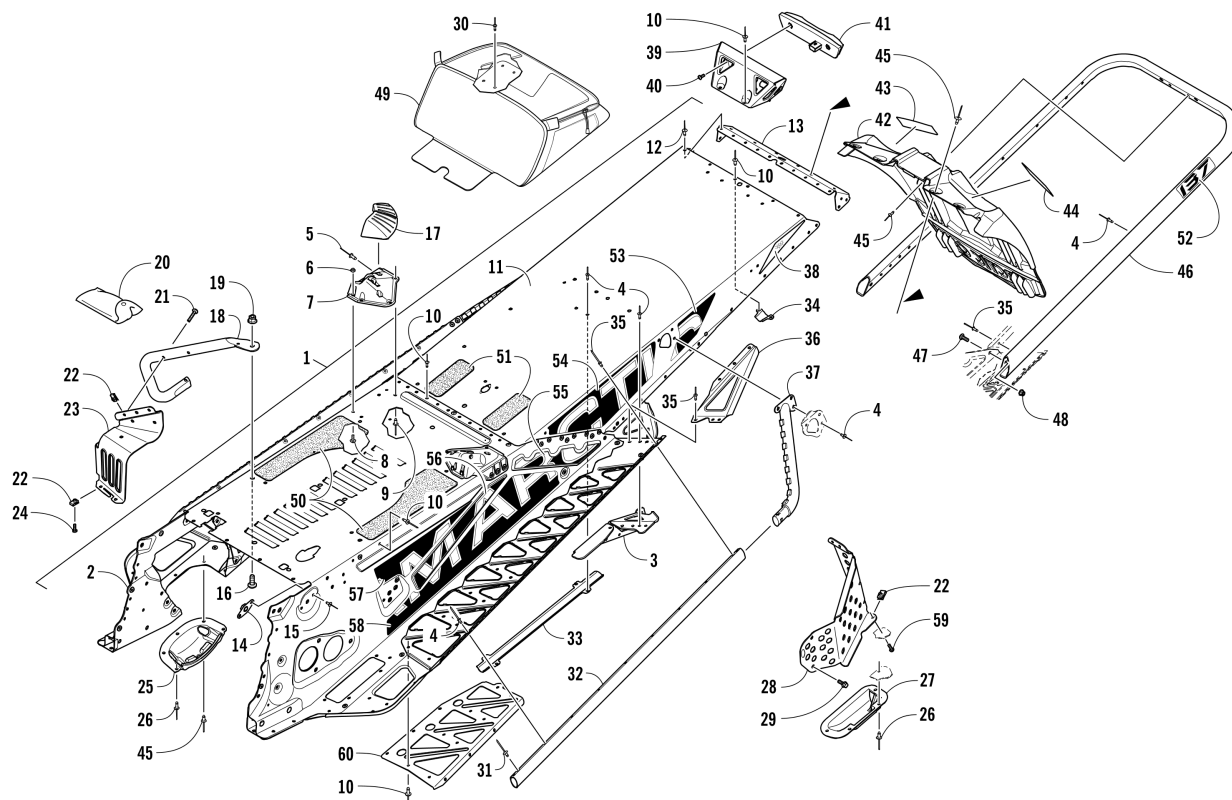


Item	Part No.	New Part	Qty	Name	Context	Footnote
-	2707-783		1	Complete Chassis Assembly - Black		
1	2707-951		1	Tunnel Assembly - Black	(inc. 2-13)	
2	2707-949		1	Tunnel, Front - Assembly - Black	(inc. 3-4)	
3	2707-244		1	Bracket, Mounting - Suspension - Right - Black		
3	2707-245		1	Bracket, Mounting - Suspension - Left - Black		
4	8060-706		AR	Rivet		
5	1623-206		14	Rivet		
6	8422-502		6	Nut, Lock		
7	1707-692		1	Bracket, Mounting - Rear Spar - Right - Black		
7	1707-693		1	Bracket, Mounting - Rear Spar - Left - Black		
8	8476-512		6	Screw, Machine		
9	1623-257		4	Rivet		
10	8060-702		AR	Rivet		
11	2707-939		1	Tunnel, Rear - Black		
12	8060-482		6	Rivet		
13	1707-725		1	End Cap, Tunnel - Black		
14	0608-631		1	Plate, Retaining		
15	8060-688		2	Rivet		
16	8476-820		2	Screw, Machine		
17	6606-664		1	Support, Gas Tank - Right		
17	6606-665		1	Support, Gas Tank - Left		
18	2707-684		1	Support, Footrest - Right - Black		
18	2707-685		1	Support, Footrest - Left - Black		

Item	Part No.	New Part	Qty	Name	Context	Footnote
19	8427-802		2	Nut, Lock		
20	0744-088		1	Kit, Tool		
21	8468-535		4	Screw, Machine		
22	1623-637		9	Clip, U-Nut		
23	1707-556		1	Footrest - Right - Black		
23	1707-557		1	Footrest - Left - Black		
24	8470-516		4	Screw, Machine		
25	1607-109		1	Protector, Chain Case		
26	8061-708		8	Rivet		
27	0607-351		1	Protector, Brake Disc		
28	2707-044		1	Shield, Brake Disc - Black		
29	8408-613		2	Screw, Cap		
30	8061-628		2	Rivet		
31	1623-130		AR	Rivet		
32	2707-170		1	Roll, Tunnel - Right - Black		
32	2707-171		1	Roll, Tunnel - Left - Black		
33	0630-339		1	Protector, Taillight Harness		
34	0630-292		1	Protector, Taillight Harness		
35	1623-241		AR	Rivet		
36	1707-698		1	Gusset, Running Board - Right - Black		
36	1707-699		1	Gusset, Running Board - Left - Black		
37	1707-700		1	Gusset, Tunnel Roll - Right - Black		
37	1707-701		1	Gusset, Tunnel Roll - Left - Black		
38	0621-990		2	Decal, Reflector - Red		
39	0730-227		1	Bracket, Mounting - Taillight - Black		
40	8470-510		2	Screw, Machine		
41	0609-898		1	Taillight, LED		
42	6606-394		1	Snowflap		
43	5611-853		1	Decal, Warning - Towing (English)		
44	5611-852		1	Decal, Warning - Towing (French)		
45	8061-706		7	Rivet		
46	2707-648	X	1	Bumper, Rear - 137" - Green		
47	8476-620		2	Screw, Machine		
48	8427-602		2	Nut, Lock		
49	7606-419		1	Saddlebag, Rear		
50	6606-814		1	Pad, Fuel Tank - Right		
50	6606-815		1	Pad, Fuel Tank - Left		
51	6606-877		2	Pad, Fuel Tank - Center		
52	2621-302		2	Decal, Rear Bumper		
53	2621-984		1	Decal, Tunnel - Right		
53	2621-985		1	Decal, Tunnel - Left		
54	2621-986		1	Decal, Tunnel - Right		


Item	Part No.	New Part	Qty	Name	Context	Footnote
54	2621-987		1	Decal, Tunnel - Left		
55	2621-988		1	Decal, Tunnel - Right		
55	2621-989		1	Decal, Tunnel - Left		
56	2621-990		1	Decal, Tunnel - Right		
56	2621-991		1	Decal, Tunnel - Left		
57	2621-992		1	Decal, Tunnel - Right		
57	2621-993		1	Decal, Tunnel - Left		
58	2621-994		1	Decal, Tunnel - Right		
58	2621-995		1	Decal, Tunnel - Left		
59	8470-520		1	Screw, Machine		
60	2707-172		1	Support, Running Board - Right - Black		
60	2707-173		1	Support, Running Board - Left - Black		

 TURBOCHARGER ASSEMBLY [104557]

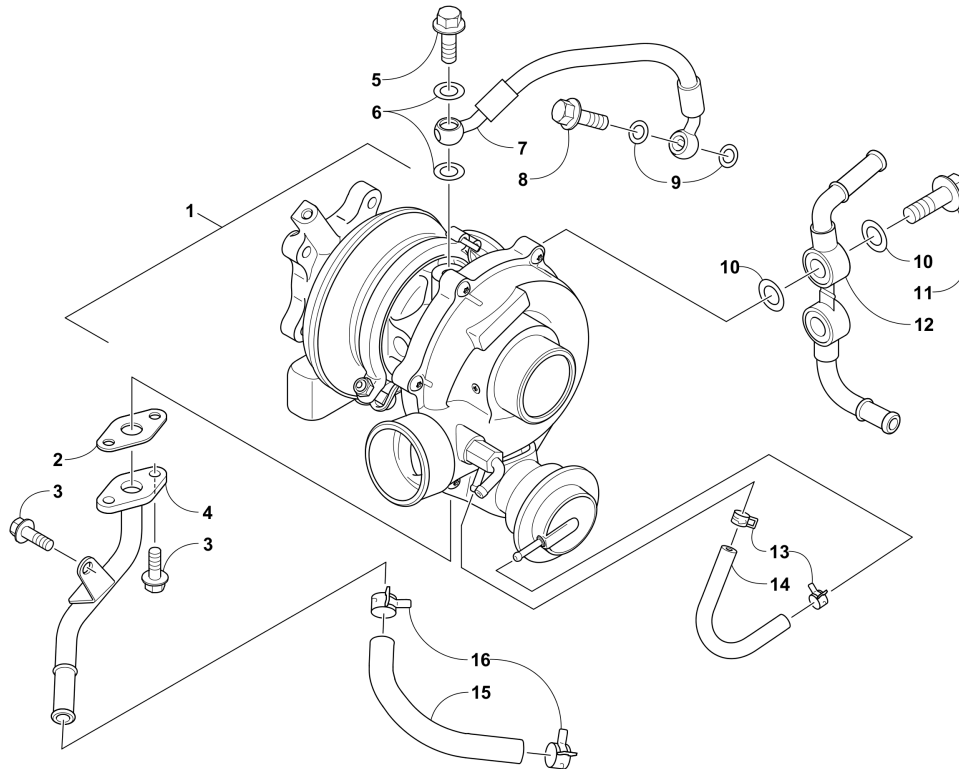

Item	Part No.	New Part	Qty	Name	Context	Footnote
1	3020-386	X	1	Turbocharger - Assembly		
2	3020-391		1	Gasket		
3	3020-392		3	Bolt, Flange		
4	3020-390		1	Connector, Oil		
5	3020-413		1	Bolt, Union		
6	3020-411		2	Gasket		
7	3020-404		1	Hose, Oil		
8	3020-606		1	Bolt, Union		
9	3020-181		2	Gasket		
10	3020-389		4	Gasket		
11	3020-388		2	Bolt, Union		
12	3020-387	X	1	Joint, Hose		
13	3020-608		2	Clip		
14	3020-607		1	Hose, Turbocharger		
15	0610-128	X	1	Hose, Turbo Oil Return		
16	1623-285		2	Clamp, Hose		

 
WATER PUMP ASSEMBLY [104553]

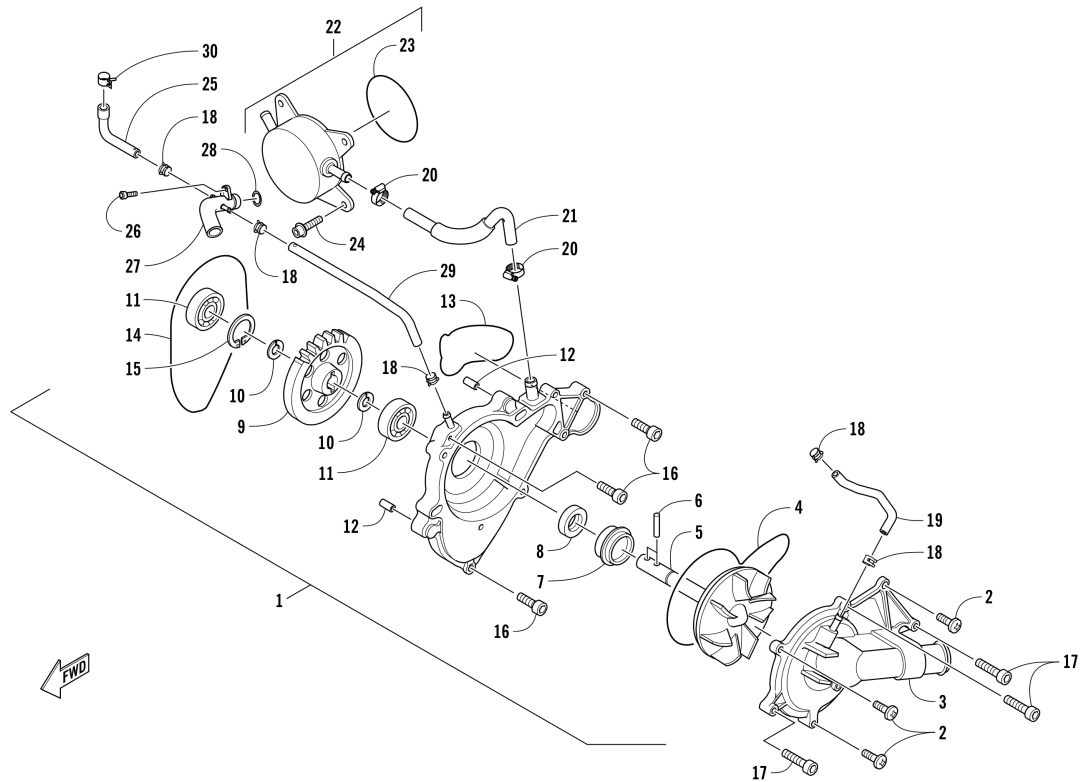

Item	Part No.	New Part	Qty	Name	Context	Footnote
1	3020-300		1	Pump, Water - Assembly	(inc. 2-10 and one No. 11)	
2	3020-301		3	Screw, Machine		
3	3020-302		1	Cover, Housing		
4	3020-303		1	Seal, Housing Cover		
5	3020-304		1	Impeller/Shaft Assembly		
6	3020-305		2	Pin, Dowel		
7	3020-306		1	Seal, Mechanical		
8	3020-307		1	Seal, Oil		
9	3020-308		1	Gear		
10	3020-309		2	Ring, Retaining		
11	3020-310		2	Bearing		
12	3020-293		2	Pin, Dowel		
13	3020-311		1	Seal		
14	3020-312		1	Seal		
15	3020-313		1	Ring, Retaining		
16	3020-314		3	Screw, Cap		
17	3020-315		4	Screw, Cap		
18	3020-316		5	Clamp, Hose		
19	3020-583		1	Hose, Coolant - Water Pump/Throttle Body		
20	3020-318		2	Clamp, Hose		
21	3020-319		1	Hose, Coolant - Water Pump/Oil Cooler		
22	3020-320		1	Cooler, Oil - Assembly	(inc. 23)	
23	3020-321		1	O-Ring		

Item	Part No.	New Part	Qty	Name	Context	Footnote
24	3020-322		4	Screw, Cap		
25	3020-581		1	Hose, Coolant - Oil Cooler/Elbow Fitting		
26	3020-167		1	Screw, Cap		
27	3020-402		1	Fitting, Elbow		
28	3020-325		1	O-Ring		
29	3020-580		1	Hose, Coolant - Elbow Fitting/Water Pump		
30	3020-582		1	Clamp, Hose		

 WINDSHIELD AND INSTRUMENTS ASSEMBLIES [105038]

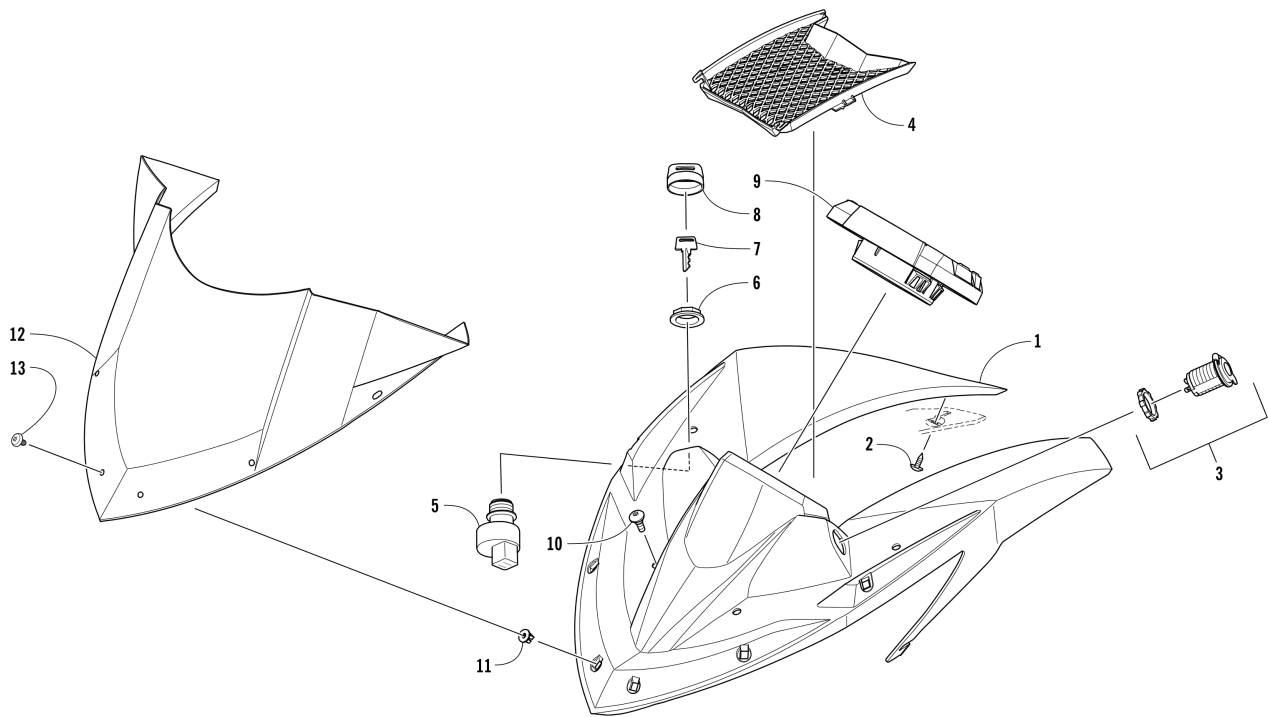

Item	Part No.	New Part	Qty	Name	Context	Footnote
1	6606-628		1	Pod, Instrument - Black		
2	2623-166		2	Screw, Self-Tapping		
3	0641-897		1	Outlet, Accessory - 12V		
4	7606-266	X	1	Vent, Pod		
5	0609-911		1	Switch, Ignition	(inc. 6-8)	
6	0430-050		1	Nut, Retaining		
7	0430-042		1	Key, Ignition - Y		
7	0430-043		1	Key, Ignition - Z		
8	0430-054		1	Cover, Key		
9	0720-041		1	Gauge, Speedometer		
10	2623-042		4	Screw, Shoulder		
11	1623-025		6	Insert		
12	6606-864		1	Windshield - Low - Team Arctic Green		
13	2623-146		6	Screw, Self-Tapping		



The illustrations used in this Parts Manual are for reference to replacement part numbers only and are not to be used for assembly. For assembly procedures, use an Arctic Cat Service Manual. For a complete list of related items, refer to the current accessory catalog. Once printed, Arctic Cat does not guarantee the accuracy of the information contained in this manual. Our parts lists and illustrations are constantly revised to reflect part number changes, discrepancies, and enhancements.

®™ Trademarks of Arctic Cat Inc., Thief River Falls, MN 56701