

2016

PARTS MANUAL




ZR[®] 120
INTERNATIONAL
S2016ZRAAAOSG



Contents


A-ARM ASSEMBLY [98663]	1
AIR CLEANER ASSEMBLY [92352]	2
BELLY PAN AND EXHAUST ASSEMBLIES [98671]	3
CAMSHAFT AND VALVE ASSEMBLY [92356]	4
CARBURETOR ASSEMBLY [92353]	5
CHASSIS, FOOTREST, AND REAR BUMPER ASSEMBLY [100546]	7
CRANKCASE/COVER ASSEMBLY [92357]	9
CYLINDER AND AIR BREATHER ASSEMBLY [92354]	10
DRIVE TRAIN SHAFT AND BRAKE ASSEMBLIES [100545]	11
ENGINE AND RELATED PARTS [98673]	13
FRONT SUSPENSION SHOCK ABSORBER [98664]	15
GAS TANK, SEAT, AND TAILLIGHT ASSEMBLY [100548]	16
GOVERNOR ASSEMBLY [92358]	18
HOOD, HEADLIGHT, AND WINDSHIELD ASSEMBLY [100547]	19
MAGNETO [92360]	21
PISTON AND CRANKSHAFT ASSEMBLY [92355]	22
REAR SUSPENSION ARM ASSEMBLY [98668]	23
RECOIL STARTER AND AIR SHROUD ASSEMBLY [92359]	25
SKI AND SPINDLE ASSEMBLY [98662]	26
SLIDE RAIL, IDLER WHEELS, AND TRACK ASSEMBLY [98667]	27
STEERING POST AND TIE ROD ASSEMBLY [98665]	29

A-ARM ASSEMBLY [98663]

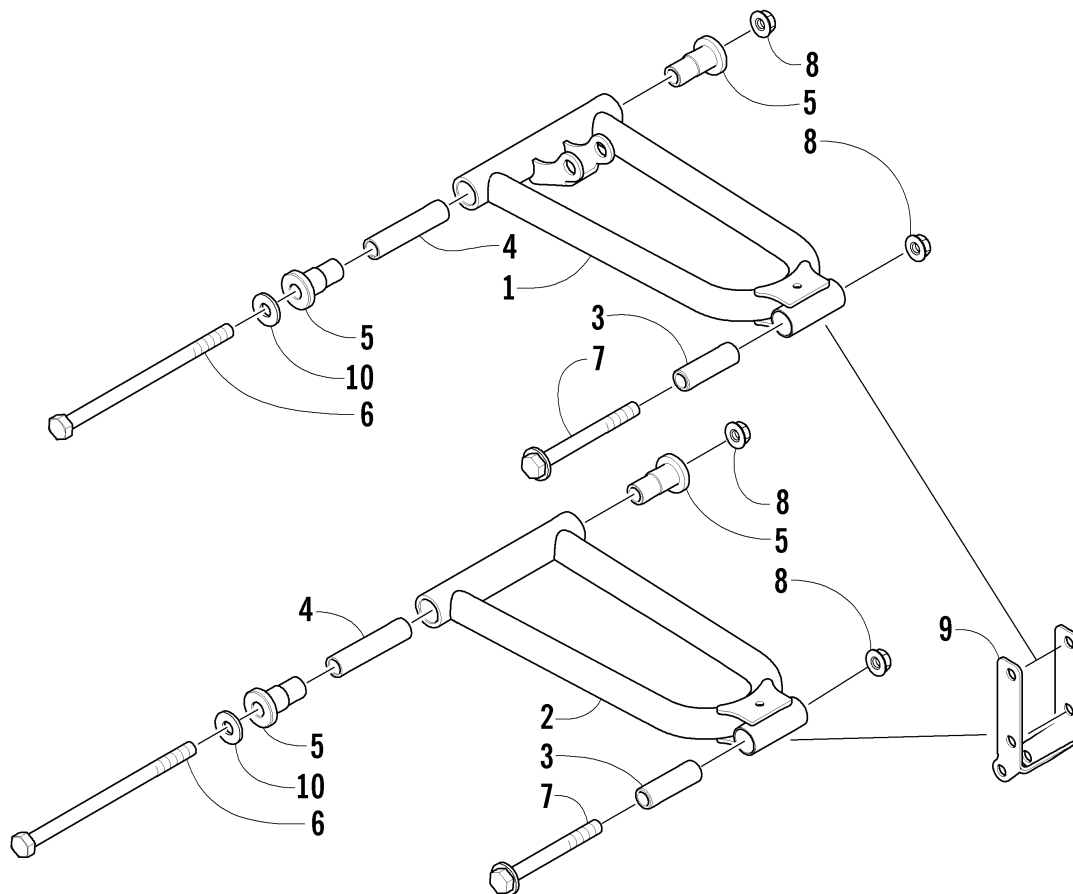


Item	Part No.	Qty	Name	Context	Footnote
1	2703-974	2	A-Arm - Upper Black		
2	2703-975	2	A-Arm - Lower Black		
3	1603-365	4	Axle		
4	1603-394	4	Axle, Inner		
5	0605-451	8	Axle, Powder Metal		
6	1623-983	4	Screw, Cap		
7	8020-232	4	Screw, Cap		
8	8047-486	8	Nut, Lock		
9	1703-179	2	Bracket, Mounting - Shock Black		
10	8050-277	4	Washer, Flat		

AIR CLEANER ASSEMBLY [92352]

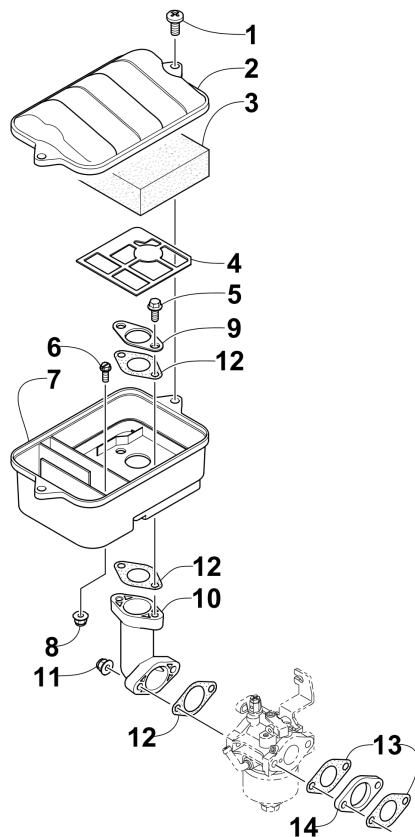


Item	Part No.	Qty	Name	Context	Footnote
1	3020-094	2	Screw, Self-Tapping		
2	3020-055	1	Cover, Air Cleaner		
3	3020-056	1	Filter, Air Cleaner		
4	3020-057	1	Plate, Retaining		
5	1623-661	2	Screw, Self-Tapping		
6	8408-825	1	Screw, Cap		
7	3020-054	1	Case, Air Cleaner		
8	8427-802	1	Nut, Lock		
9	3020-058	1	Insulator, Intake		
10	2670-110	1	Tube, Intake		
11	8427-602	2	Nut, Lock		
12	3020-053	3	Gasket, Carburetor/Intake Tube		
13	3020-021	2	Gasket, Intake		
14	3020-022	1	Insulator, Carburetor		

BELLY PAN AND EXHAUST ASSEMBLIES [98671]

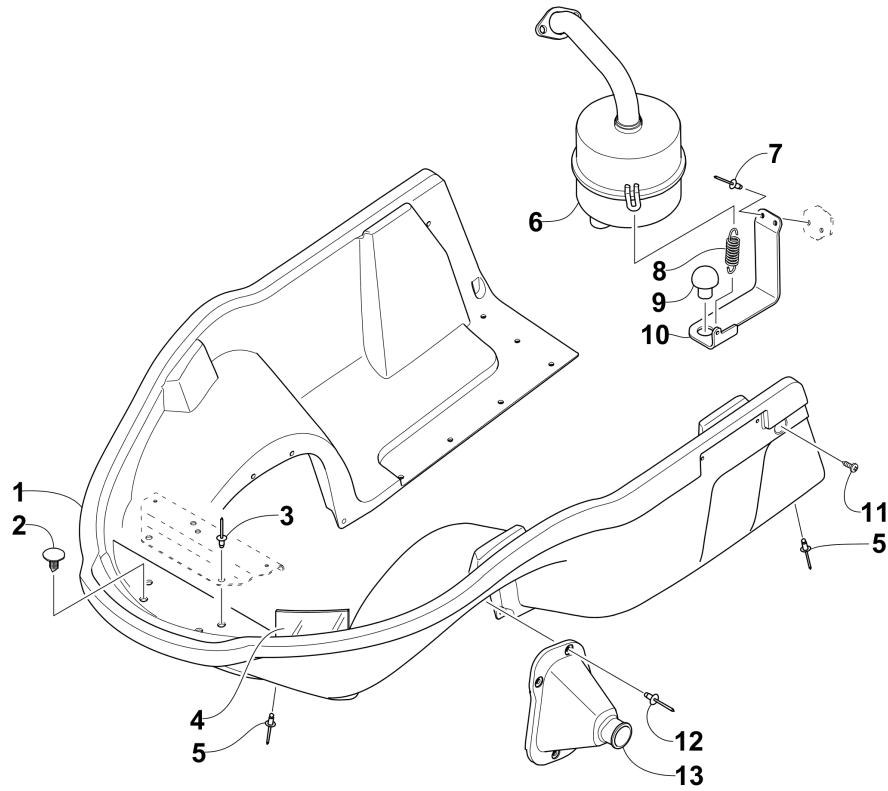


Item	Part No.	Qty	Name	Context	Footnote
1	6606-006	1	Belly Pan Black	(inc. 2)	
2	0623-544	2	Clip, Retaining		
3	0623-778	2	Rivet		
4	0619-206	AR	Foil, Protective		
5	8061-508	22	Rivet		
6	1712-779	1	Muffler		
7	8060-484	2	Rivet		
8	0123-321	1	Spring, Extension		
9	0612-111	1	Bumper, Molded - Rubber		
10	0712-914	1	Bracket, Muffler Support		
11	1623-129	2	Screw, Self-Tapping		
12	8060-508	7	Rivet		
13	0605-464	1	Boot, Tie Rod - Right		
13	0605-465	1	Boot, Tie Rod - Left		

CAMSHAFT AND VALVE ASSEMBLY [92356]

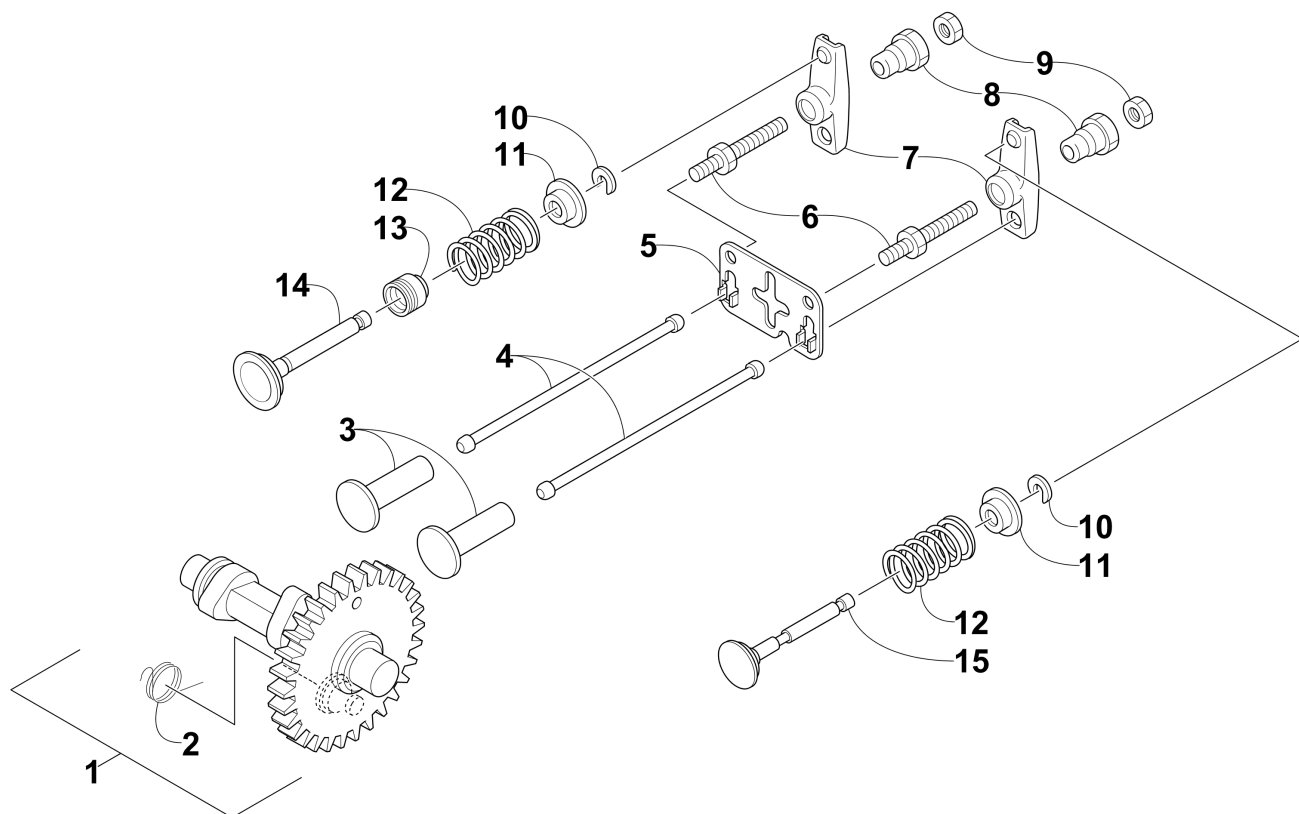

Item	Part No.	Qty	Name	Context	Footnote
1	3020-049	1	Camshaft Assembly	(inc. 2)	
2	3020-050	1	Spring		
3	3020-044	2	Tappet, Valve		
4	3020-045	2	Rod, Push		
5	3020-019	1	Guide, Push Rod		
6	3020-046	2	Bolt, Stud w/Nut		
7	3020-043	2	Arm, Rocker		
8	3020-048	2	Pivot, Rocker Arm		
9	3020-047	2	Nut, Lock		
10	3020-042	2	Cotter, Valve		
11	3020-041	2	Retainer, Valve Spring		
12	3020-104	2	Spring, Valve		
13	3020-078	1	Seal, Valve		
14	3020-017	1	Valve, Intake		
15	3020-018	1	Valve, Exhaust		


CARBURETOR ASSEMBLY [92353]

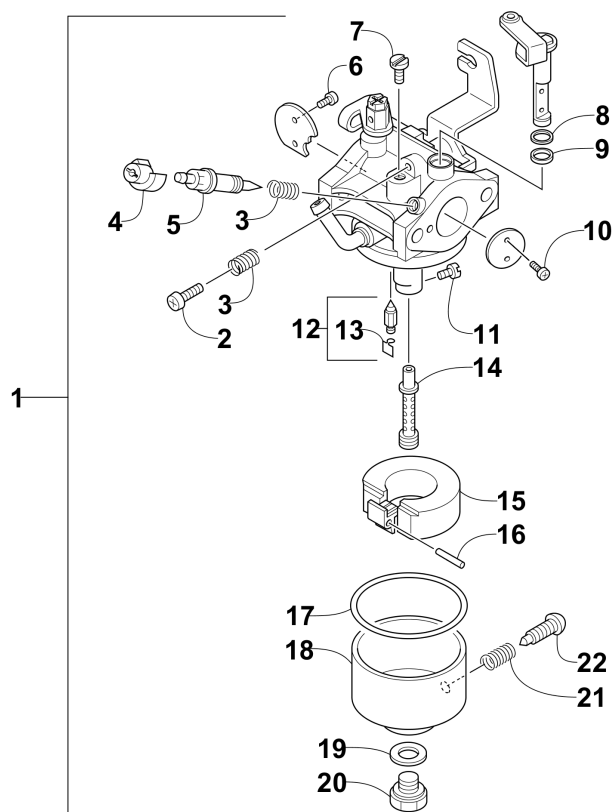

Item	Part No.	Qty	Name	Context	Footnote
1	3020-023	1	Carburetor Assembly	(inc. 2-22)	
2	3020-001	1	Screw, Throttle Stop		
3	3020-005	2	Spring		
4	3020-086	1	Cap, Adjuster Screw		
5	3020-088	1	Adjuster Screw, Fuel Idle		
6	3020-091	2	Screw, Machine		
7	3020-131	1	Pilot Jet	(37.5)	
8	3020-003	1	Washer		
9	3020-004	1	Washer		
10	3020-090	2	Screw, Machine		
11	3020-130	1	Main Jet	(77.5)	
12	3020-084	1	Needle Jet - Assembly	(inc. 13)	
13	3020-080	1	Clip, Retaining		
14	3020-089	1	Nozzle		
15	3020-085	1	Float		
16	3020-002	1	Pin, Float		
17	3020-082	1	Gasket, Float Chamber		
18	3020-081	1	Chamber, Float		
19	3020-083	1	Washer		
20	3020-087	1	Plug, Drain		

Item	Part No.	Qty	Name	Context	Footnote
21	3020-005	1	Spring		
22	3020-079	1	Screw, Machine		


CHASSIS, FOOTREST, AND REAR BUMPER ASSEMBLY [100546]

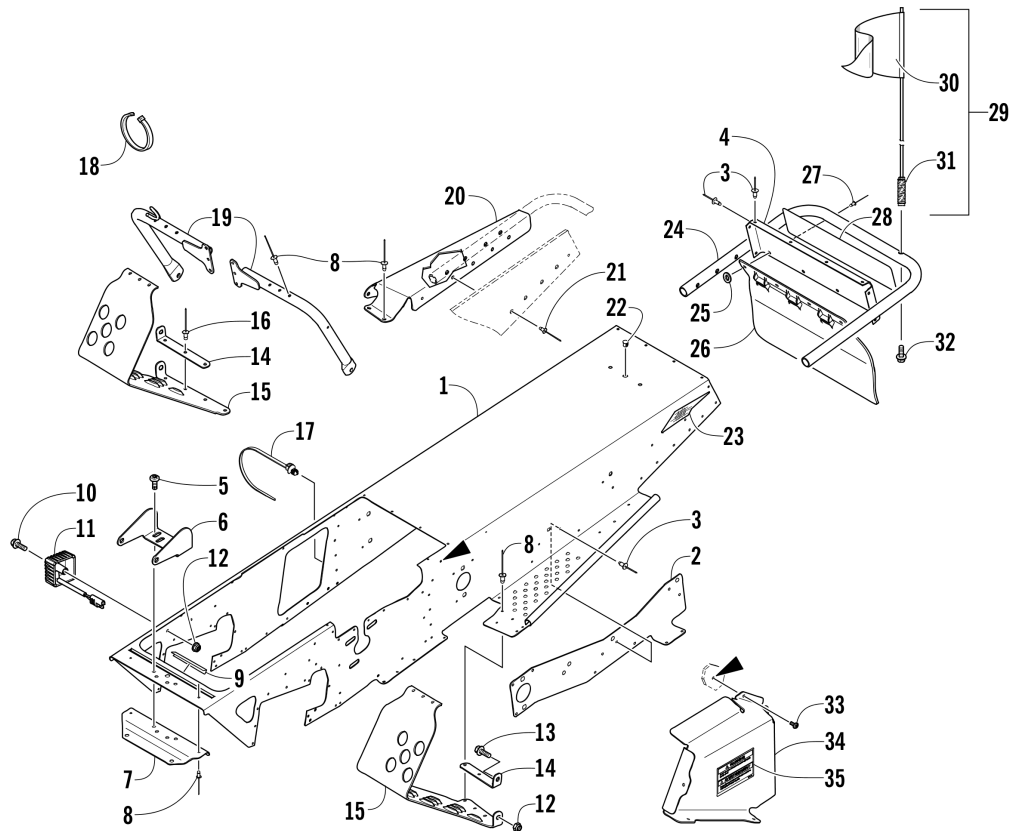

Item	Part No.	Qty	Name	Context	Footnote
1	3718-073	1	Tunnel Assembly	(inc. 2-4)	
2	2706-156	1	Plate, Tunnel - Reinforced - Right		
2	2706-157	1	Plate, Tunnel - Reinforced - Left		
3	0123-418	26	Rivet, Solid		
4	2706-158	1	Plate, Cover-Tunnel		
5	0623-892	4	Screw, Self-Tapping		
6	2706-141	1	Bracket, Mounting - Hood		
7	3706-774	1	Plate, Reinforcement		
8	8060-484	AR	Rivet		
9	0706-371	AR	Trim - 3 ft		
10	8020-045	1	Screw, Cap		
11	0630-181	1	Regulator, Voltage		
12	8047-366	3	Nut, Lock		
13	8020-040	2	Screw, Cap		
14	2706-180	1	Bracket, Support - Footrest - Right		
14	2706-181	1	Bracket, Support - Footrest - Left		
15	1606-784	1	Footrest - Right		
15	1606-785	1	Footrest - Left		
16	8060-486	6	Rivet		
17	0623-677	AR	Tie, Cable - Push-Mount		


Item	Part No.	Qty	Name	Context	Footnote
18	0123-788	AR	Tie, Cable - 8 in.		
19	4706-824	1	Support, Footrest - Right		
19	3706-773	1	Support, Footrest - Left		
20	3606-994	1	End Cap, Rear Bumper - Right		
20	3606-995	1	End Cap, Rear Bumper - Left		
21	8060-706	8	Rivet		
22	0623-562	1	Plug		
23	6611-688	1	Decal, Reflector - Right - Red		
23	6611-689	1	Decal, Reflector - Left - Red		
24	3706-006	1	Bumper, Rear - Black		
25	0123-802	4	Washer		
26	6606-449	1	Snowflap		
27	8060-628	4	Rivet		
28	0621-615	1	Decal, Rear Tunnel		
29	5706-621	1	Flag, Safety - Assembly	(inc. 30-32)	
30	1706-104	1	Flag, Safety		
31	4706-643	1	Mounting, Safety Flag - Assembly		
32	8020-134	1	Screw, Cap		
33	0623-301	4	Screw, Self-Tapping		
34	1606-786	1	Cover, Driven Sprocket		
35	3611-754	1	Decal, Warning - Cover		

CRANKCASE/COVER ASSEMBLY [92357]

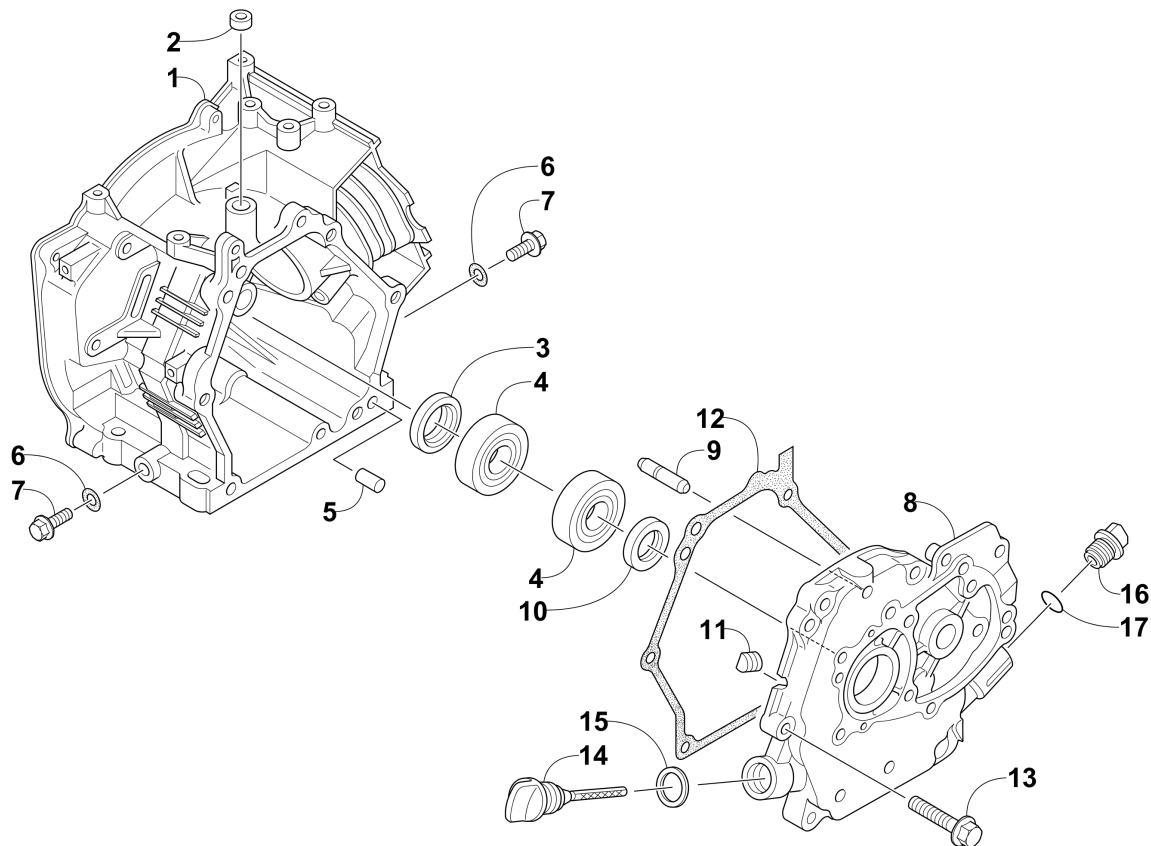


Item	Part No.	Qty	Name	Context	Footnote
1	3020-024	1	Crankcase		
2	3020-111	1	Seal, Oil		
3	3020-110	1	Seal, Oil		
4	3020-113	2	Bearing		
5	3020-127	2	Pin, Dowel		
6	3020-101	2	Gasket		
7	3020-116	2	Screw, Cap		
8	3020-062	1	Cover, Crankcase		
9	3020-040	1	Shaft, Governor Gear		
10	3020-109	1	Seal, Oil		
11	3020-100	1	Plug		
12	3020-063	1	Gasket, Crankcase Cover		
13	3020-123	6	Screw, Cap		
14	3020-061	1	Stick, Oil Level		
15	3020-102	1	Gasket		
16	3020-060	1	Plug, Oil Level		
17	3020-112	1	O-Ring		

CYLINDER AND AIR BREATHER ASSEMBLY [92354]

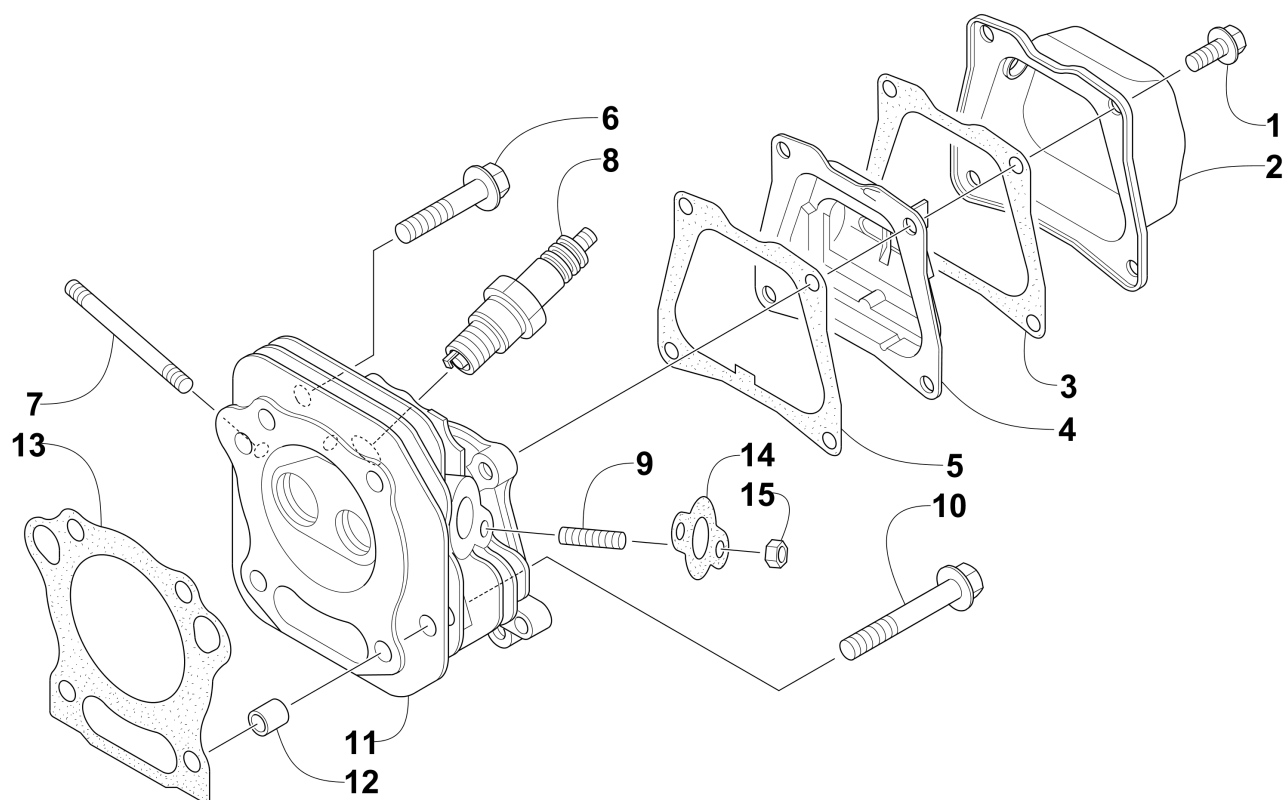

Item	Part No.	Qty	Name	Context	Footnote
1	3020-121	4	Screw, Cap		
2	3020-027	1	Cover, Cylinder Head		
3	3020-026	1	Gasket, Head		
4	3020-025	1	Breather, Air		
5	3020-028	1	Gasket, Breather		
6	3020-124	2	Screw, Cap		
7	3020-093	2	Bolt, Stud		
8	0217-809	1	Plug, Spark	(BPR4ES)	
9	3020-118	2	Bolt, Stud		
10	3020-125	2	Screw, Cap		
11	3020-008	1	Head, Cylinder		
12	3020-151	2	Pin, Dowel		
13	3020-009	1	Gasket, Cylinder Head		
14	3020-059	1	Gasket, Exhaust		
15	3020-117	2	Nut		


DRIVE TRAIN SHAFT AND BRAKE ASSEMBLIES [100545]

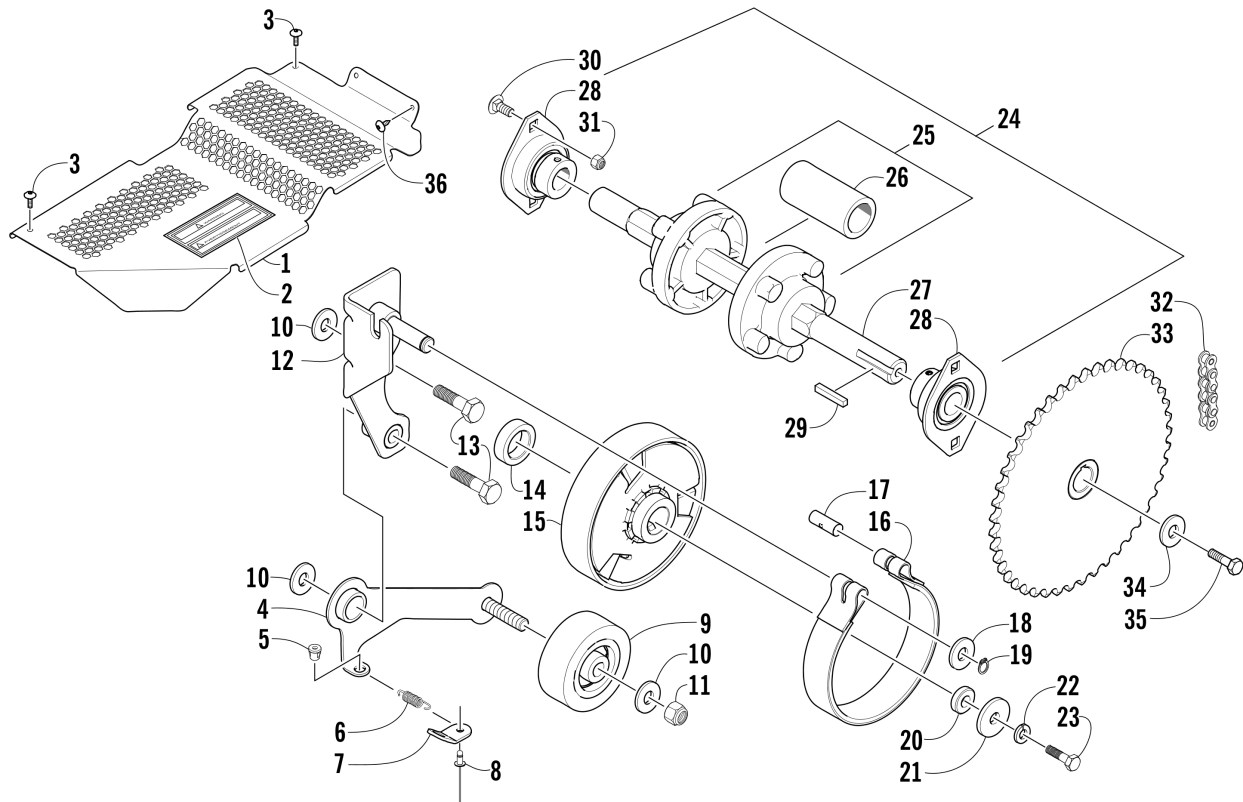

Item	Part No.	Qty	Name	Context	Footnote
1	1712-778	1	Shield, Clutch/Brake/Muffler		
2	3611-754	1	Decal, Warning - Cover		
3	0623-797	2	Screw, Self-Tapping		
4	1702-237	1	Tensioner, Chain		
5	0623-868	1	Bushing, Snap		
6	1612-178	1	Spring, Exhaust		
7	2606-021	1	Tab, Spring Retainer		
8	8060-484	1	Rivet		
9	1602-065	1	Roller, Chain Tensioner		
10	8050-247	3	Washer		
11	8041-426	1	Nut, Hex - Thin Lock		
12	0702-360	1	Bracket, Brake		
13	1623-548	2	Screw, Cap		
14	1602-026	1	Spacer		
15	3602-002	1	Clutch, Centrifugal		
16	1602-021	1	Band, Brake	(inc. 17)	
17	1602-049	1	Pin, Retainer - Brake Cable		
18	8050-277	1	Washer, Flat		
19	0623-821	1	Ring, Retaining		
20	1602-027	1	Spacer		

Item	Part No.	Qty	Name	Context	Footnote
21	0123-260	1	Washer		
22	8051-242	1	Washer, Lock		
23	8004-132	1	Screw, Cap		
24	0728-167	1	Track, Drive - Assembly	(inc. 25-28)	
25	1602-117	2	Sprocket, Drive		
26	1602-148	1	Spacer		
27	1602-850	1	Driveshaft		
28	1602-992	2	Bearing		
29	0623-823	1	Key		
30	8011-130	4	Bolt, Carriage		
31	8047-426	4	Nut, Hex - Flange - NY Lock		
32	2602-333	1	Chain, Roller- Drive		
33	2602-546	1	Sprocket, Chain-Track Drive - 45T		
34	0123-019	1	Washer, Flat		
35	8002-131	1	Screw, Cap		
36	1623-129	1	Screw, Self-Tapping		


ENGINE AND RELATED PARTS [98673]

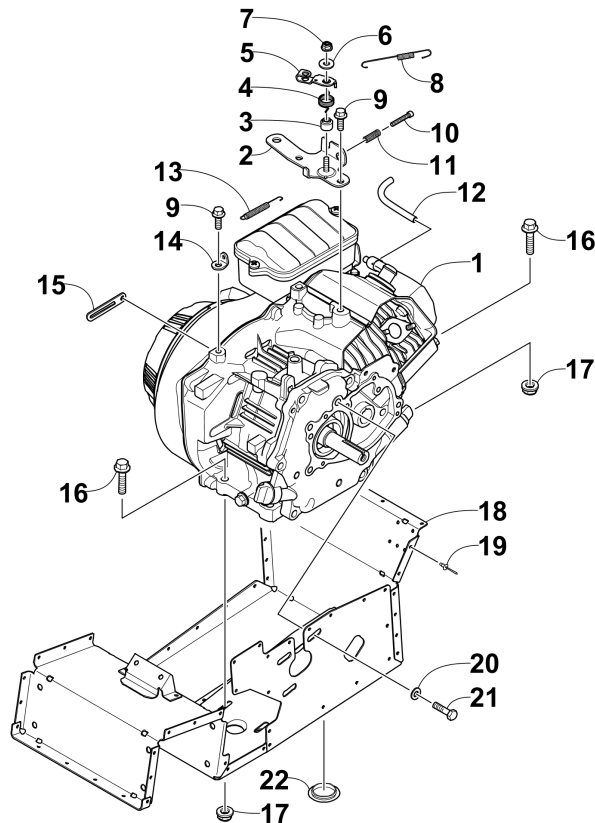

Item	Part No.	Qty	Name	Context	Footnote
1	0662-560	1	Engine, 70CL1-030		
2	2670-195	1	Bracket, Mounting - Throttle Cable		
3	2670-119	1	Spacer		
4	2670-134	1	Spring		
5	2670-194	1	Lever, Throttle Cable		
6	8050-222	1	Washer		
7	8047-366	1	Nut, Lock		
8	2670-193	1	Spring, Governor Arm		
9	8408-816	3	Screw, Cap		
10	1623-901	1	Screw, Cap		
11	2670-133	1	Spring		
12	0610-821	AR	Hose, Breather - 7.5 in		
13	2670-127	1	Spring		
14	4606-770	1	Bracket, Retaining		
15	1623-984	1	Clamp, Routing		
16	8020-134	4	Screw, Cap		
17	8047-426	4	Nut, Hex - Flange - NY Lock		
18	3706-775	1	Front End - Painted Black		
19	8060-484	AR	Rivet		
20	8050-247	1	Washer		


Item	Part No.	Qty	Name	Context	Footnote
21	1623-550	1	Screw, Cap		
22	0623-822	5	Plug		

FRONT SUSPENSION SHOCK ABSORBER [98664]

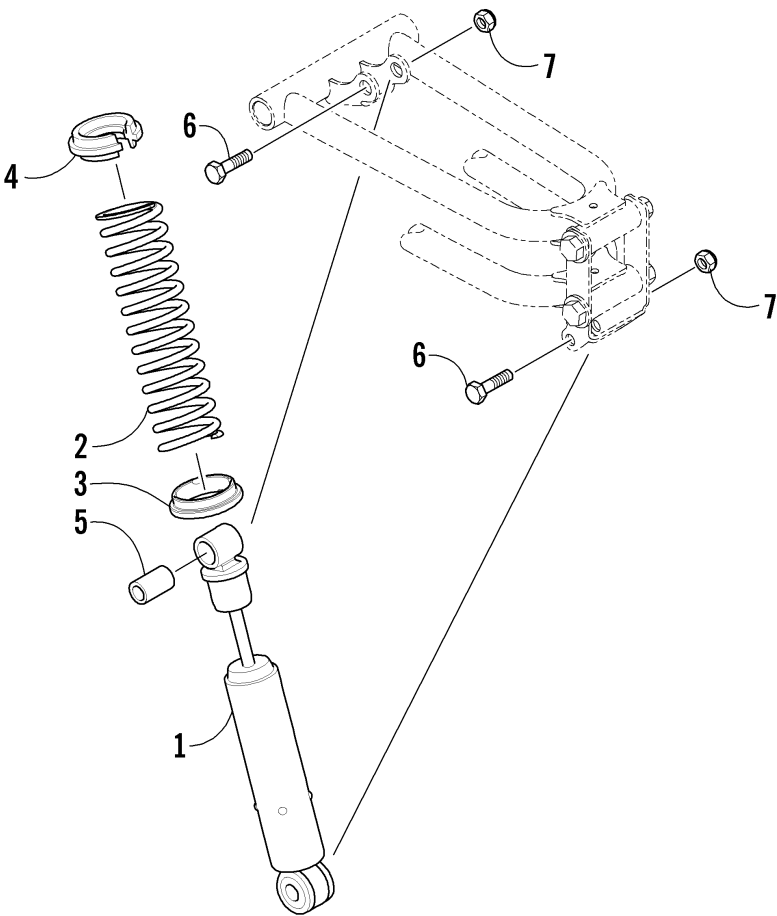

Item	Part No.	Qty	Name	Context	Footnote
1	2603-517	2	Shock, Ski		
2	2703-397	2	Spring, Shock White		
3	0403-027	2	Retainer, Spring - Lower		
4	2603-520	2	Retainer, Spring - Upper		
5	1603-531	2	Axle		
6	8002-225	4	Screw, Cap		
7	8041-486	4	Nut, Hex - Thin Lock		


GAS TANK, SEAT, AND TAILLIGHT ASSEMBLY [100548]

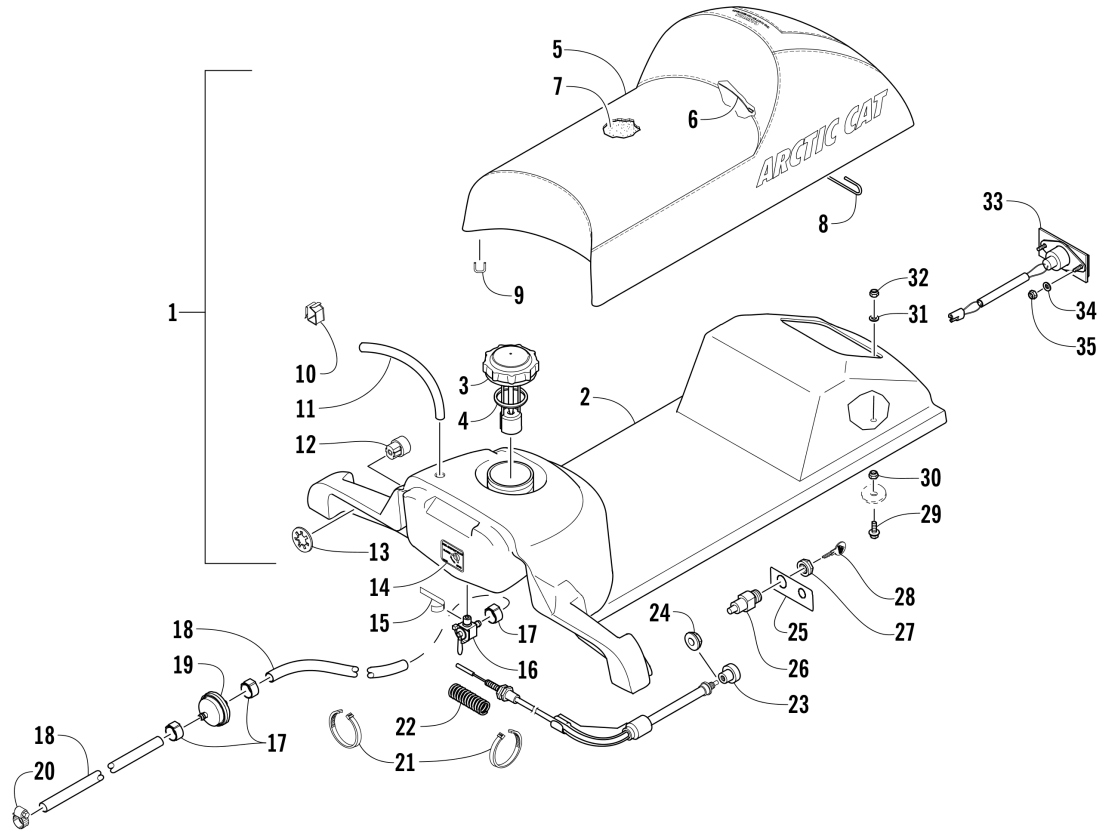

Item	Part No.	Qty	Name	Context	Footnote
1	7903-170	1	Complete Seat - Assembly	(inc. 2-9)	
2	1670-969	1	Tank, Gas/Seat-Base		
3	2670-271	1	Cap, Gas Tank w/Gauge	(inc. 4)	
4	0109-733	1	Gasket, Gas Tank Cap		
5	5706-343	1	Cover, Seat	(inc. 6)	
6	5606-156	1	Wire, Seat		
7	1706-017	1	Foam, Seat		
8	2606-942	1	Wire, Seat		
9	0624-528	AR	Staple		
10	0123-394	1	Clip, Cable		
11	0610-960	AR	Hose, Vent - 0.188 x 0.290 x 43		
12	0116-469	1	Bushing, Recoil Starter		
13	1623-841	1	Nut, Push - .850 x 1.20"		
14	3611-856	1	Decal, Shut-Off Valve		
15	0670-289	AR	Tape, Teflon		
16	2670-064	1	Valve, Shut-Off - Gas Tank		
17	0610-415	3	Clamp, Hose		
18	0410-143	AR	Hose, Gasline - 25 ft		
19	2670-543	1	Filter, Fuel		
20	0623-373	1	Clamp, Hose		


Item	Part No.	Qty	Name	Context	Footnote
21	0123-788	AR	Tie, Cable - 8 in.		
22	2670-144	1	Spring		
23	0687-230	1	Cable, Choke	(inc. 24)	
24	0687-181	1	Nut		
25	4611-767	1	Decal, Switch/Choke		
26	0109-822	1	Switch, Ignition	(inc. 27-28)	
27	0609-111	1	Nut, Retaining		
28	0116-065	2	Key		
29	8020-040	2	Screw, Cap		
30	8041-366	2	Nut, Lock		
31	0623-184	2	Washer		
32	0123-108	2	Nut, Cap		
33	0609-934	1	Taillight Assembly		
34	8450-079	2	Washer		
35	8427-502	2	Nut, Lock		

GOVERNOR ASSEMBLY [92358]

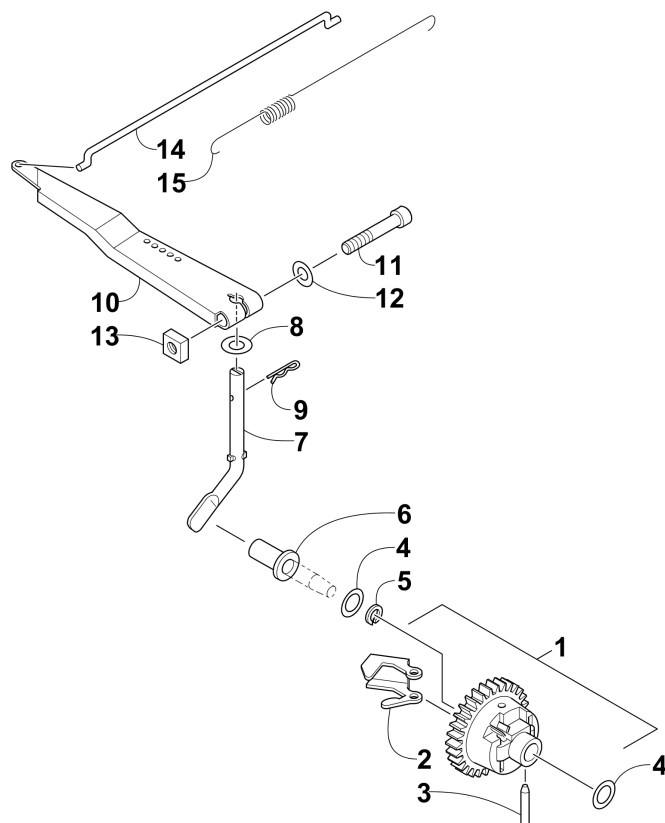

Item	Part No.	Qty	Name	Context	Footnote
1	3020-039	1	Gear, Governor - Assembly	(inc. 2-3)	
2	3020-033	2	Slider, Governor		
3	3020-034	2	Pin, Alignment		
4	3020-097	2	Washer		
5	3020-114	1	Circlip		
6	3020-035	1	Sleeve		
7	3020-036	1	Shaft, Governor Control		
8	3020-106	1	Washer		
9	3020-103	1	Clip, Hairpin		
10	3020-037	1	Arm, Governor		
11	3020-126	1	Screw, Cap		
12	3020-107	1	Washer		
13	3020-096	1	Nut		
14	3020-038	1	Rod, Carburetor		
15	3020-105	1	Spring		


HOOD, HEADLIGHT, AND WINDSHIELD ASSEMBLY [100547]

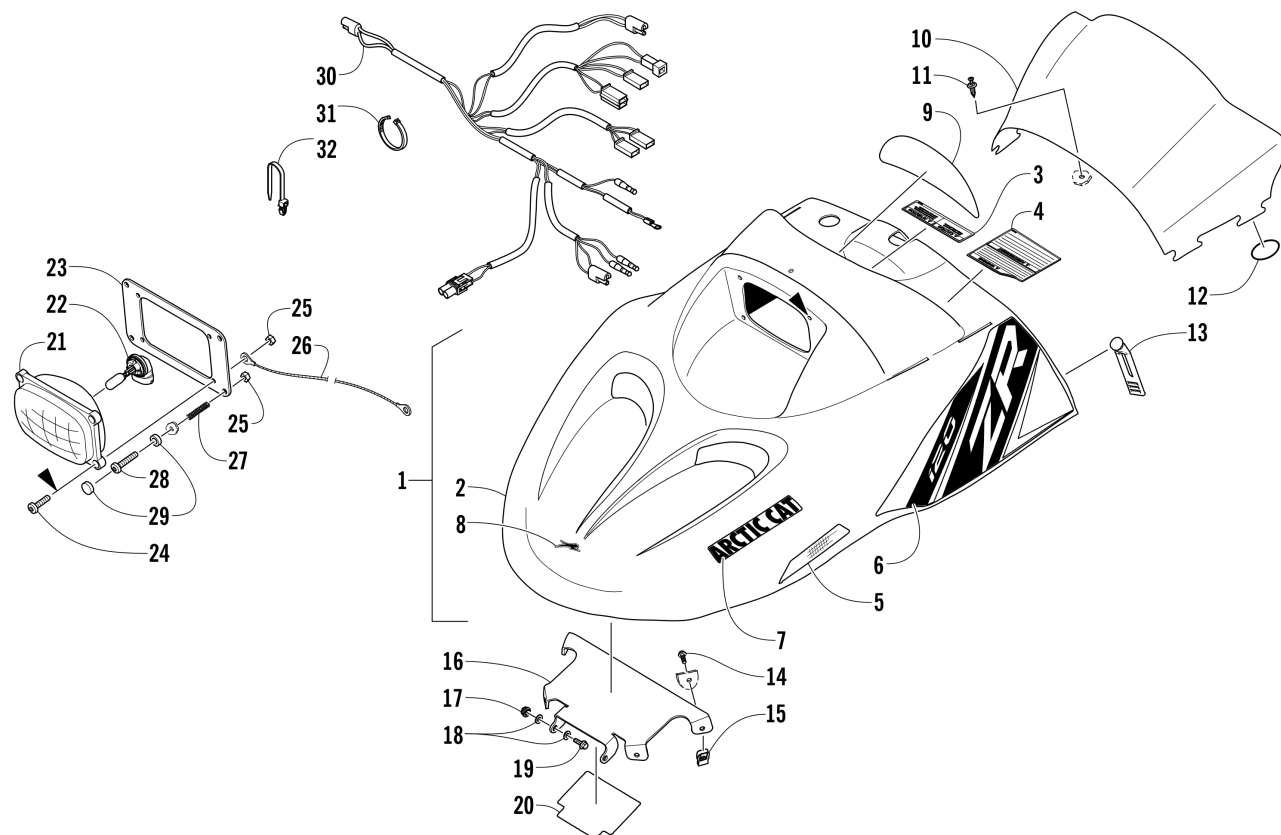

Item	Part No.	Qty	Name	Context	Footnote
1	4718-834	1	Hood w/Decals - Green	(inc. 2-9)	
2	4718-833	1	Hood w/o Decals - Green	(inc. 3-5)	
3	3611-755	1	Decal, Caution - Throttle		
4	3611-678	1	Decal, Caution - Hood		
5	9611-382	1	Decal, Reflector - Right - Amber		
5	9611-383	1	Decal, Reflector - Left - Amber		
6	1621-760	1	Decal, Hood - Right		
6	1621-761	1	Decal, Hood - Left		
7	2621-759	2	Decal, Hood - "Arctic Cat"		
8	4411-479	1	Decal, AirCat		
9	2621-762	1	Decal, Hood/Console		
10	4606-411	1	Windshield		
11	0623-243	1	Clip, Retaining		
12	0616-032	4	O-Ring		
13	1606-930	2	Strap, Hold-Down		
14	0623-902	4	Screw, Machine		
15	1623-023	4	Clip, U-Nut		
16	2706-140	1	Bracket, Mounting - Hood - Upper		
17	8047-366	2	Nut, Lock		
18	1623-011	4	Washer		


Item	Part No.	Qty	Name	Context	Footnote
19	8020-039	2	Screw, Cap		
20	9611-961	1	Decal, Jet Chart		
21	0609-817	1	Headlight Assembly	(inc. 22)	
22	0609-251	1	Bulb, Headlight		
23	3706-719	1	Plate, Adapter - Headlight		
24	8019-397	4	Screw, Machine		
25	8041-246	8	Nut, Lock		
26	1606-158	1	Cable, Hood		
27	0123-614	4	Spring, Adjustment		
28	8019-407	4	Screw, Machine		
29	0124-065	4	Washer, Snap Cap		
30	1686-578	1	Harness, Wiring - Main		
31	0123-788	AR	Tie, Cable - 8 in.		
32	0623-677	AR	Tie, Cable - Push-Mount		

MAGNETO [92360]

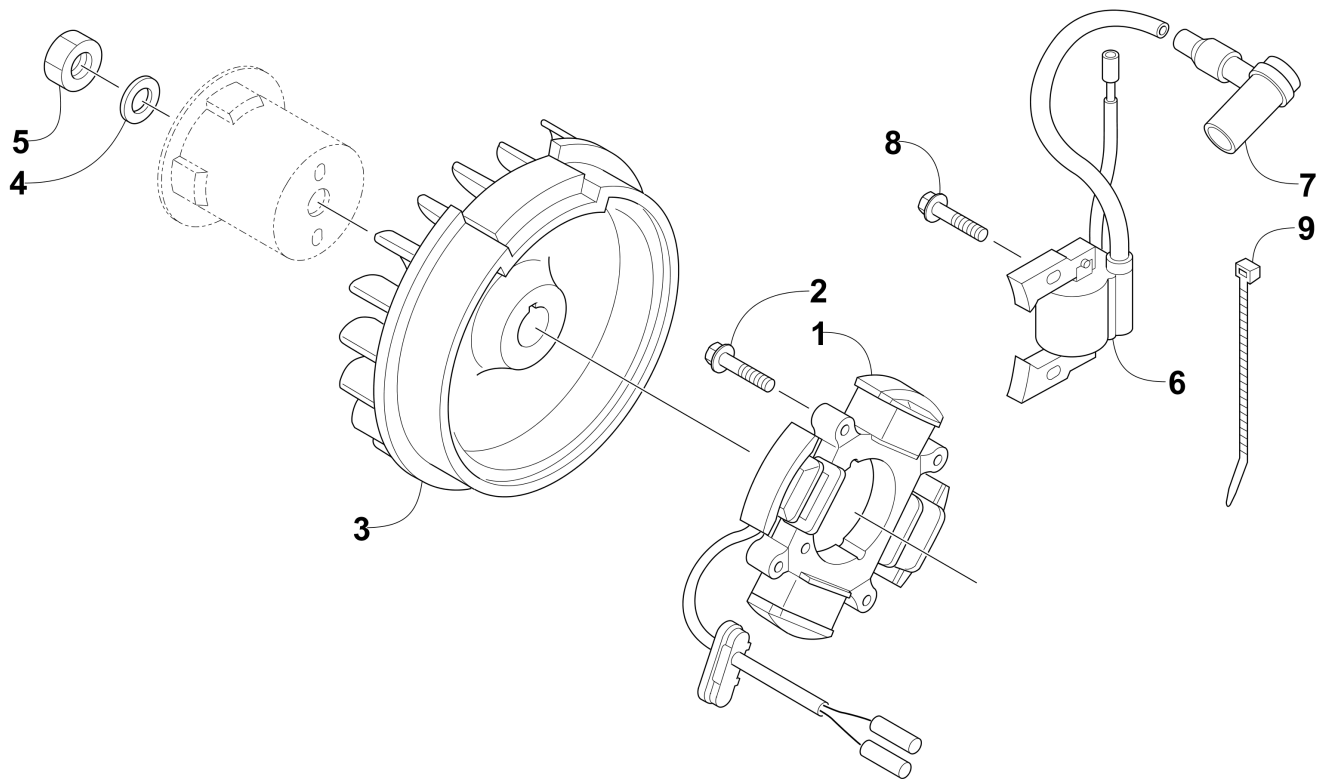


Item	Part No.	Qty	Name	Context	Footnote
1	3020-006	1	Stator		
2	3020-092	4	Screw, Cap		
3	3020-007	1	Rotor/Flywheel		
4	3020-108	1	Washer		
5	3020-095	1	Nut		
6	3020-076	1	Coil, Ignition - Assembly		
7	3020-075	1	Cap, Spark Plug		
8	3020-122	2	Screw, Cap		
9	3020-077	AR	Tie, Cable		

PISTON AND CRANKSHAFT ASSEMBLY [92355]

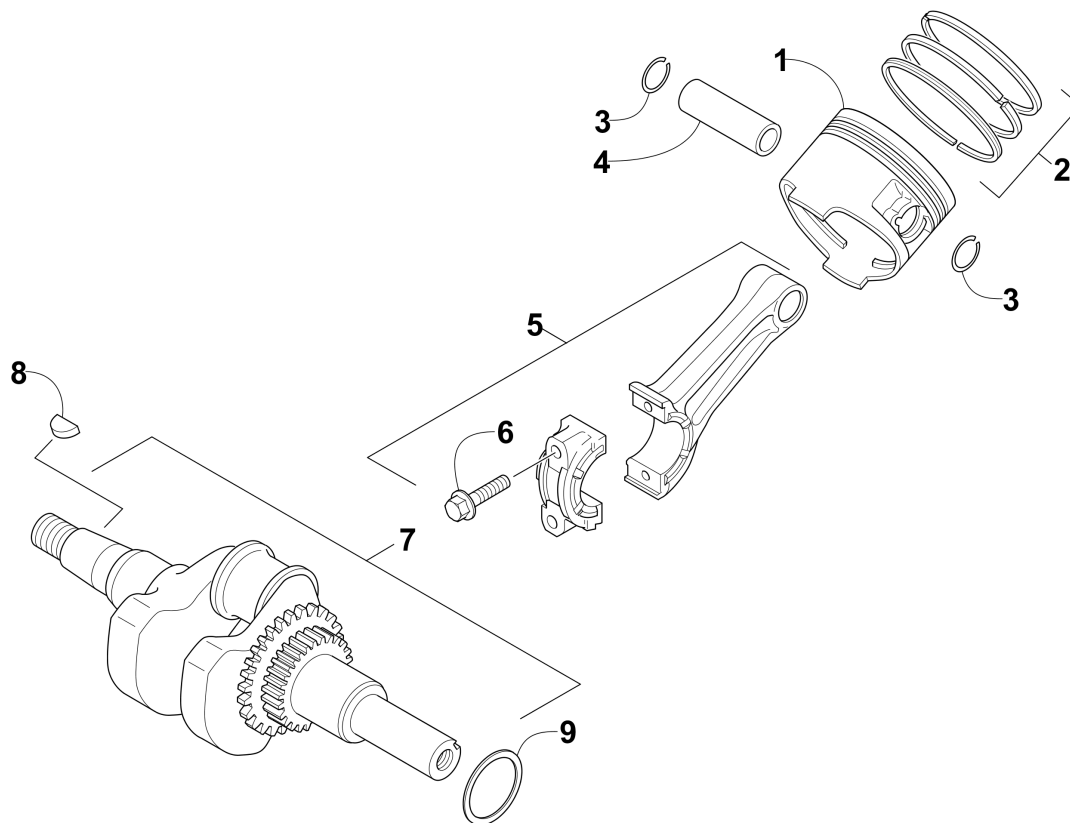

Item	Part No.	Qty	Name	Context	Footnote
1	3020-013	1	Piston		
1	3020-015	1	Piston, Oversized	(0.25 mm)	Optional
1	3020-016	1	Piston, Oversized	(0.50 mm)	Optional
2	3020-010	1	Ring, Piston - Set		
2	3020-011	1	Ring, Piston - Set - Oversized	(0.25 mm)	Optional
2	3020-012	1	Ring, Piston - Set - Oversized	(0.50 mm)	Optional
3	3020-115	2	Circlip		
4	3020-014	1	Pin, Piston		
5	3020-031	1	Rod, Connecting - Assembly	(inc. 6)	
6	3020-032	2	Screw, Cap		
7	3020-029	1	Crankshaft Assembly		
8	3020-098	1	Key		
9	3020-030	AR	Shim, Crankshaft		


REAR SUSPENSION ARM ASSEMBLY [98668]

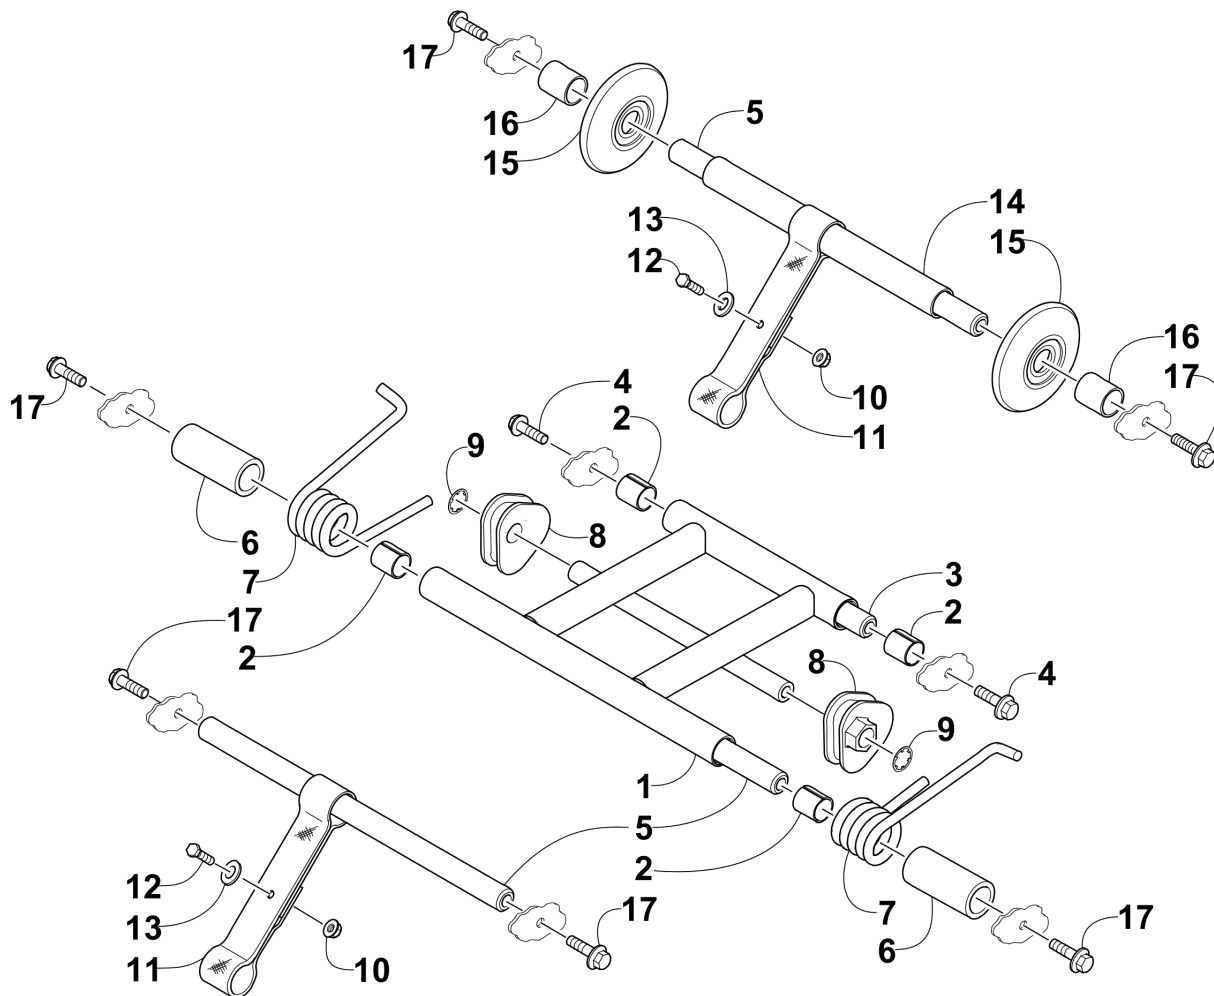

Item	Part No.	Qty	Name	Context	Footnote
1	2704-016	1	Arm, Rear Suspension	(inc. 2)	
2	0603-083	4	Bearing		
3	3604-606	1	Axle, Lower		
4	1623-566	2	Screw, Cap		
5	3604-605	3	Axle, Idler		
6	1604-715	2	Sleeve, Spring		
7	0704-894	1	Spring, Suspension - Right - Painted Black		
7	0704-895	1	Spring, Suspension - Left - Painted Black		
8	1604-204	1	Block, Spring Adjuster - Right - Black		
8	1604-205	1	Block, Spring Adjuster - Left - Black		
9	0623-138	2	Ring, Retaining		
10	8047-366	2	Nut, Lock		
11	1604-708	2	Strap, Limiter		
12	8002-042	2	Screw, Cap		
13	8050-222	2	Washer		


Item	Part No.	Qty	Name	Context	Footnote
14	1604-564	1	Spacer		
15	0300-180	2	Wheel, Idler		
16	1604-565	2	Spacer		
17	8020-131	6	Screw, Cap		

RECOIL STARTER AND AIR SHROUD ASSEMBLY [92359]

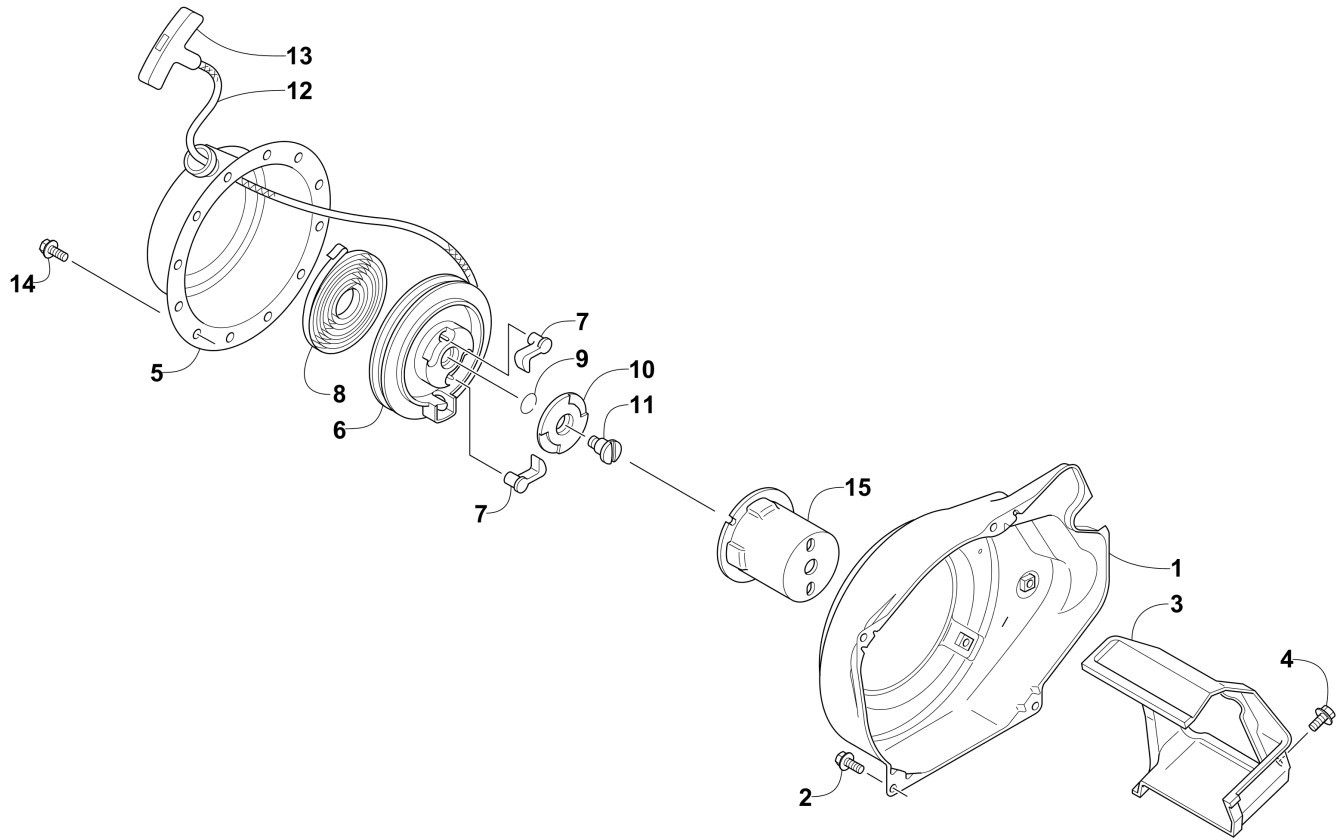


Item	Part No.	Qty	Name	Context	Footnote
1	3020-051	1	Cowling, Ventilation		
2	3020-120	4	Screw, Cap		
3	3020-052	1	Shroud, Air		
4	3020-121	1	Screw, Cap		
5	3020-065	1	Housing, Recoil		
6	3020-067	1	Reel		
7	3020-071	2	Arm, Ratchet		
8	3020-066	1	Spring, Spiral		
9	3020-068	1	Spring, Friction		
10	3020-069	1	Plate, Drive		
11	3020-074	1	Screw, Shoulder		
12	3006-889	1	Rope, Starter - CTL (6 mm Dia.) (203 cm)		
13	3020-073	1	Grip, Rope		
14	3020-119	3	Screw, Cap		
15	3020-070	1	Pulley, Starter		

SKI AND SPINDLE ASSEMBLY [98662]

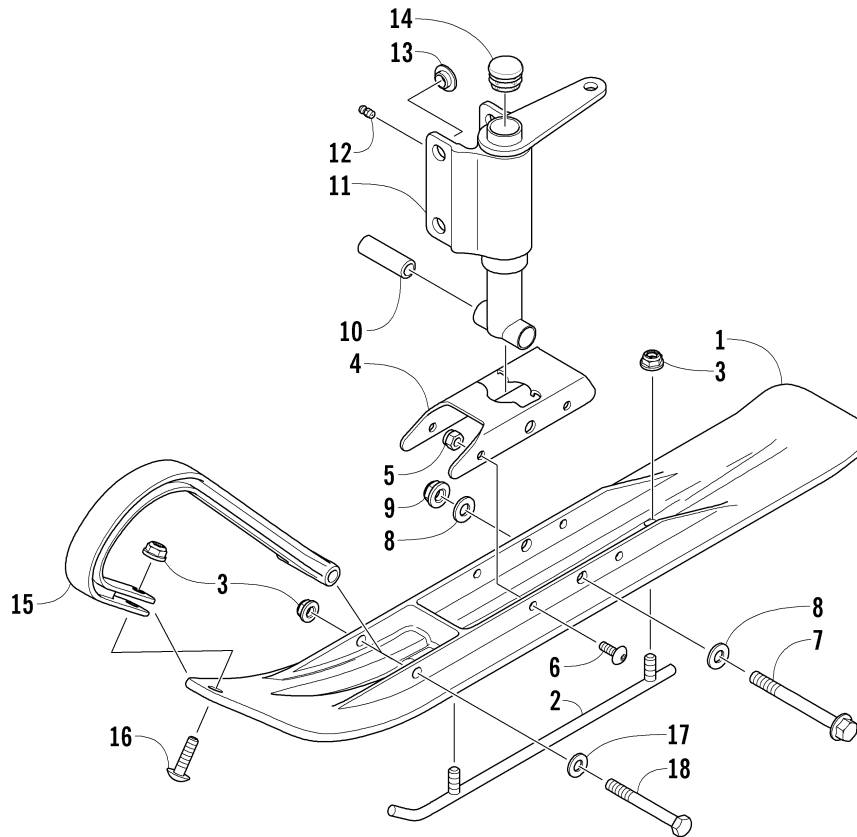

Item	Part No.	Qty	Name	Context	Footnote
1	1603-593	2	Ski, Plastic Black		
2	0703-698	2	Wearbar		
3	8047-426	8	Nut, Hex - Flange - NY Lock		
4	1703-184	2	Saddle, Ski - Painted Black		
5	8047-366	8	Nut, Lock		
6	8017-580	8	Screw, Machine		
7	8020-232	2	Screw, Cap		
8	8050-277	4	Washer, Flat		
9	8047-486	2	Nut, Lock		
10	1603-365	2	Axle		
11	2703-977	2	Spindle Black	(inc. 12-13)	
12	1623-845	2	Fitting, Grease		
13	0603-647	8	Insert, Spindle		
14	0623-831	2	Cap, Spindle		
15	1603-594	2	Handle, Ski Black		
16	8017-672	2	Screw, Machine		
17	8050-247	2	Washer		
18	8002-141	2	Screw, Cap		


SLIDE RAIL, IDLER WHEELS, AND TRACK ASSEMBLY [98667]

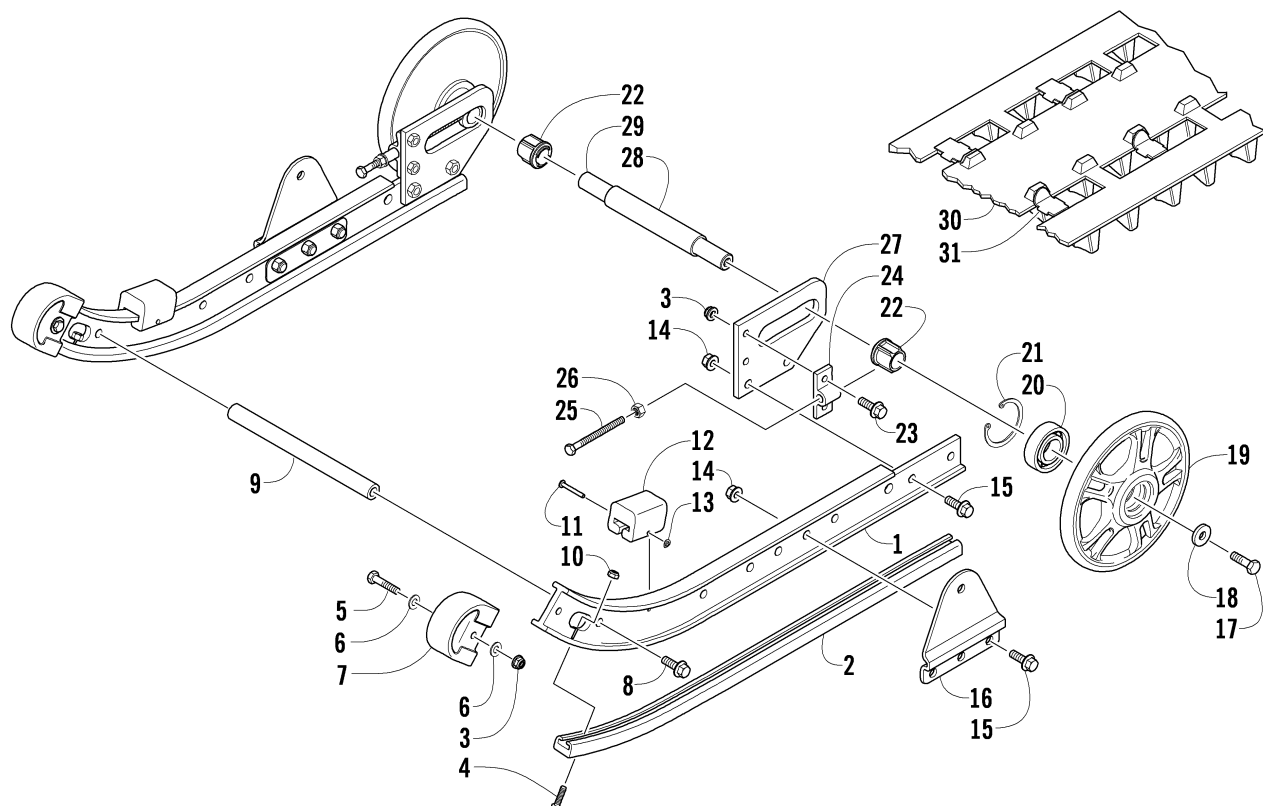

Item	Part No.	Qty	Name	Context	Footnote
Not Shown	2704-442	1	Complete Skid Frame Assembly		
1	1604-705	2	Rail, Formed		
2	1604-568	2	Wearstrip Black		
3	8047-366	6	Nut, Lock		
4	0123-859	2	Screw, Machine		
5	8002-043	2	Screw, Cap		
6	8050-217	4	Washer		
7	0604-231	2	Nose Piece, Slide Rail - Black		
8	1623-566	2	Screw, Cap		
9	1604-566	1	Axle, Cross-Brace		
10	8041-366	2	Nut, Lock		
11	0123-767	2	Rivet, Solid		
12	0104-631	2	Pad, Shock		
13	0423-090	2	Nut, Push		
14	8047-426	10	Nut, Hex - Flange - NY Lock		
15	8020-131	10	Screw, Cap		
16	0704-896	2	Bracket, Support - Front Arm - Painted Black		
17	1623-427	2	Screw, Cap		
18	0623-664	2	Washer		
19	3604-299	2	Wheel, Idler - White	(inc. 20-21)	

Item	Part No.	Qty	Name	Context	Footnote
20	3604-033	2	Bearing		
21	0623-946	2	Ring, Retaining		
22	3604-503	2	Bushing, Adjuster		
23	8020-040	4	Screw, Cap		
24	0604-206	2	Adjuster, Track		
25	0124-310	2	Screw, Cap		
26	8042-486	2	Nut		
27	3604-543	2	Housing, Axle - Rear		
28	3604-541	1	Spacer		
29	3604-542	1	Axle, Rear		
30	2602-476	1	Track - 2.125 x 10.00 x 0.688	(inc. 31)	
31	1602-079	32	Clip, Guide		

STEERING POST AND TIE ROD ASSEMBLY [98665]

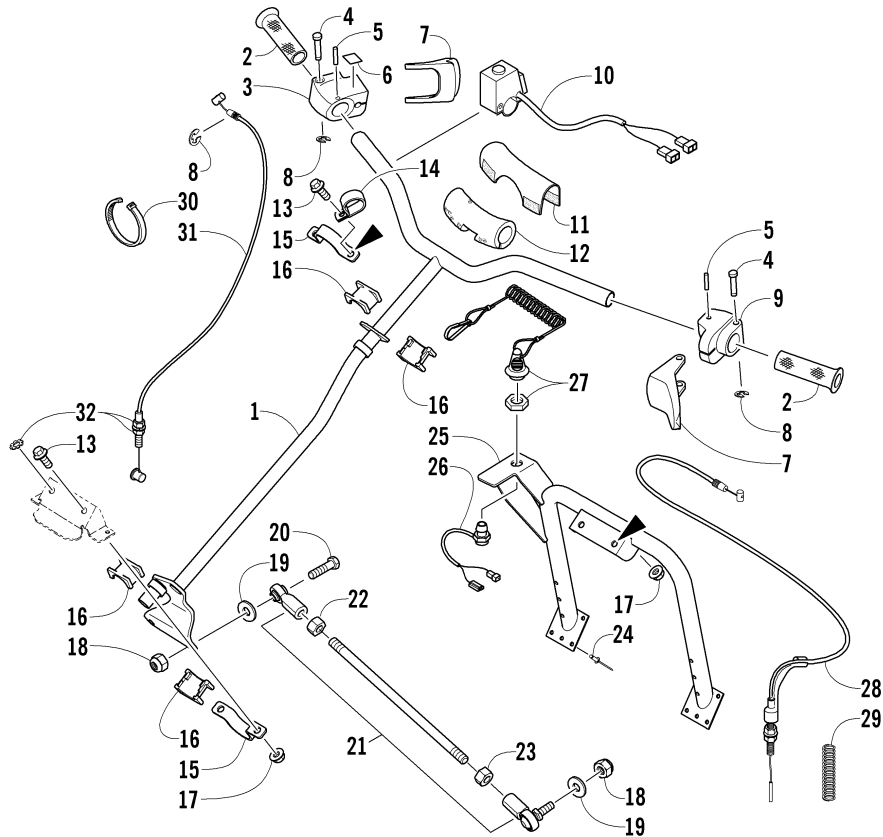

Item	Part No.	Qty	Name	Context	Footnote
1	1705-313	1	Post, Steering Black		
2	1606-765	2	Grip, Handle		
3	0302-165	1	Control, Throttle		
4	1623-828	2	Pin - 1/4D x 1 5/8		
5	8070-318	2	Pin, Spring		
6	0611-022	1	Decal, Engine Stop Switch		
7	0109-609	2	Lever, Control		
8	0123-231	3	Ring, Retaining		
9	0302-147	1	Housing, Brake		
10	0609-007	1	Switch, Stop - Engine		
11	1705-444	1	Cover, Handlebar Pad		
12	1605-107	1	Pad, Handlebar		
13	8020-040	4	Screw, Cap		
14	3008-040	1	Clamp, Routing		
15	0705-896	2	Bracket, Steering Support - Painted Black		
16	0605-444	4	Bearing, Steering Post		
17	8047-366	4	Nut, Lock		
18	1623-423	4	Nut, Lock		
19	8050-247	4	Washer		
20	8004-135	2	Screw, Cap		

Item	Part No.	Qty	Name	Context	Footnote
21	1703-853	2	Tie Rod - Assembly	(inc. 22-23)	
22	0623-260	2	Nut, Hex - Left-Hand Thread		
23	0123-144	2	Nut, Hex - Right-Hand Thread		
24	8060-484	10	Rivet		
25	1707-444	1	Support, Steering Post Black		
26	0630-138	1	Switch, Tether	(inc. 27)	
27	0630-139	1	Cord, Tether Switch		
28	0687-229	1	Cable, Brake		
29	1602-100	1	Spring, Return - Brake		
30	0123-788	AR	Tie, Cable - 8 in.		
31	0687-231	1	Cable, Throttle	(inc. two No. 32)	
32	8053-212	3	Washer, Lock		



The illustrations used in this Parts Manual are for reference to replacement part numbers only and are not to be used for assembly. For assembly procedures, use an Arctic Cat Service Manual. For a complete list of related items, refer to the current accessory catalog. Once printed, Arctic Cat does not guarantee the accuracy of the information contained in this manual. Our parts lists and illustrations are constantly revised to reflect part number changes, discrepancies, and enhancements.

®™ Trademarks of Arctic Cat Inc., Thief River Falls, MN 56701